

English and Norman French Woodwork Details

Registered Set Number No 1272

Property of MORGAN COMPANY, OSHKOSH, WISCONSIN

NOTICE TO ARCHITECTS.

These details are the property of the MORGAN COMPANY, Oshkosh, Wisconsin, and are loaned to you for your exclusive use. You are requested to keep these details in your own possession and to return them to us at our expense if they are not of use to you.



Consult an Architect!

FOR ARCHITECTS'
USE ONLY - - - - -

These details are furnished to you so you may more conveniently specify MORGAN Woodwork and get it.

MORGAN

English and Norman French

Woodwork Details by Morgan


- - for Use in the Drafting Room - -

THESE details were prepared by prominent architects — members of the American Institute of Architects—in cooperation with other members of the Institute. All designs detailed were inspired by authentic examples of old originals. They supplement the complete illustrated catalog of “Correct Woodwork for English and Norman French Homes.”

All designs are made in the shops of the Morgan Woodwork Organization by craftsmen of long experience in producing woodwork of the finest quality and workmanship. Each item is carried in stock at conveniently located warehouses and furnished by authorized Local Distributors.

All woodwork of our manufacture is marked with the Morgan stamp of dependability. *This is your assurance of the correctness of the detail and protects you against the possibility of substitution.*

For prices, kinds of wood, and other information see the current Morgan Price Supplement.

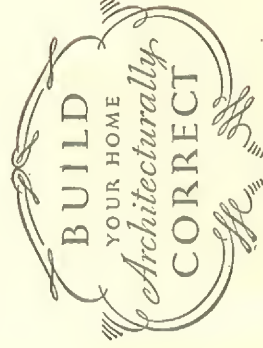

Consult an Architect!

MORGAN COMPANY :: Oshkosh, Wisconsin
EIGHTY-FIRST YEAR



Colonial Woodwork Details by Morgan


for Use in the Drafting Room

THESE details were prepared by prominent architects — members of the American Institute of Architects — in cooperation with other Practicing Architects. All designs detailed were inspired by authentic examples of old Colonial originals.

All designs are made in the shops of the Morgan Company, Oshkosh, Wisconsin, by craftsmen of long experience in producing woodwork of the finest quality and workmanship. Each item is carried in stock at conveniently located warehouses and furnished by authorized Local Distributors.

All woodwork of our manufacture is marked with the Morgan stamp of dependability. This is your assurance of the correctness of the detail and protects you against the possibility of substitution.

For prices, kinds of wood, and other information see the current Price Supplement.

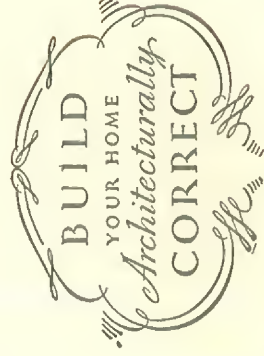

Consult an Architect!

MORGAN COMPANY :: OSHKOSH, WISCONSIN
EIGHTY-FIRST YEAR

INDEX TO COLONIAL WOODWORK

BY

MORGAN

ITEM	DESIGN NUMBERS	SHEET
Blinds	M-500 M-503 M-504	15
Bookcase	M-1550	47
"	M-1551	48
Brackets	M-553	13
Breakfast Nook Set	M-550	30
Breakfast Nook Set	M-553	30A
China Case	M-1553	40
"	M-1554	40
"	M-1563	41
"	M-1564	42
"	M-1557	43
"	M-1558	44
"	M-1559	44
"	M-1560	45
"	M-1561	46
"	M-1562	46
Doors, Exterior	M-100	1-6-10-12
"	M-101	3
"	M-102	2-5
"	M-103	7
"	M-104	8
"	M-105	9
"	M-106	11
Doors, Interior	M-1050 M-1051 M-1052	25
"	M-1053 M-1054	26
"	M-1055 M-1056	27
"	M-1057 M-1058	29
"	M-1059 M-1060	29
Door, Interior (Sash)	M-1080 M-1081	28
Entrance Frames	M-1	1
"	M-2	3-4
"	M-3	2
"	M-4	5
"	M-14	6
"	M-6	7
"	M-7	8
"	M-8	9
"	M-9	10
"	M-10	11
"	M-11	12
"	M-12	12A
"	M-13	12B
"	M-27	12C

ITEM	DESIGN NUMBERS	SHEET
Flower Box	M-552	13
Frames (Circular)	M-256 M-257	13
" (Louvre)	M-258 M-259	13
Interior Trim	No. 1	31
"	No. 2	32
Louvres	M-258 M-259	13
Mantels	M-1450	33
"	M-1451	34
"	M-1452	35
"	M-1453	36
"	M-1454	36
"	M-1455	37
"	M-1456	38
"	M-1457	38
"	M-1458	39
Paneling, Wall	M-1300 M-1301 M-1251	17
Sash, Windows	M-350 M-351 M-352	13
"	M-366 M-367 M-368	13
"	M-369 M-370 M-371 M-372	13
Seat	M-551	30
Shutters	M-501 M-502 M-505	15
Sidelight Sash	M-362	5-6
Stairways	M-850	18
"	M-851	19
"	M-852	20
"	M-853	21
"	M-854	22
Stair Parts	M-865 to M-896	23-24
"	M-901 to M-910	23A
Transom	M-361	1
"	M-363	5
"	M-364A	11
Trim Interior	No. 1	31
"	No. 2	32
Wall Paneling	M-1300 M-1301 M-1251	17
Windows	See Sash, Windows	13

INDEX TO

English and Norman French WOODWORK


BY

MORGAN


ITEM	DESIGN NUMBERS	SHEET
Bookcase	M-1632	128
China Case	M-1630	126
“ “	M-1631	125
“ “	M-1633	127
Doors, Exterior	M-141	101
“ “	M-142	102
“ “	M-143	103
“ “	M-144	104
“ “	M-145	105
“ “	M-146	106
Doors, Interior	M-1110 M-1111	115
“ “	M-1113 M-1114 M-1130	116
“ “	M-1112 M-1115	117
“ “	M-1118 M-1119 M-1120 M-1121	118
“ “	M-1116 M-1117 M-1124 M-1125	119
Entrance Frames	M-21	101
“ “	M-22	102
“ “	M-23	103
“ “	M-24	104
“ “	M-25	105
“ “	M-26	106
“ “	M-27	107

ITEM	DESIGN NUMBERS	SHEET
Frames (Window)	M-270	108
Interior Trim	No. 3	113
Mantels	M-1490	120
“	M-1491	121
“	M-1492	122
“	M-1493	123
Paneling, Wall	M-1341 M-1342	124
Refectory Unit	M-580	114
Sash, Windows	M-391 M-400	108
Shutters	M-521 M-522	132
Stairways	M-920	109
“	M-921	111
“	M-922	110
Stair Parts	M-930 M-931 M-935	112
“ “	M-936 M-940 to M-947	112
“ “	M-951 to M-954, M-958	112
Trim Interior	No. 3	113
Wall Paneling	M-1341 M-1342	124
Windows	See Sash, Windows	108




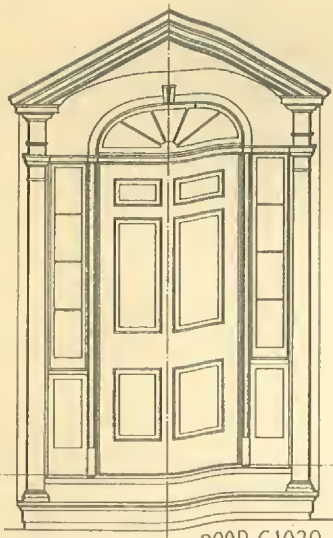


ENTRANCE - C.1700 - DOOR - C.1020.

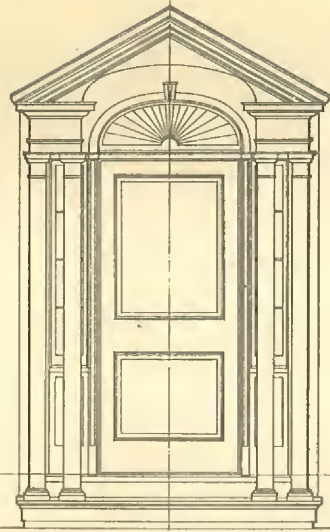


ENTRANCE - C.1704 - DOOR - C.1023.

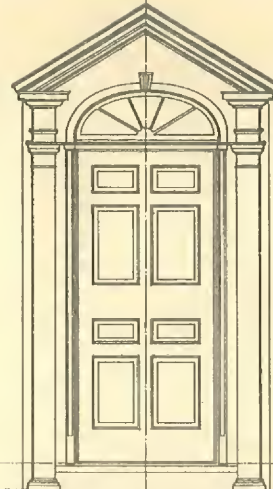


ENTRANCE - C.1712 - DOOR - C.1024.

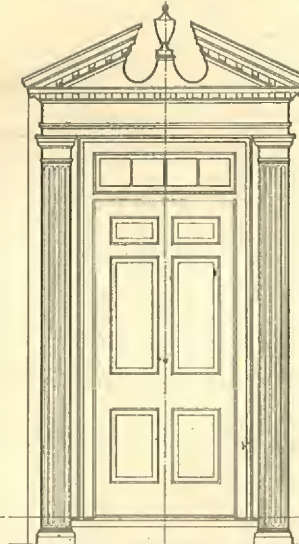


ENTRANCE - C.1716 - DOOR - C.1020.

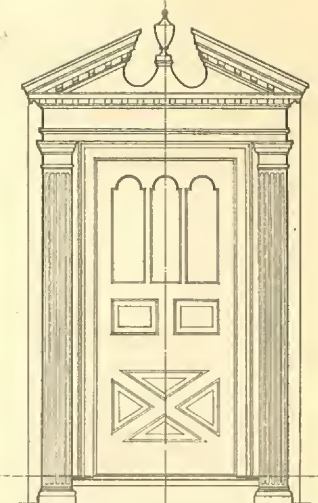


ENTRANCE - C.1718 - DOOR - C.1028.

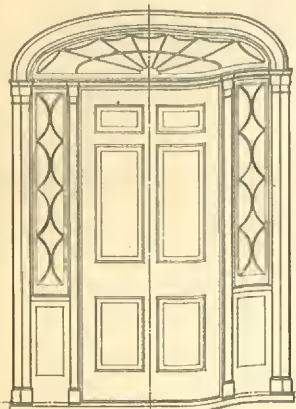SCALE - $\frac{1}{4}$ " = 1'-0"


ENTRANCE - C.1690 - DOOR - C.1020.

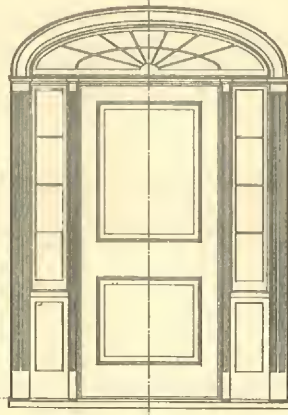


ENTRANCE - C.1720 - DOOR - C.1023.

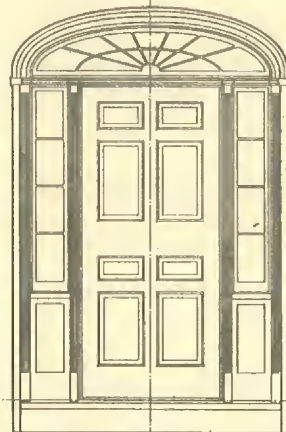


ENTRANCE - C.1728 - DOOR - C.1024.

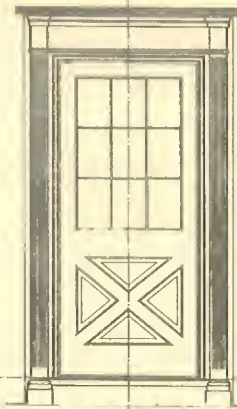

ENTRANCE - C.1714 - DOOR - C.1025.

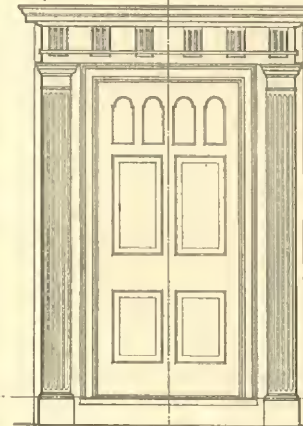

ENTRANCE - C.1702 - DOOR - C.1030.

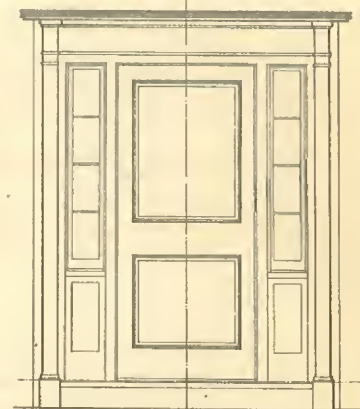

ENTRANCE - C.1736 - DOOR - C.1023.


To Help You Select the Right Entrance

In preparing the sixth edition of the architectural details of Curtis Standardized Architectural Woodwork a new feature has been incorporated with the idea of making the details of the utmost value to the architect and designer.


In addition to the regular three-quarter inch scale details on sheets one to sixteen inclusive of the entrance frames, this sheet illustrates the various Curtis frames drawn to a scale of one-quarter inch to the foot.

The one-quarter inch scale drawings slipped under the sketch will enable the designer to determine which one of the many entrance frames would best suit his problem, thereby saving him the time required in reducing the scale of the various details to determine their adaptability.


The three-quarter inch scale drawings of the various entrances on sheets one to sixteen inclusive will give the detailed information as to scale, size, and construction of the various entrances and frames.

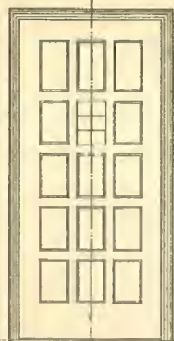


ENTRANCE-C1778-DOOR-C-1060.

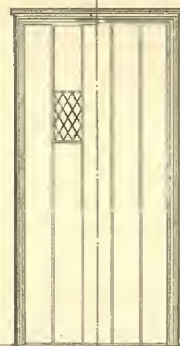


ENTRANCE-C1779-DOOR-C-1081.

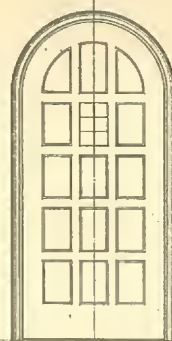


ENTRANCE-C1780-DOOR-C-1065.

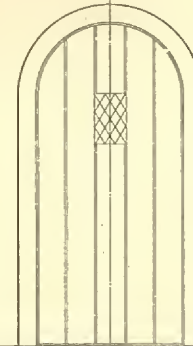


ENTRANCE-C1781-DOOR-C-1085.

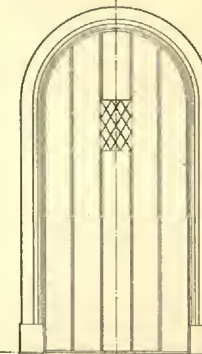

ENTRANCE-C1783-DOOR-C-1085.

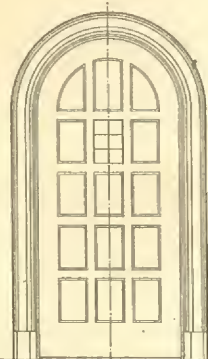


ENTRANCE-C1784-DOOR-C-1065.

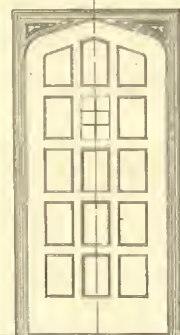


ENTRANCE-C1785-DOOR-C-1070



ENTRANCE-C1786-DOOR-C-1086

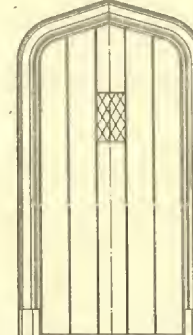

ENTRANCE-C1789-DOOR-C-1089

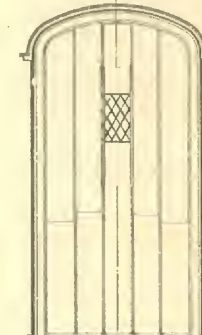

ENTRANCE-C1790-DOOR-C-1090.

SCALE • 1/4" = 1'-0.


To Help You Select the Right Entrance


In preparing the sixth edition of the architectural details of Curtis Standardized Architectural Woodwork a new feature has been incorporated with the idea of making the details of the utmost value to the architect and designer.

In addition to the regular three-quarter inch scale details on sheets one to sixteen inclusive of the entrance frames, this sheet illustrates the various Curtis frames drawn to a scale of one-quarter inch to the foot.


The one-quarter inch scale drawings slipped under the sketch will enable the designer to determine which one of the many entrance frames would best suit his problem, thereby saving him the time required in reducing the scale of the various details to determine their adaptability.

The three-quarter inch scale drawings of the various entrances on sheets one to sixteen inclusive will give the detailed information as to scale, size, and construction of the various entrances and frames.

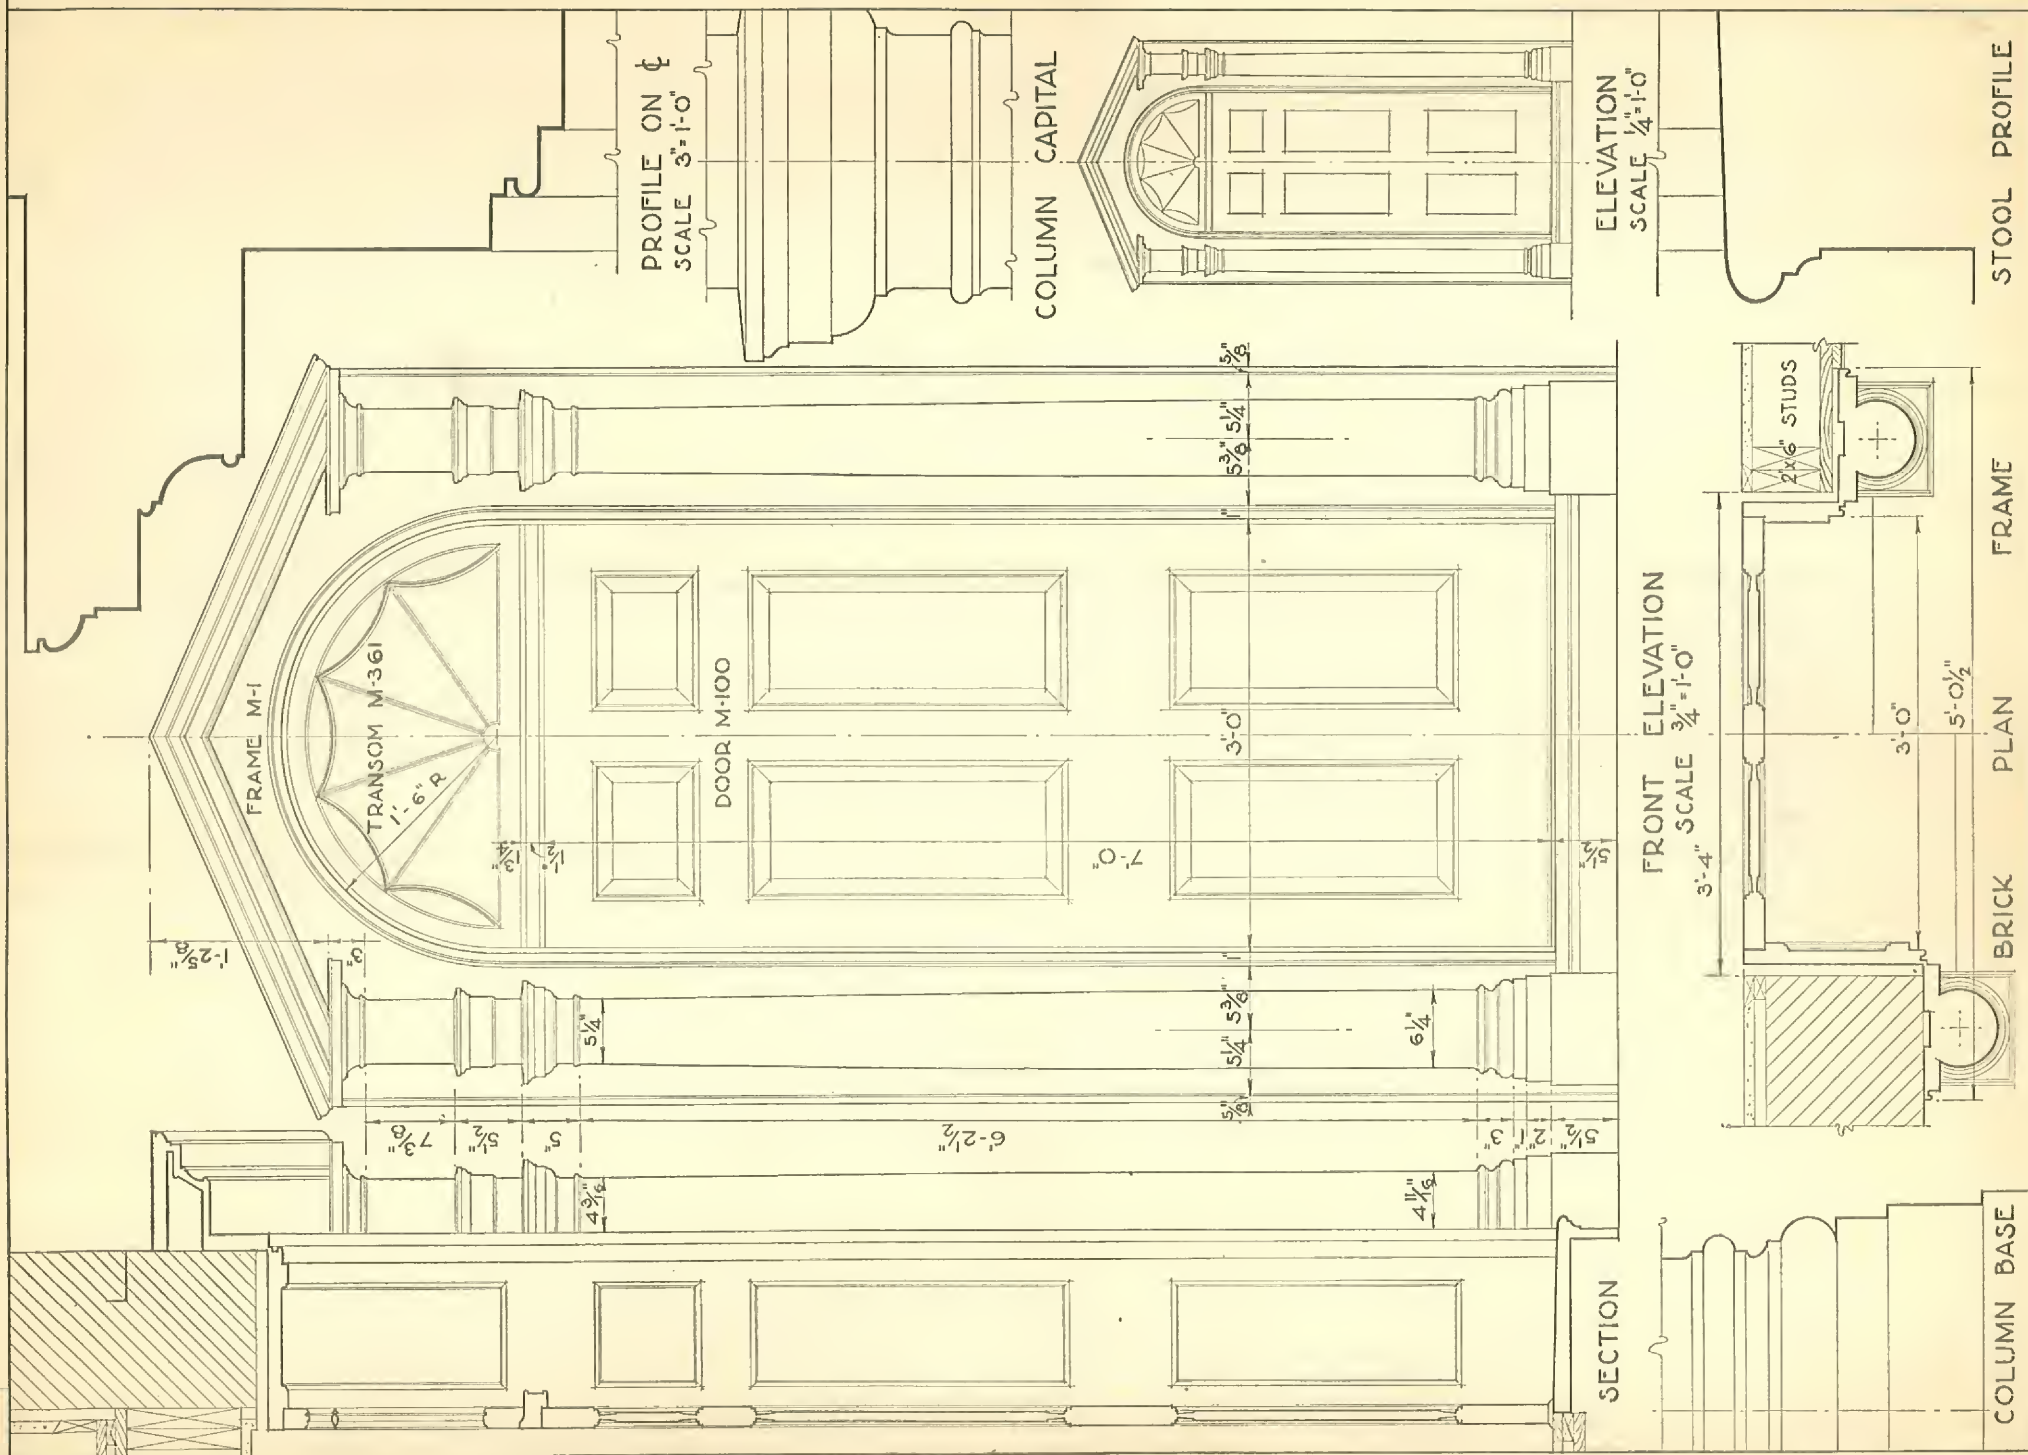

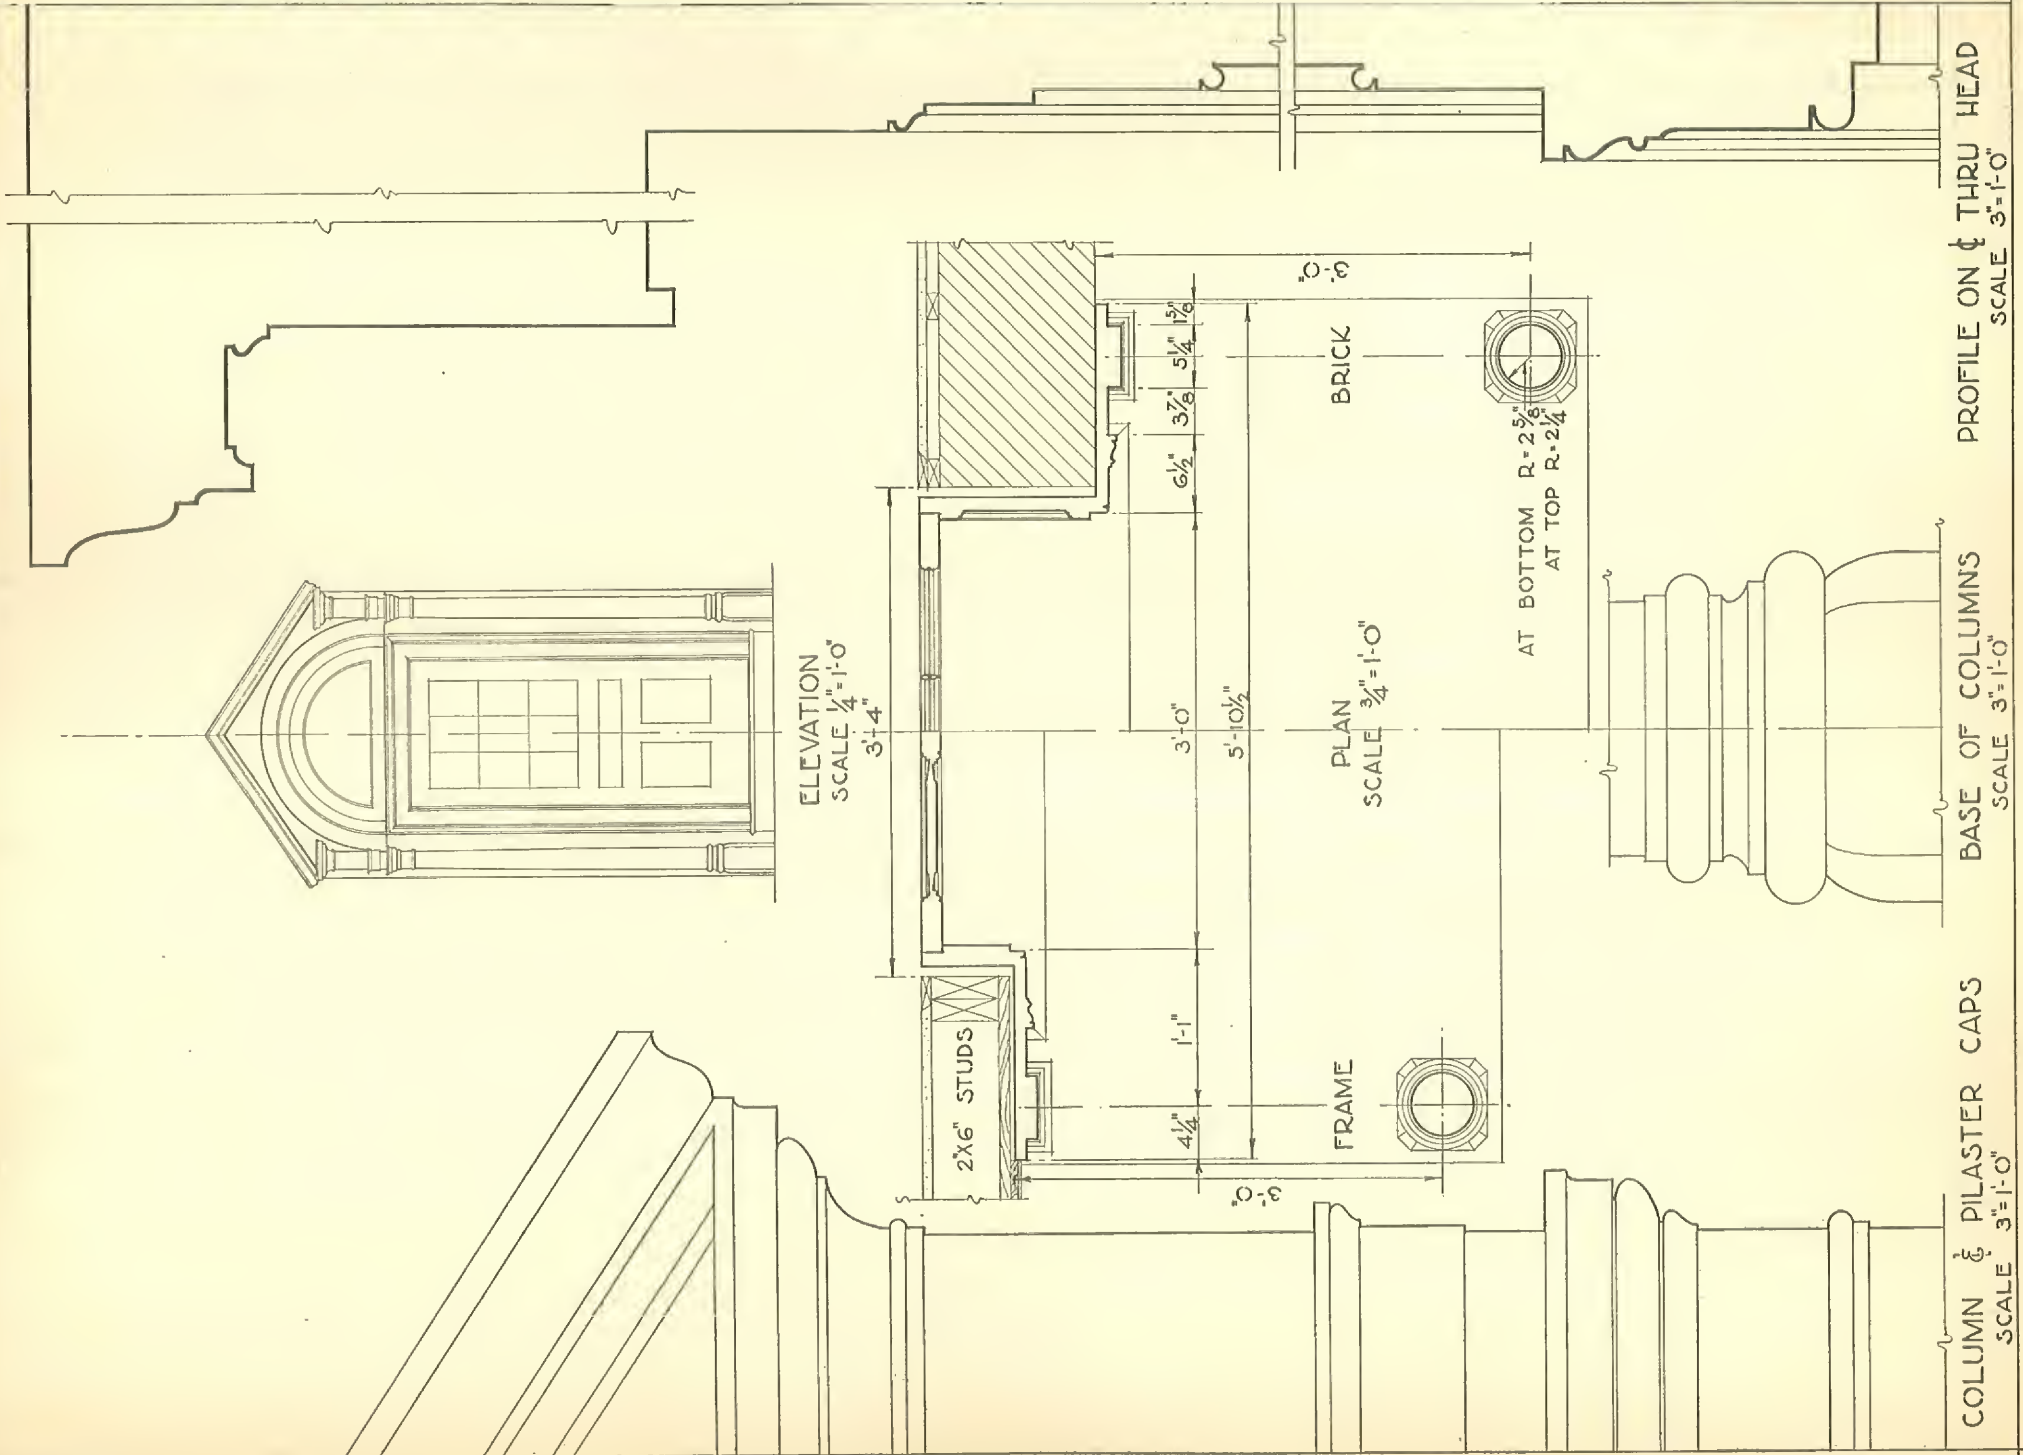


PLANS OF
PILASTERS
FULL SIZE

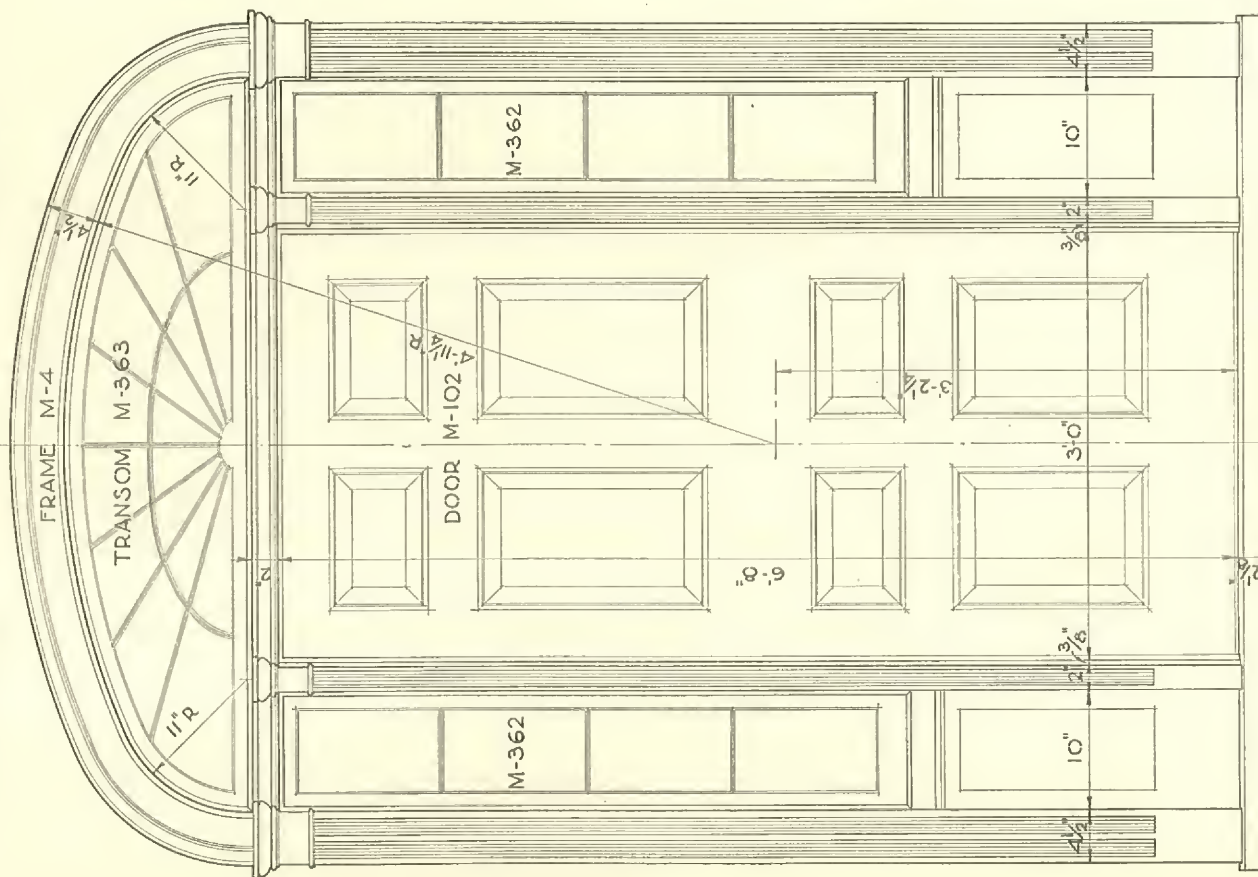


FRONT ELEVATION
SCALE $\frac{3}{4}$ "=1'-0"


PROFILE ON ϕ
SCALE 3/4"=1'-0"

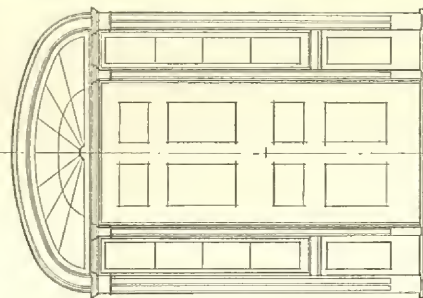

ELEVATION
SCALE $\frac{1}{4}$ "=1'-0"

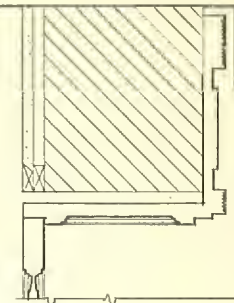

BRICK

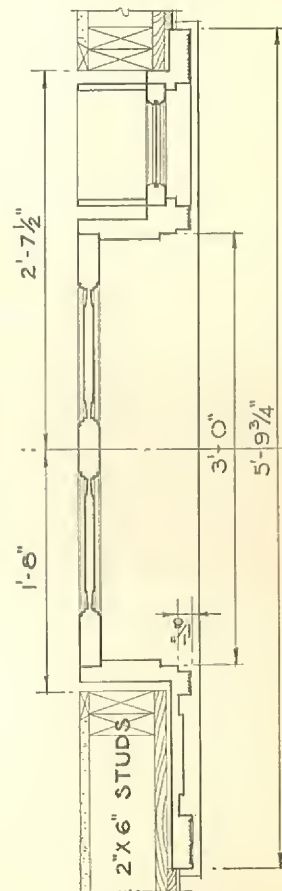


SIDELIGHT

PLAN

FRAME

SIDELIGHT
SILL PROFILE

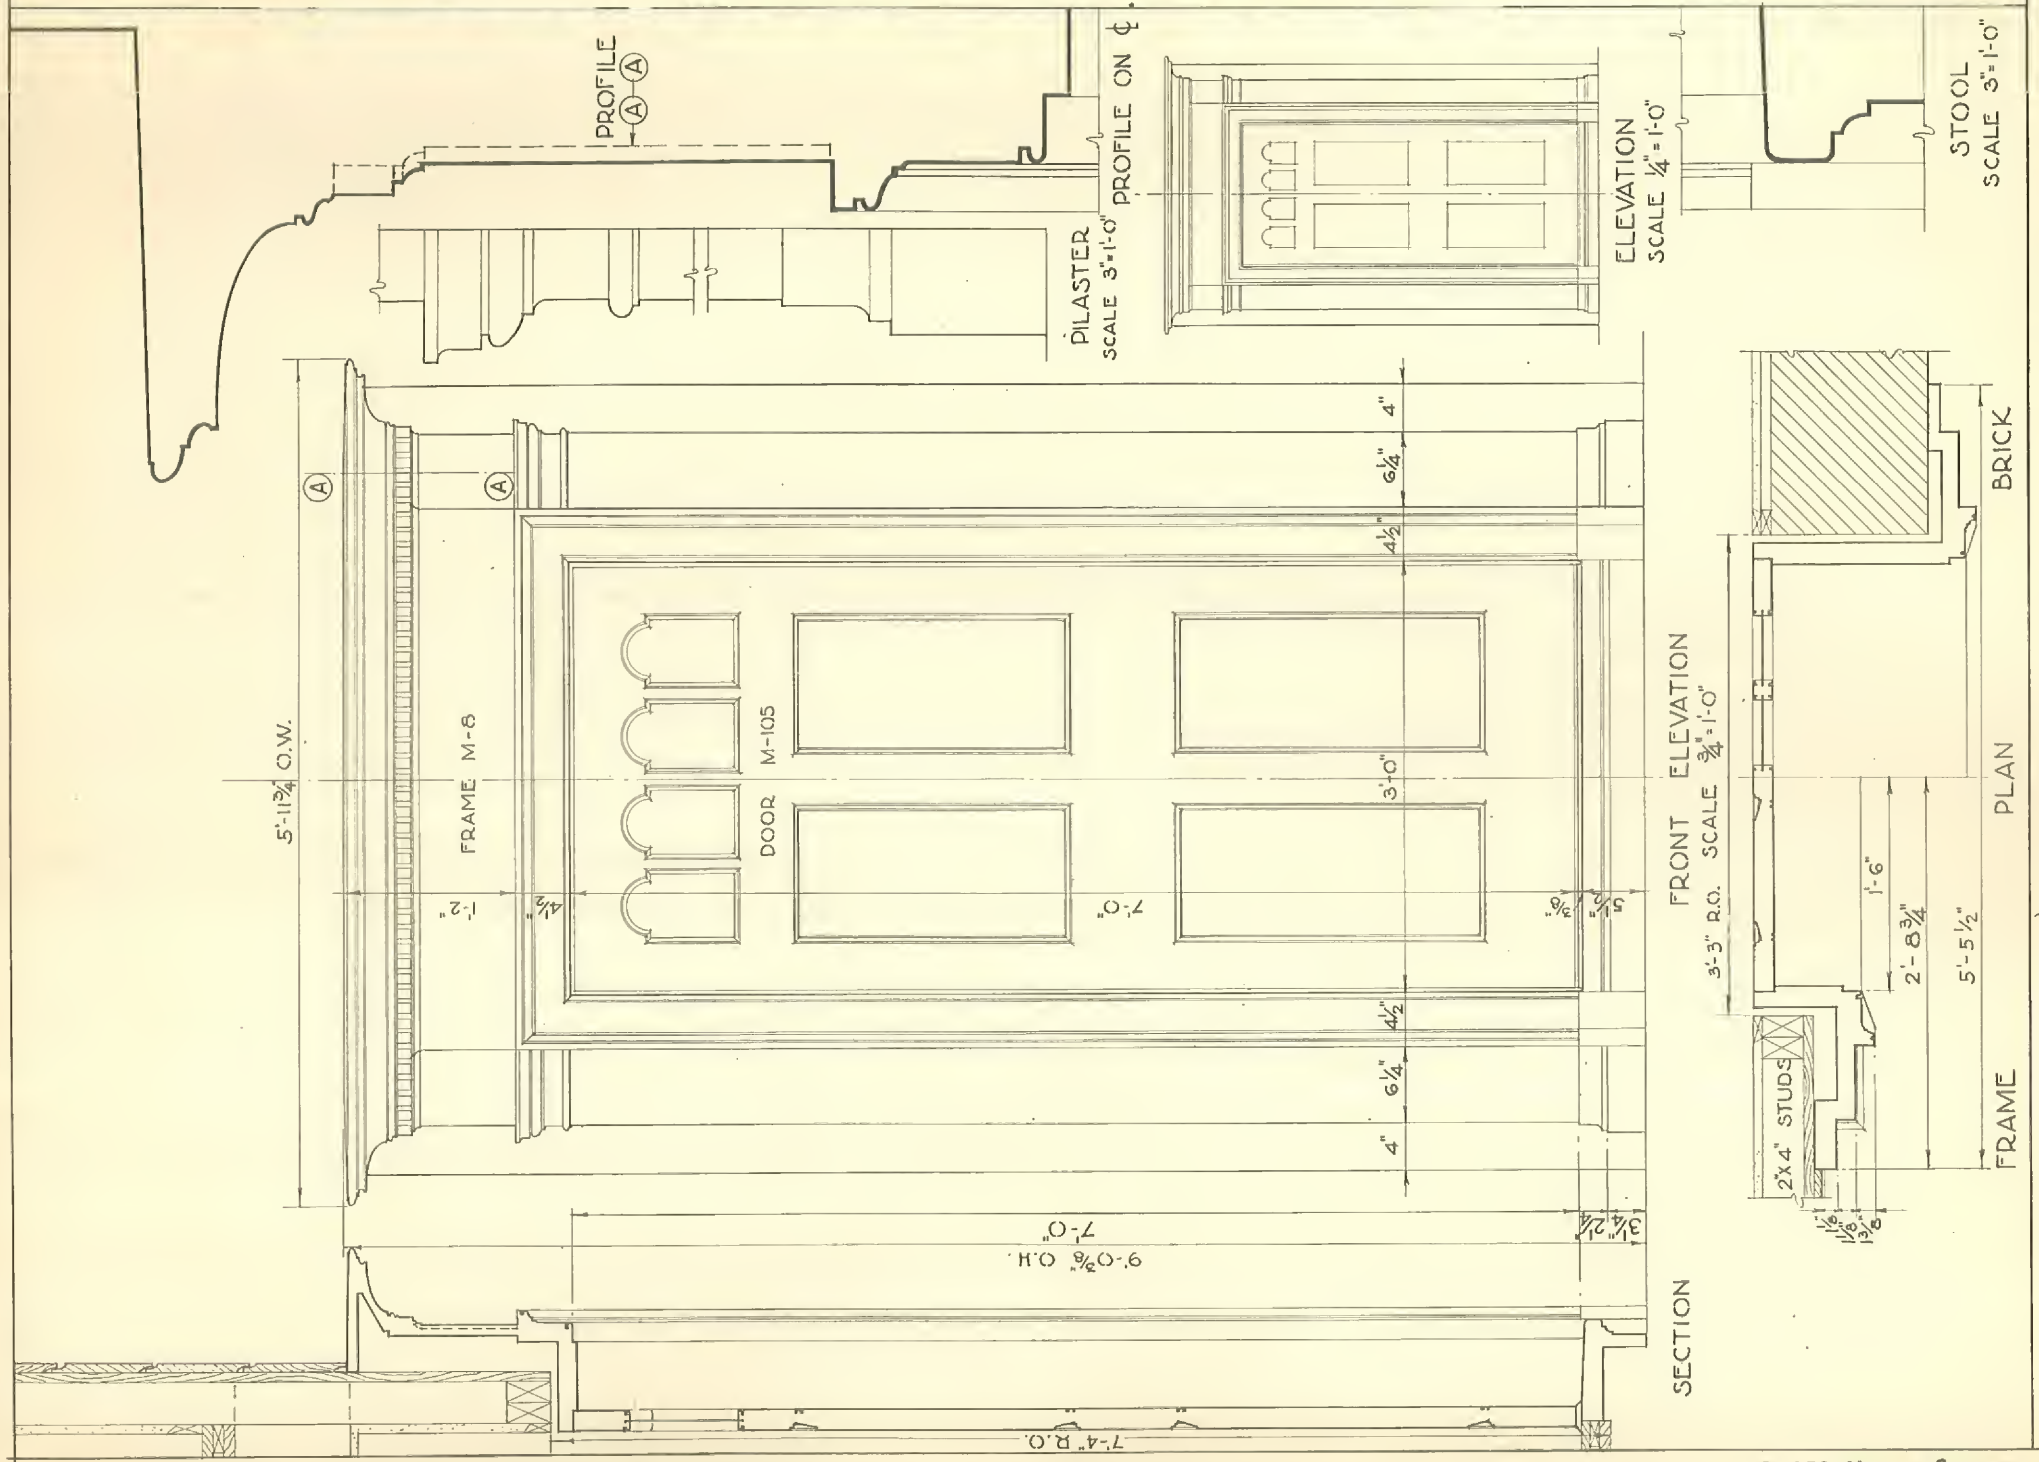

FULL SIZE PROFILE
THRU HEAD

4'-9 $\frac{7}{8}$ " O.W.

FRAME M-9

DOOR M-100

8'-4 $\frac{1}{2}$ " O.H.

7'-0" R.O.

6'-8"

2' 4" 2 $\frac{1}{2}$ "

2 $\frac{1}{2}$ ' 4" 2"

3'-0"

ELEVATION
SCALE $\frac{1}{4}$ " = 1'-0"

SECTION

FRONT ELEVATION

3'-3" R.O. SCALE $\frac{3}{4}$ " = 1'-0"

2'x4"
OR STUDS
2'x6"

8 $\frac{1}{2}$ "


3'-0"

FRAME

PLAN

BRICK


FULL SIZE PROFILE
THRU PILASTER CAP

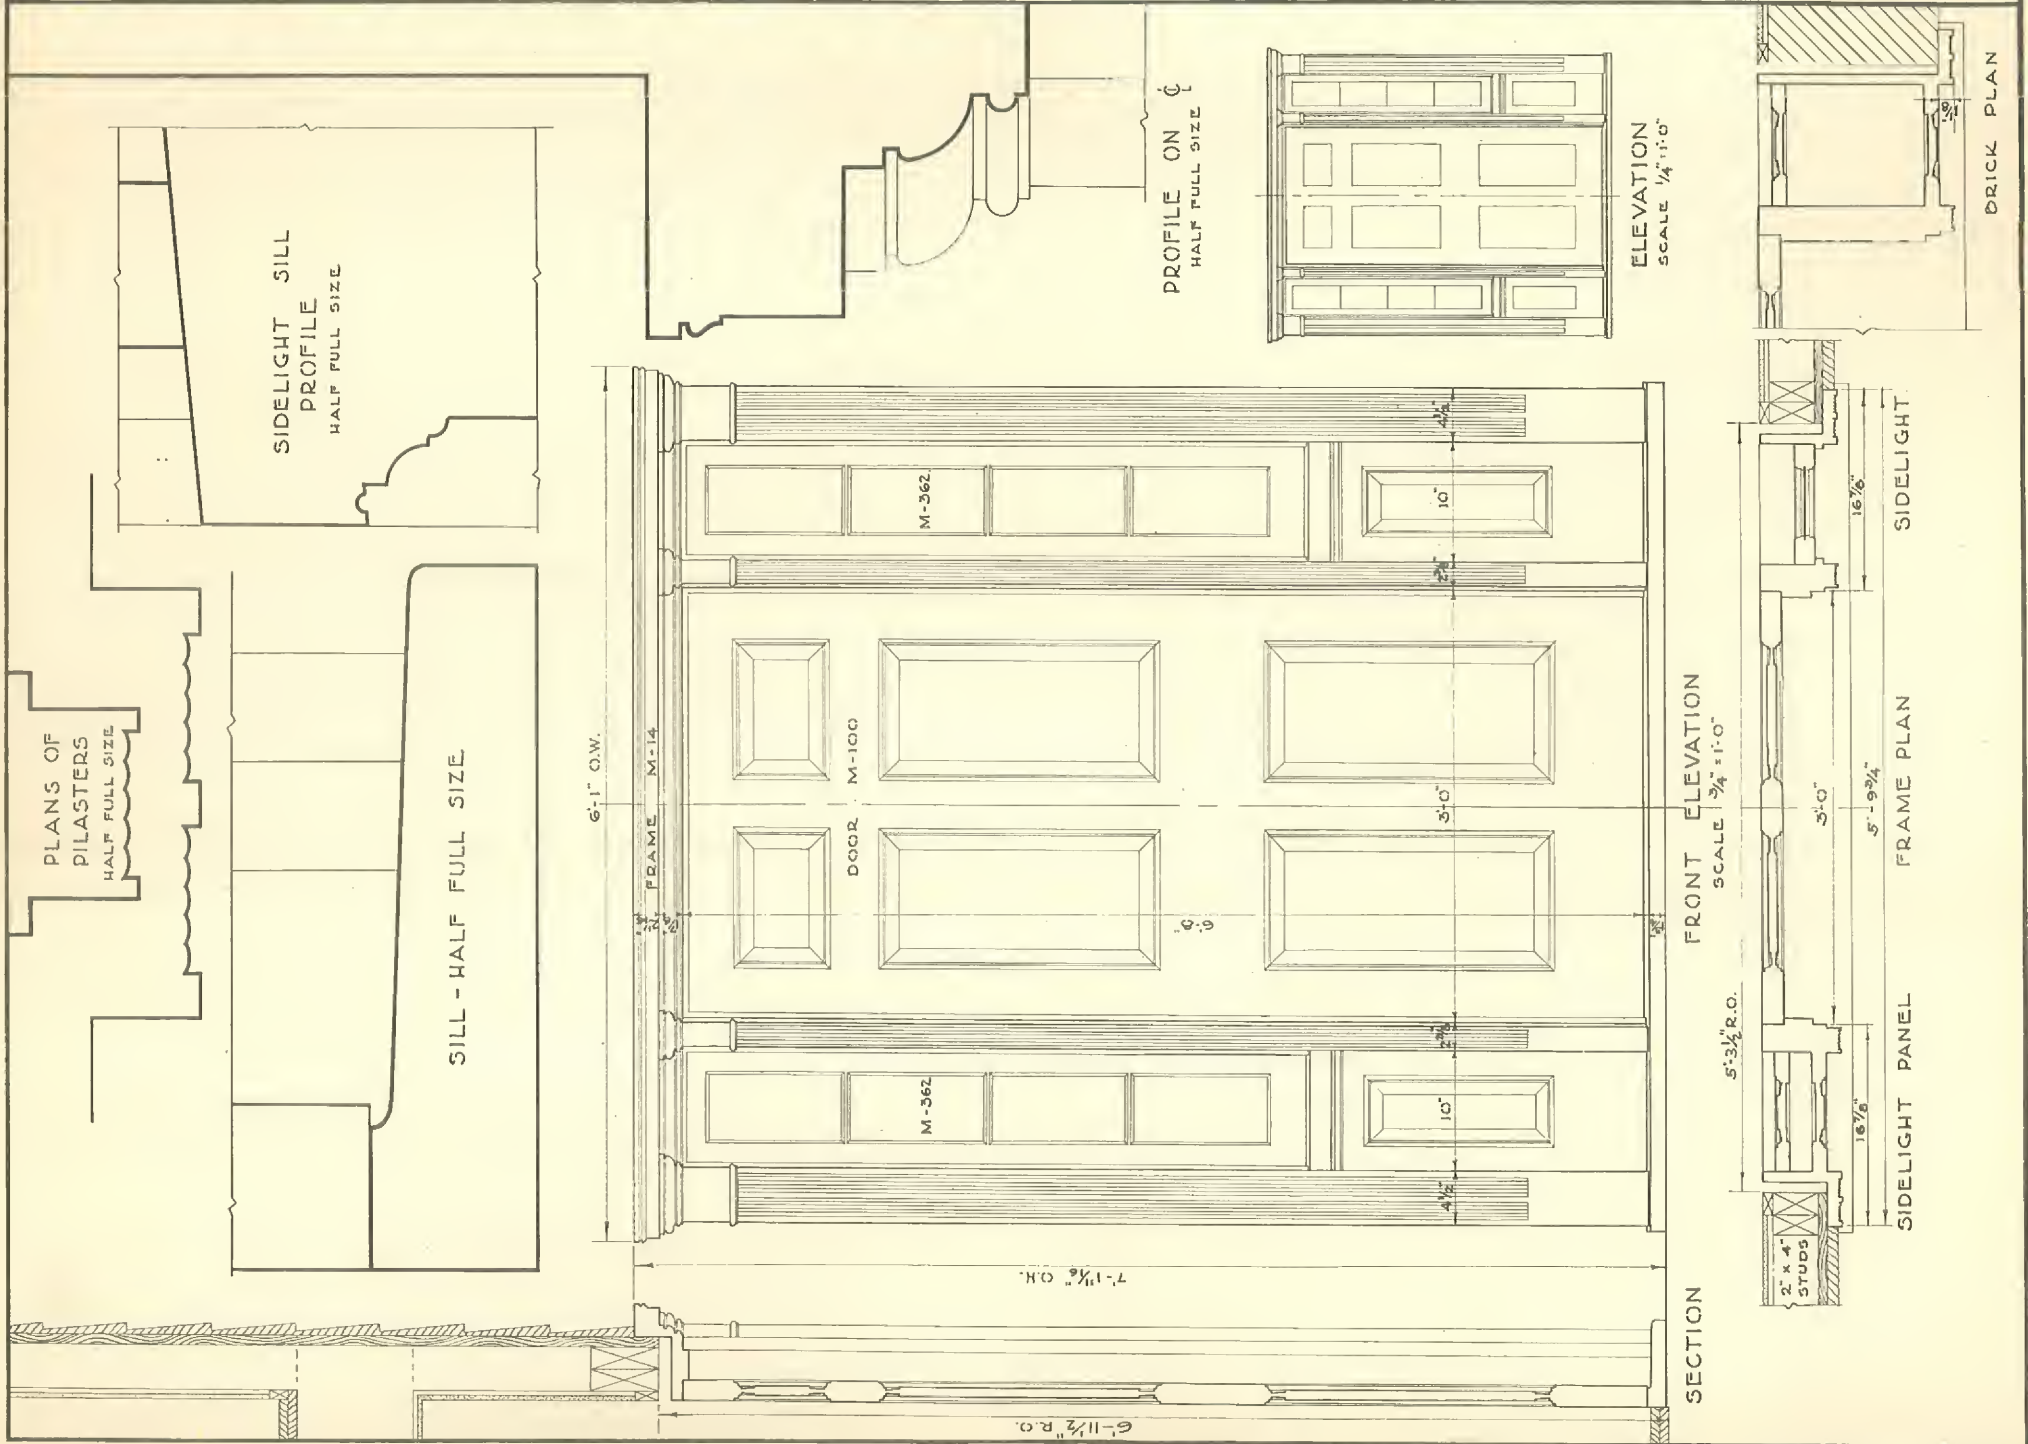

PLANS OF
PILASTERS
HALF FULL SIZE

NOTE: DOOR & SIDELIGHT
SILL SAME AS FRAME M-14.

6'11" O.W.

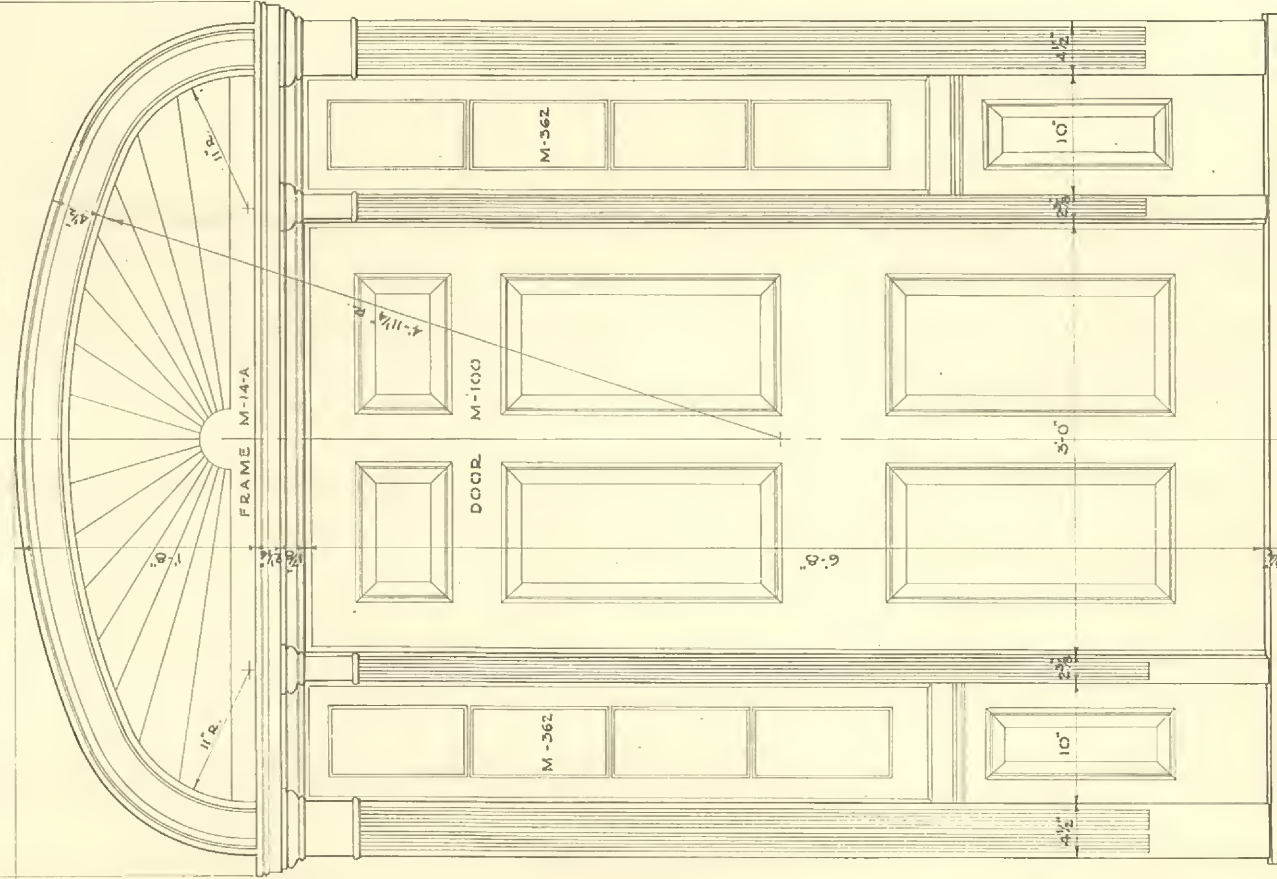

SECTION

FRONT ELEVATION
SCALE 3/4" = 1'-0"

5'3 1/2' R.O.

SCALE 3/4" = 1'-0"

SCALE 1/4" = 1'-0"

2" x 4" STUDS


5'-9 3/4"


SIDELIGHT PANEL

FRAME PLAN

SIDELIGHT

BRICK PLAN

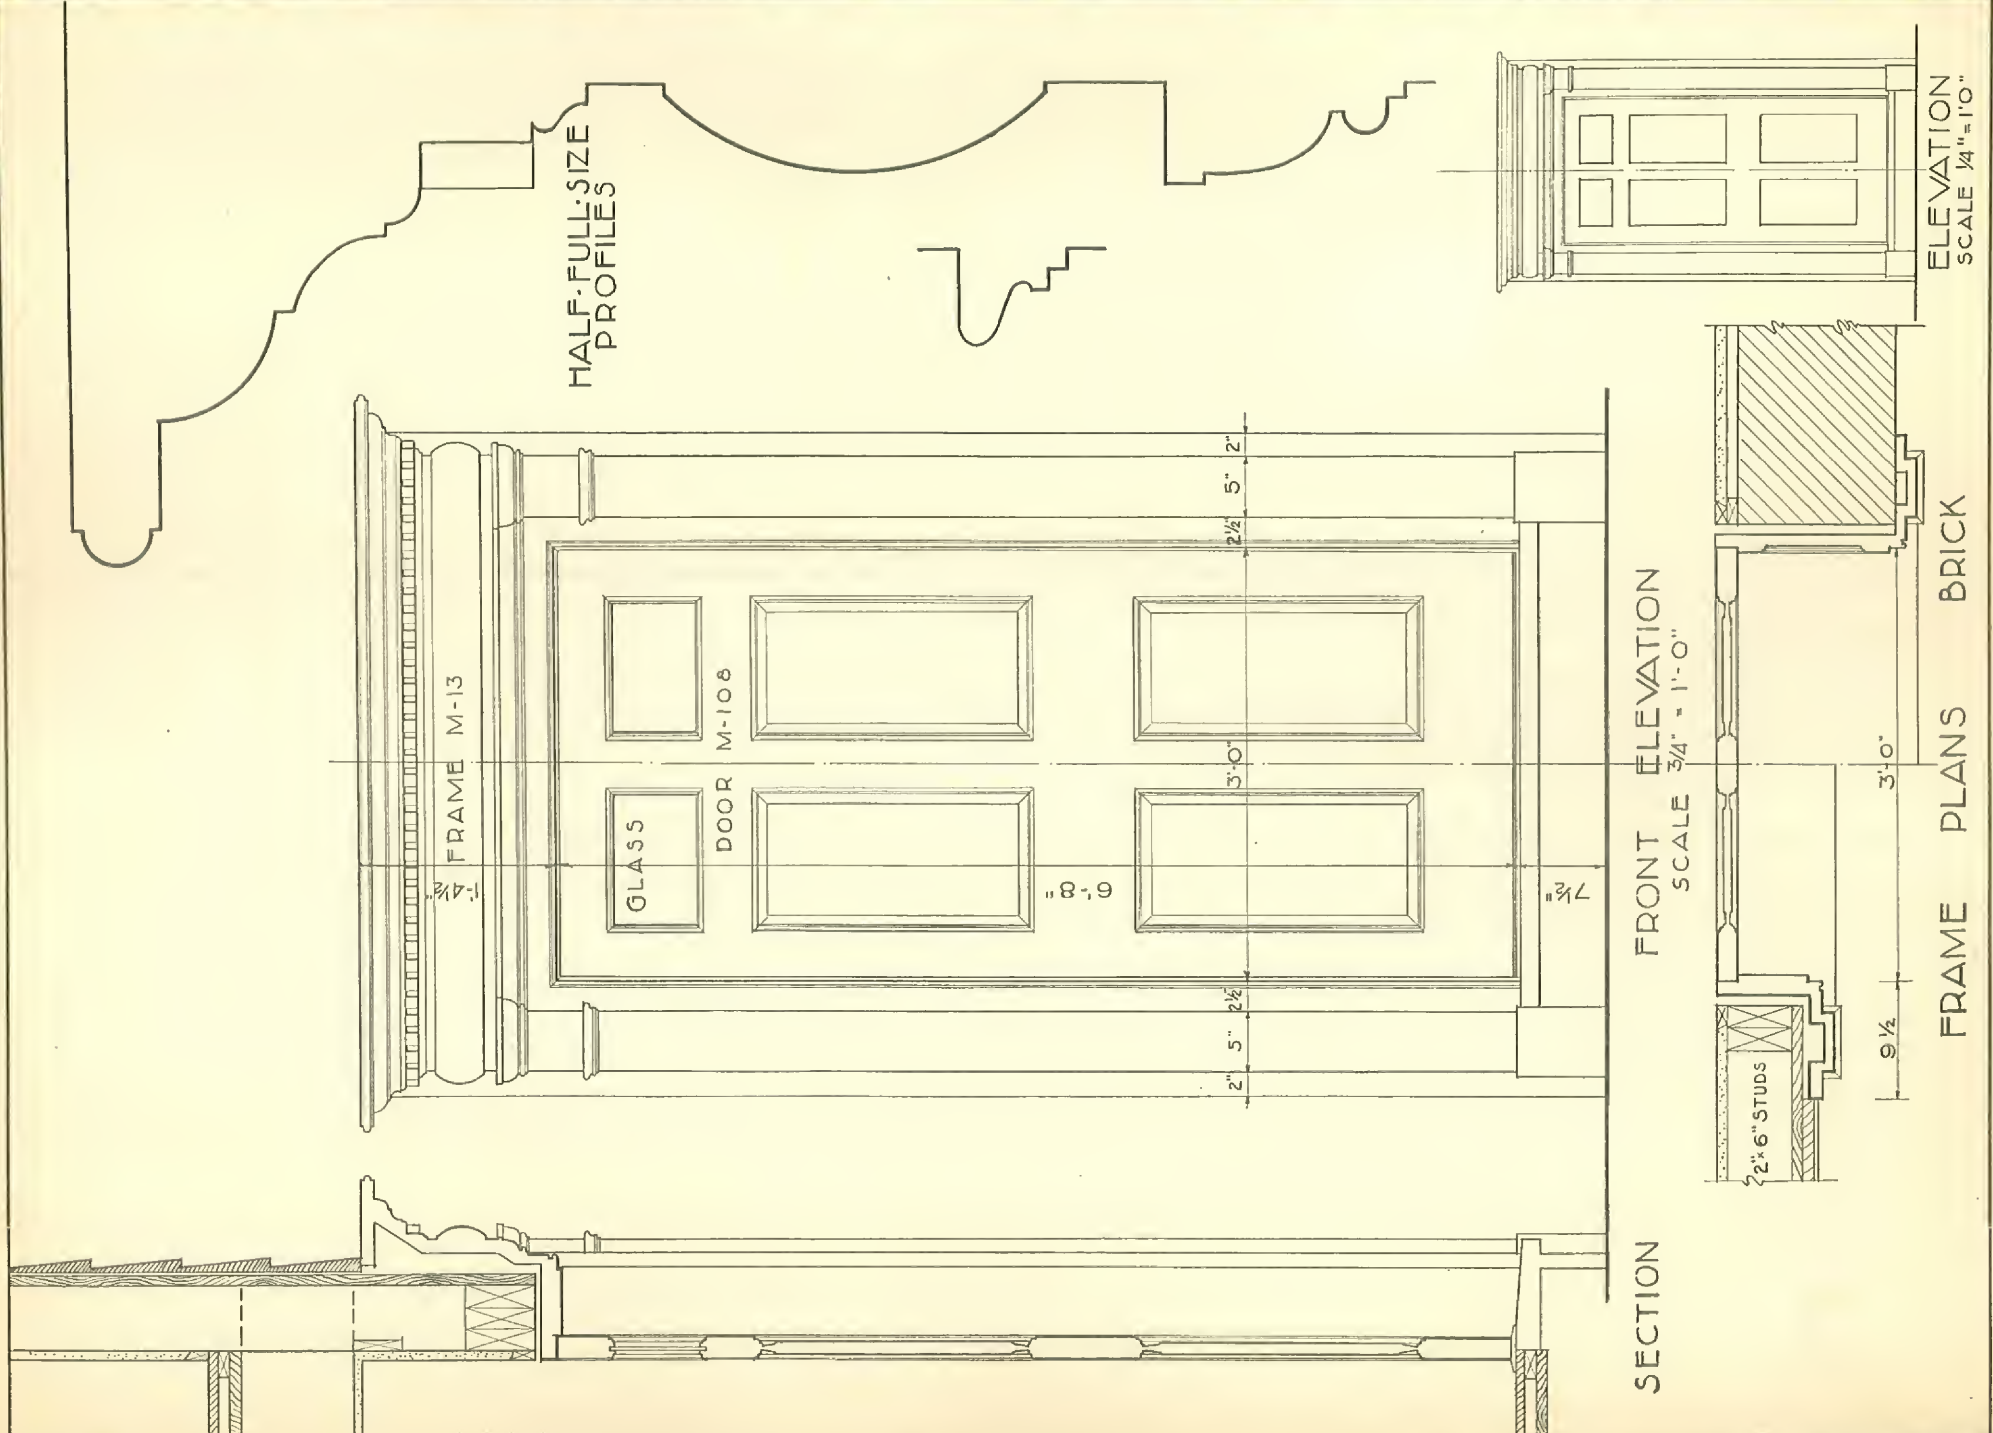

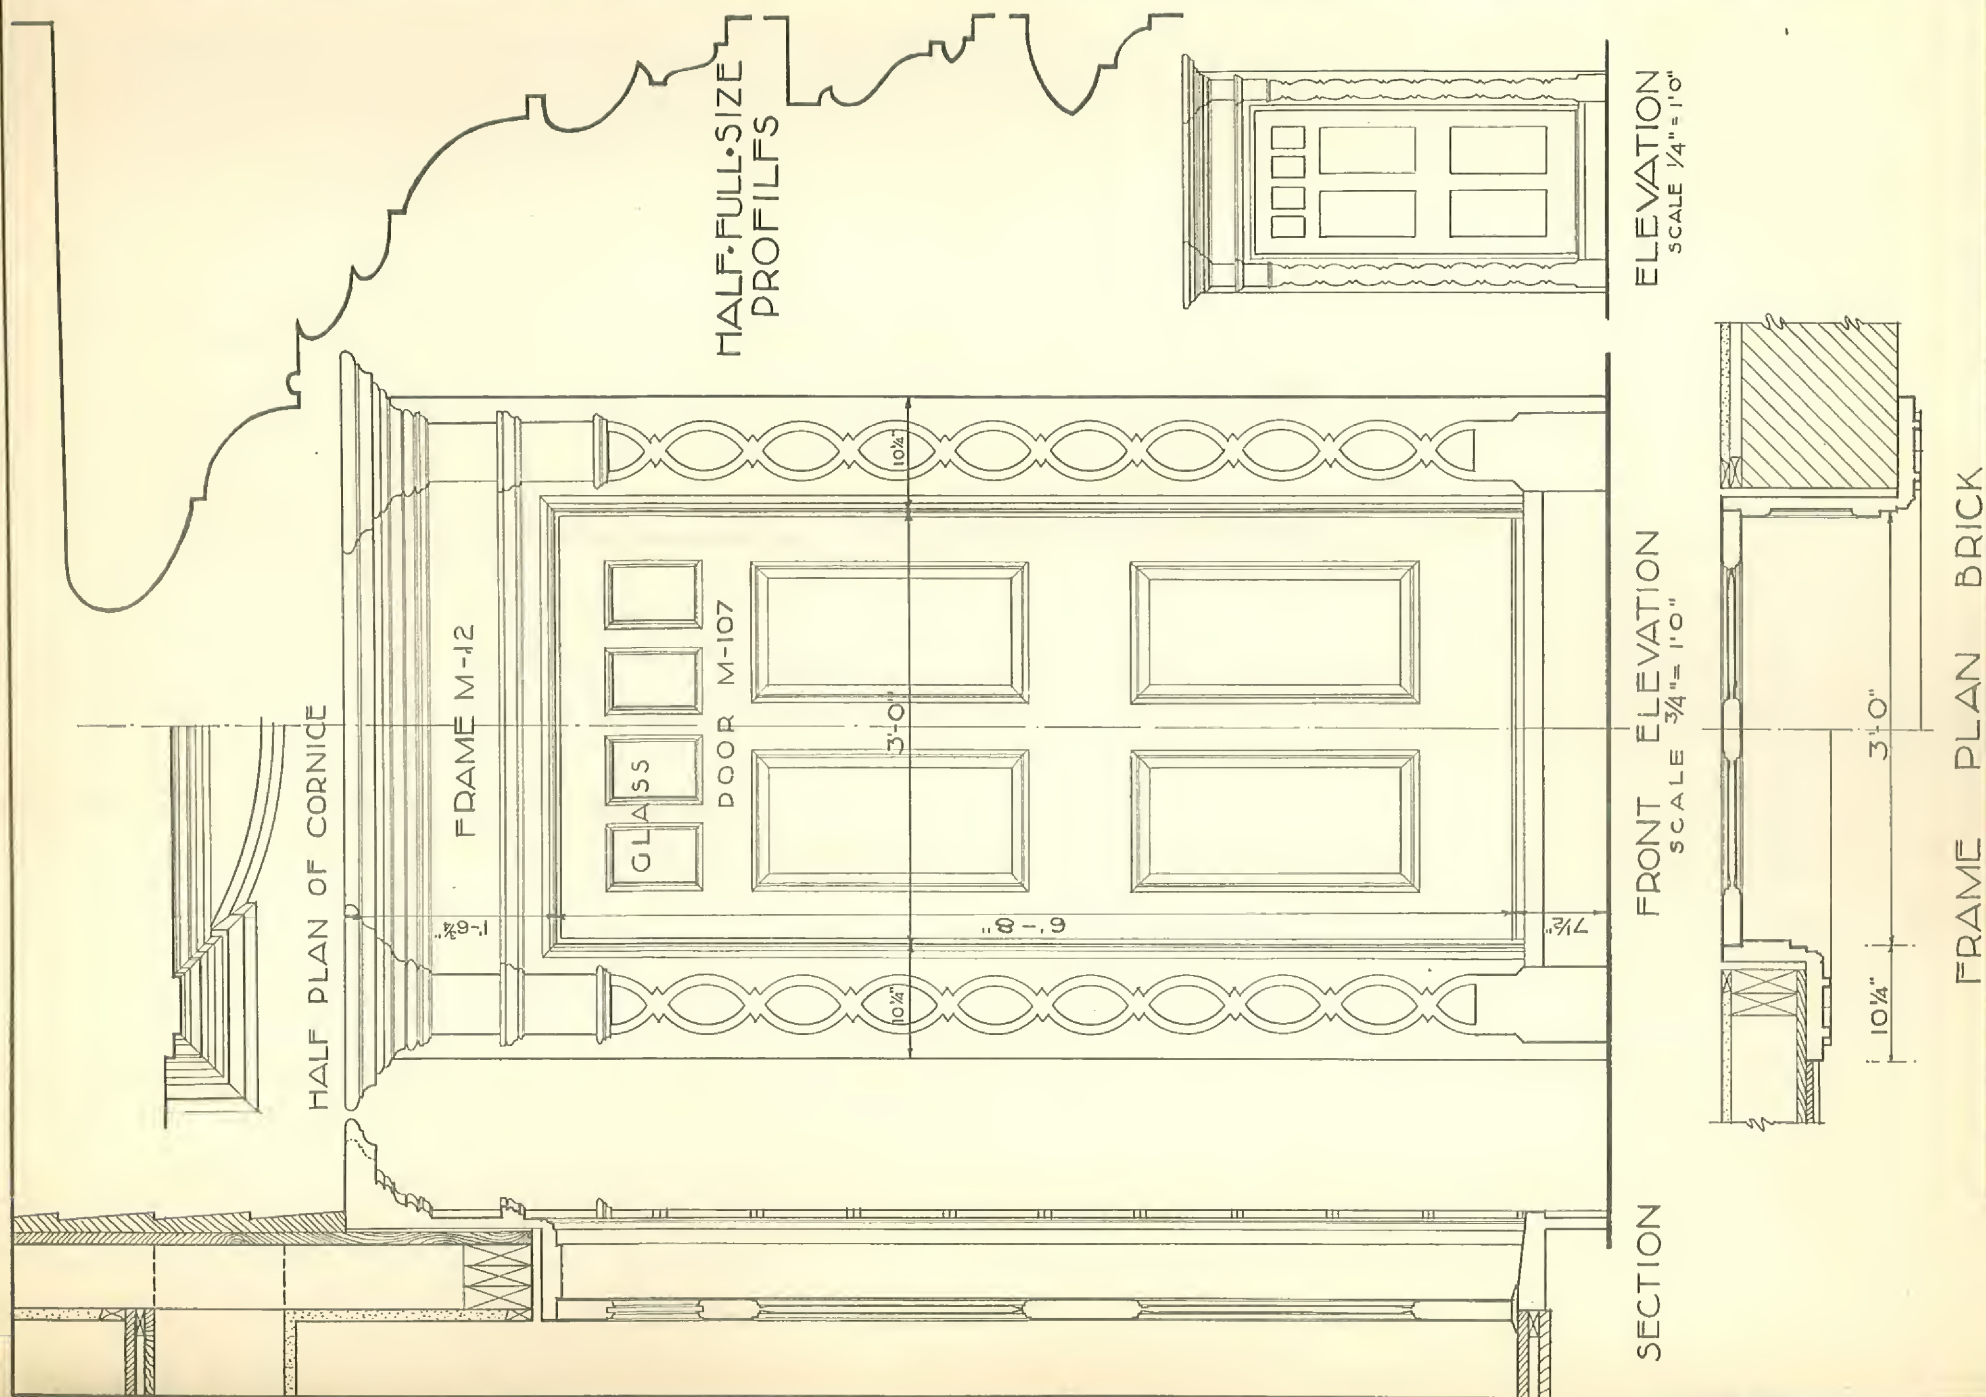

HALF FULL SIZE PROFILE
OF CROWN MOULD

NOTE - ROOF CONSTRUCTION
FURNISHED BY OTHERS

HALF
FULL SIZE
HEAD
PROFILE

DOOR M-149

GLASS

9'-0"

ELEVATION

SCALE 1/4" = 1'-0"

SECTION

FRONT ELEVATION

SCALE 3/4" = 1'-0"


ROUGH OPENING 3'-4"

BRICK


PLAN

FRAME

ROUGH OPENING 6'-10"

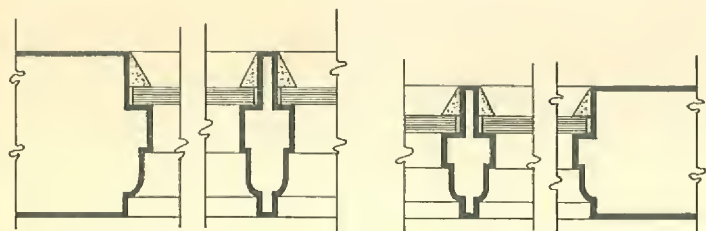

HALF FULL SIZE DETAILS OF SASH
1 3/4" THICK 1 3/8" THICK

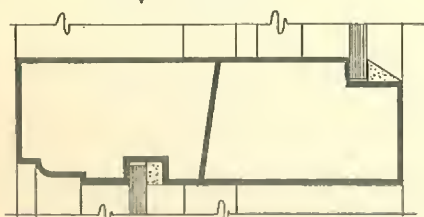


HALF FULL SIZE DETAIL OF
CHECK RAIL



M-369



M-370

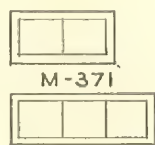


M-371




M-372


TYPICAL SASH LAYOUTS
SCALE 1/4" = 1'-0"

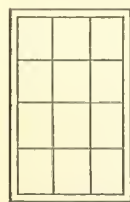


M-366

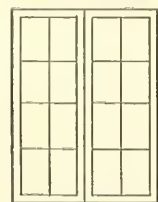


M-367

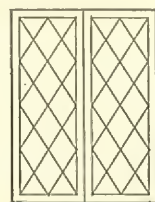


M-368

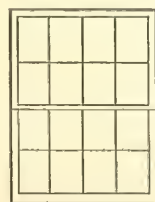


M-350

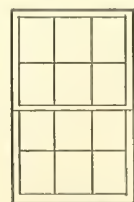

M-351

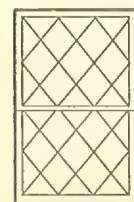


M-352

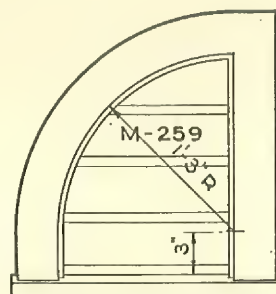


ELEVATION

1'-5 1/2" R.O.

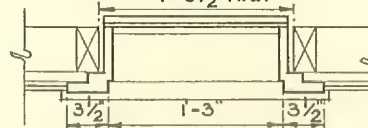


PLAN

SCALE 3/4" = 1'-0"

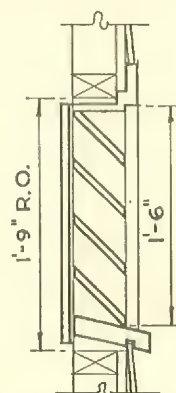


SECTION

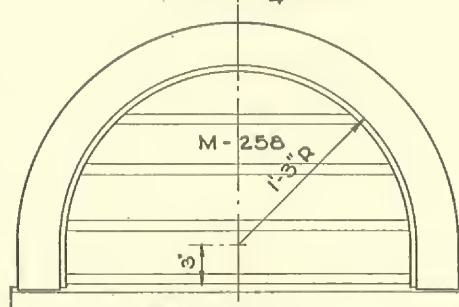


ELEVATION

2'-8 1/2" R.O.

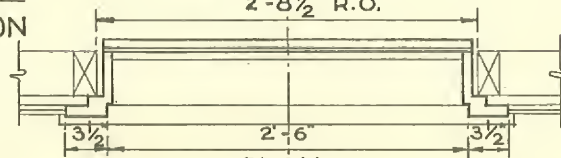

PLAN

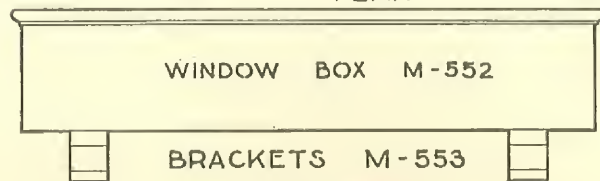


WINDOW BOX M-552


BRACKETS M-553

ELEVATION


SCALE 3/4" = 1'-0"

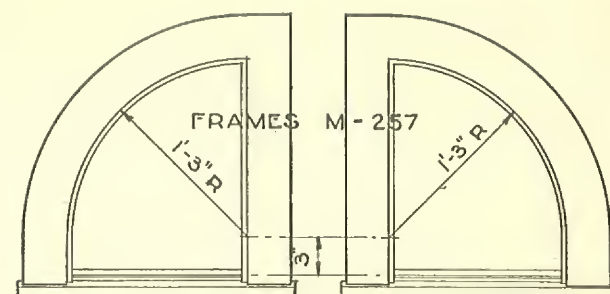


ELEVATION

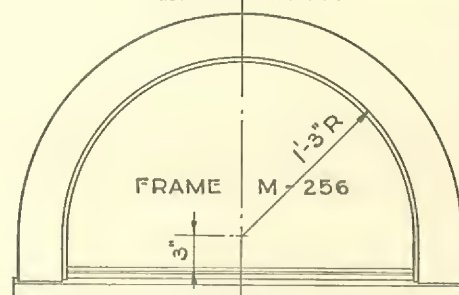


FRAME M-256

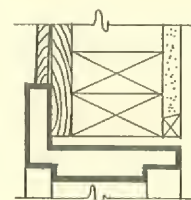

HEAD

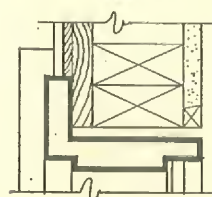

JAMB

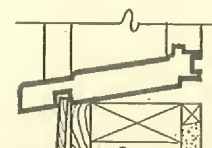

SILL

DETAIL OF FRAMES M-256-7
SCALE 1 1/2" = 1'-0"



SECTION

PLAN OF PILASTER & CASG.
SCALE 3"=1'-0"

6'-1" O.W.

FRAME M-15

10'-5 7/8" O.H.

7'-0" R.O.

PROFILE ON C
SCALE 3"=1'-0"

DOOR M-110

ELEVATION
SCALE 1/4"=1'-0"

FRONT ELEVATION
SCALE 3/4"=1'-0"

SECTION

3'-3" D.O.

2" X 4" STUDS

1'-3"


1'-6"

5'-6"

FRAME

PLAN


BRICK





ELEVATION
SCALE 3/4" = 1'-0"

6'-8 3/4" C.W.

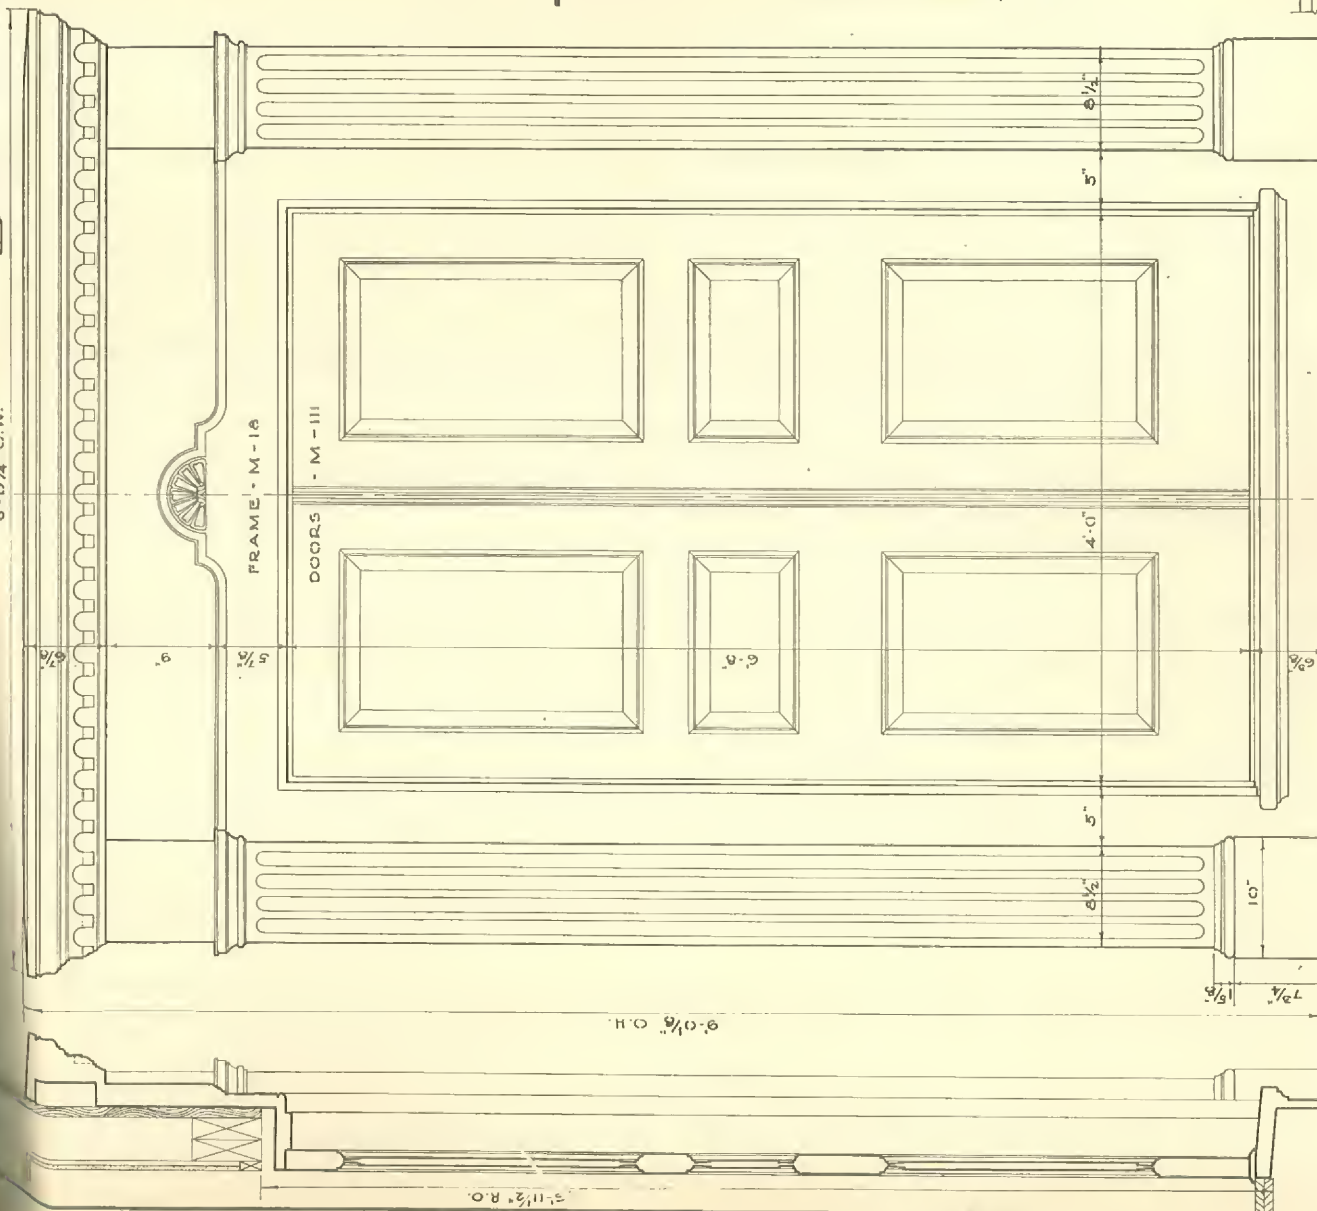

FRAME - M-18

DOORS - M-III

PROFILE THRU
PILASTER CAP.
SCALE 3" = 1'-0"

PILASTER BASE
AND PLAN
SCALE 3" = 1'-0"

SECTION

FRONT ELEVATION

SCALE 3/4" = 1'-0"

HALF WOOD ORNA.
SCALE 3" = 1'-0"

4'-3" R.O.

4'-0"


6'-3"


2" x 4" STUDS

FRAME


PLAN

BRICK

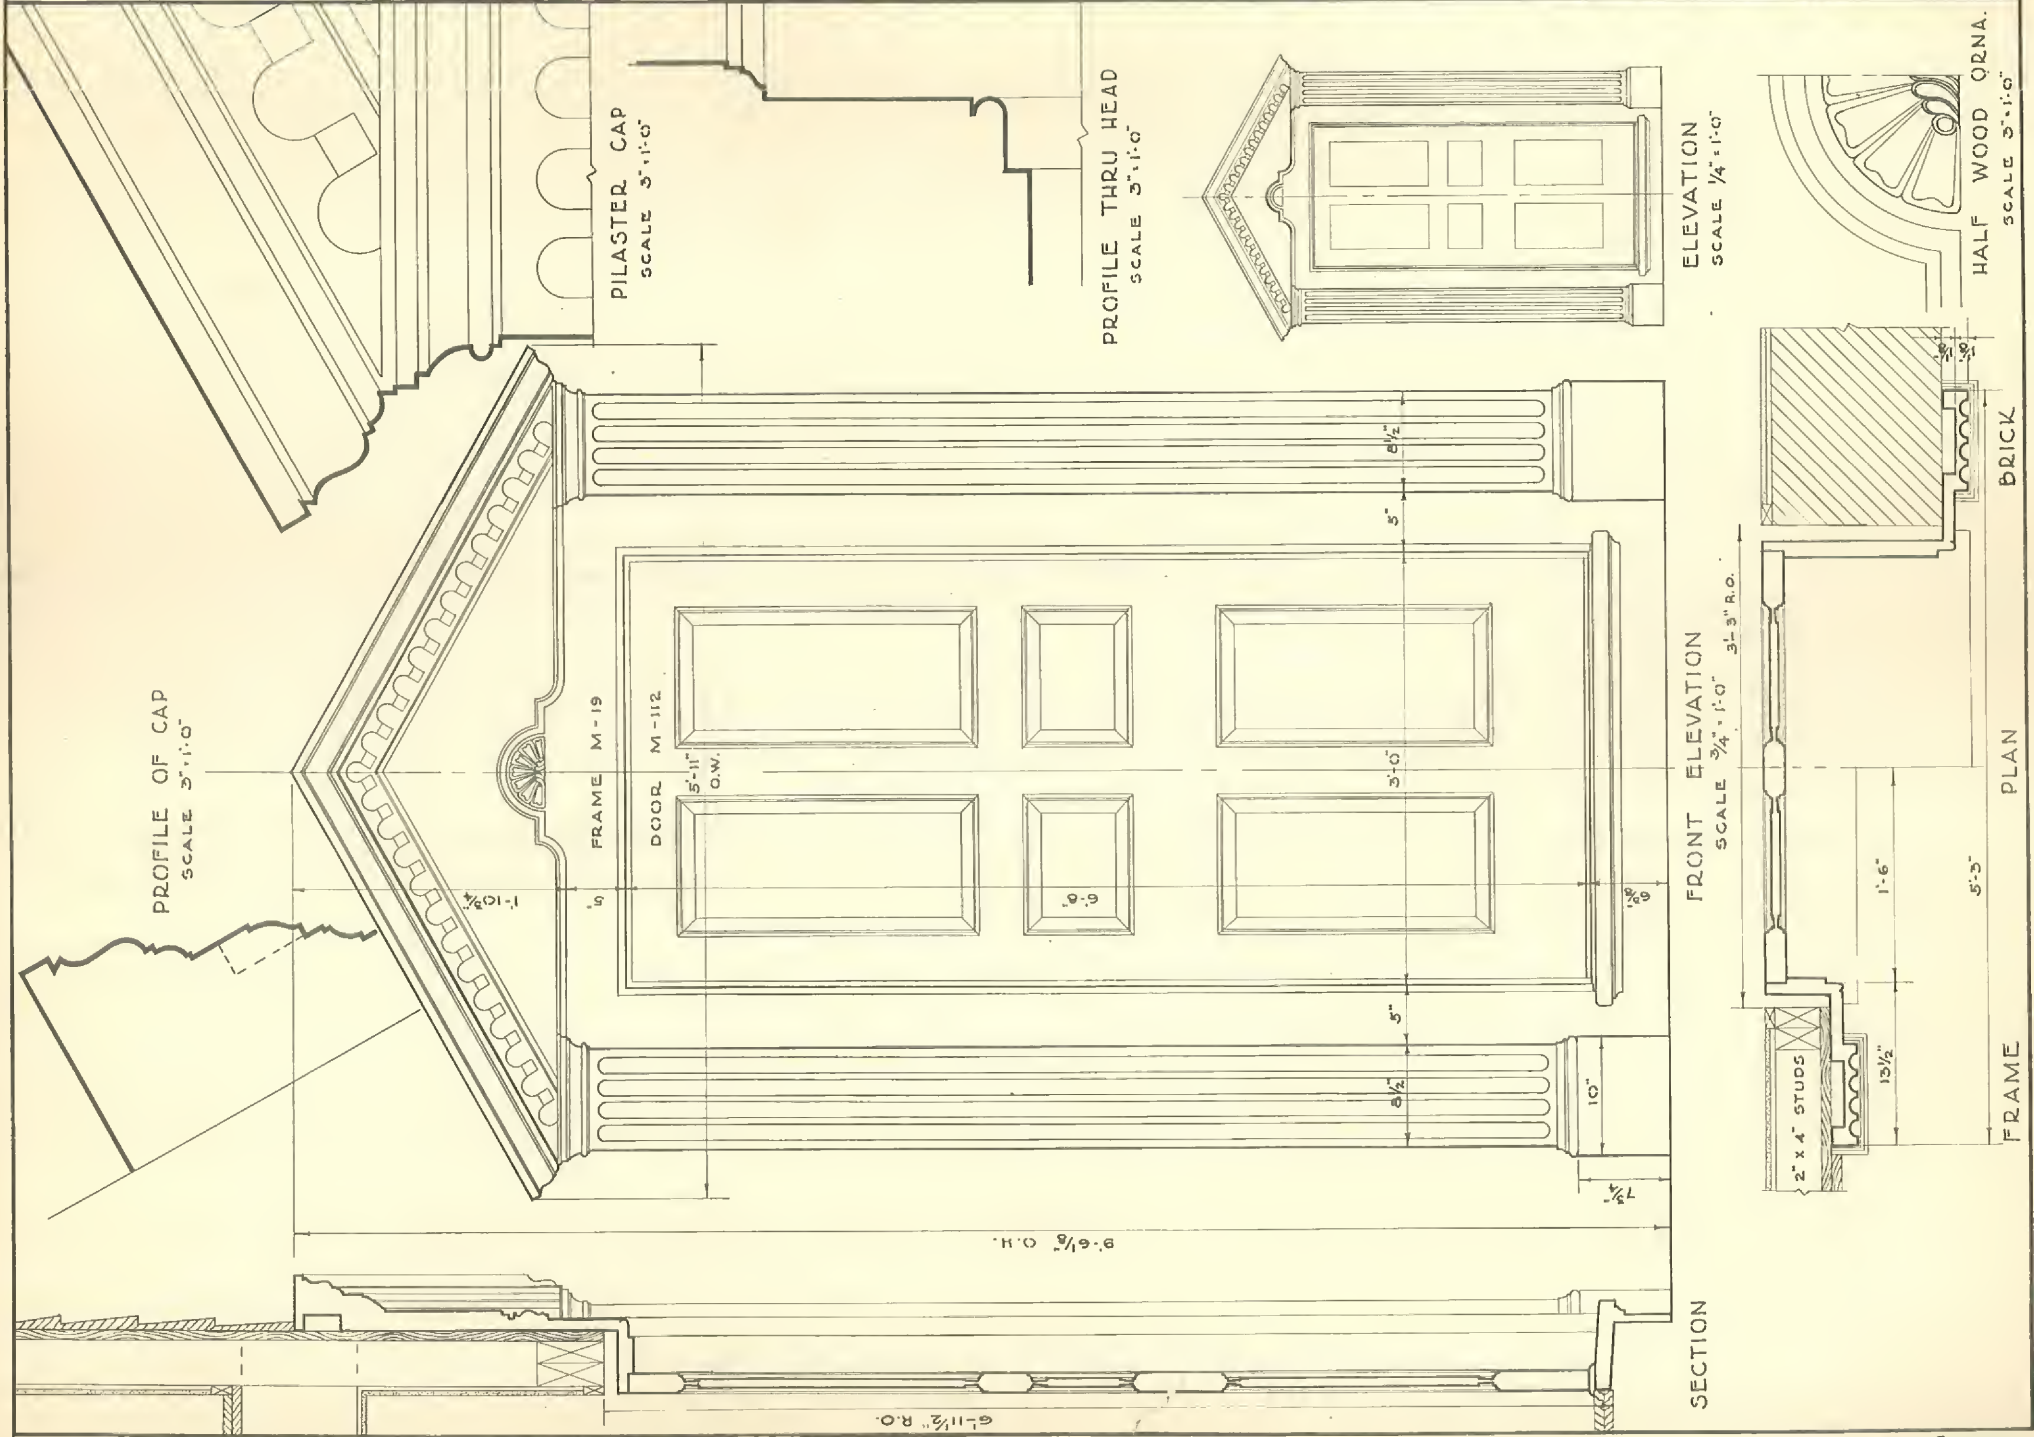


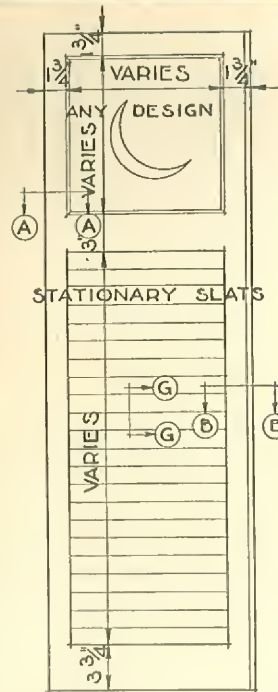


SHUTTER M-501

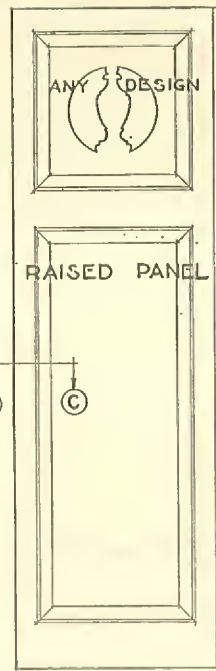


SHUTTER M-502

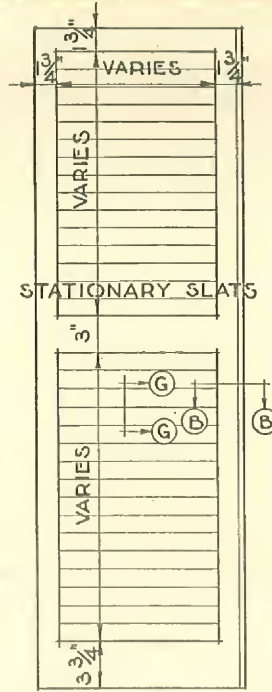


BLIND M-500

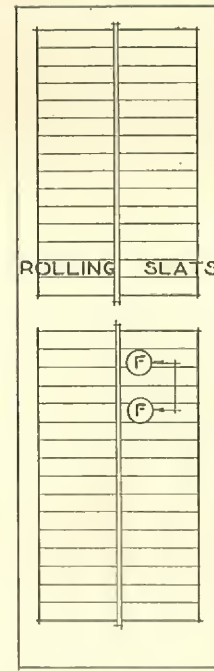

BLIND M-503

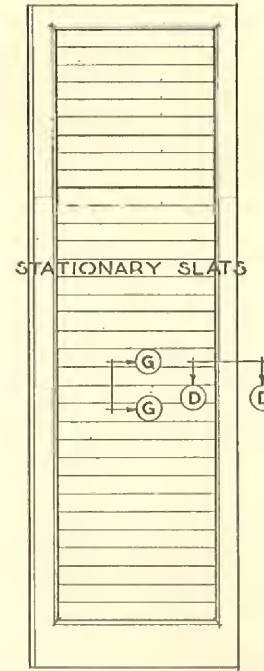


BLIND M-504

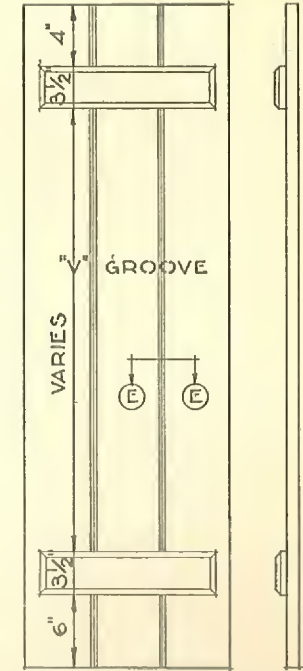


SHUTTER M-505


SCALE $\frac{3}{4}'' = 1'-0''$

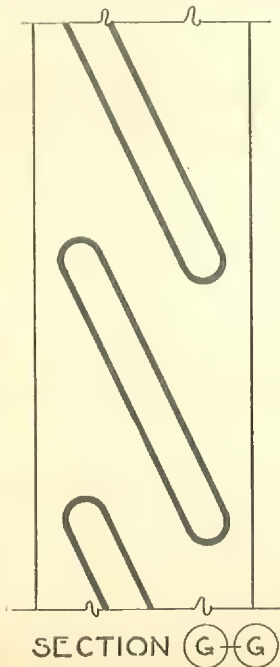


SECTION G-G

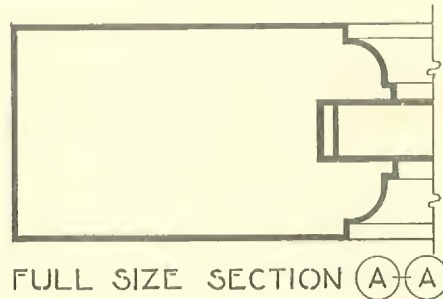


FULL SIZE SECTION A-A

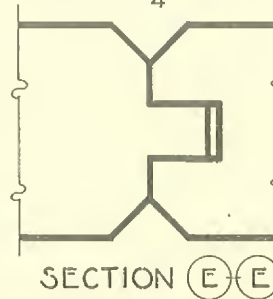

SECTION E-E

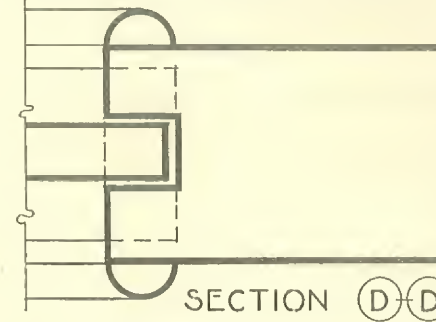


SECTION D-D



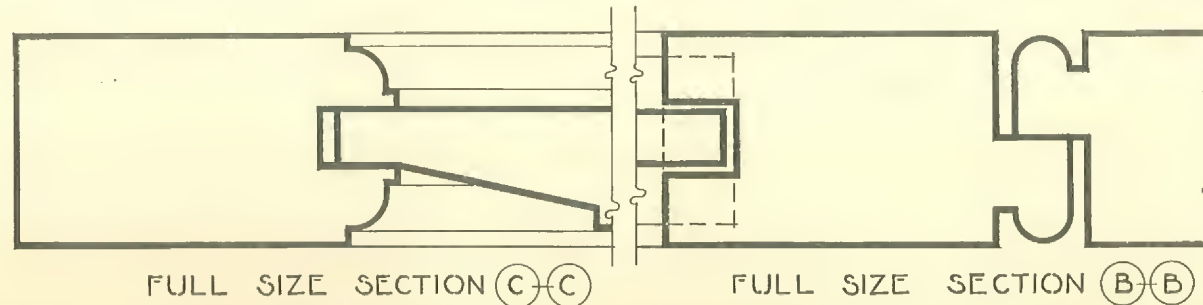


FULL SIZE SECTION C-C


FULL SIZE SECTION B-B

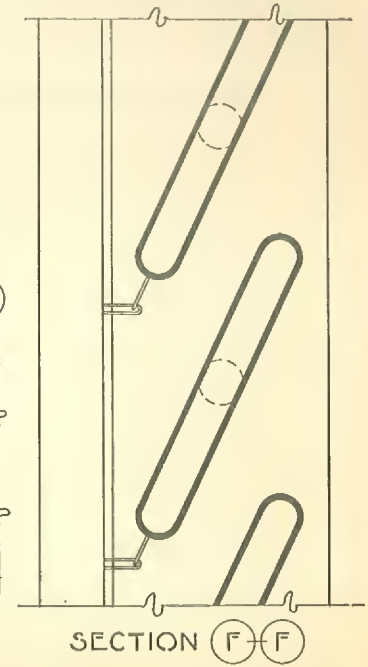


SECTION F-F

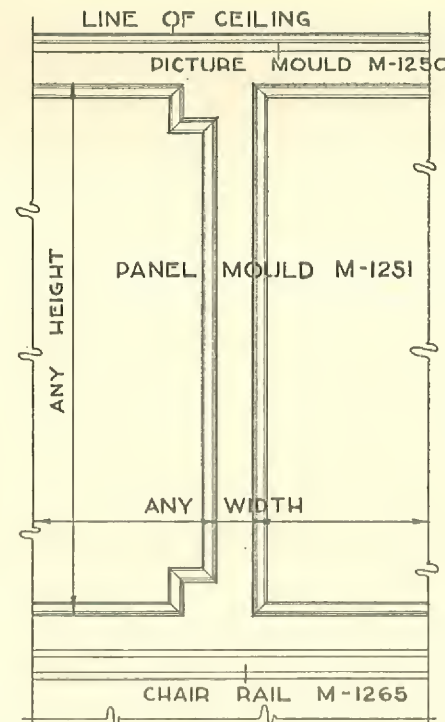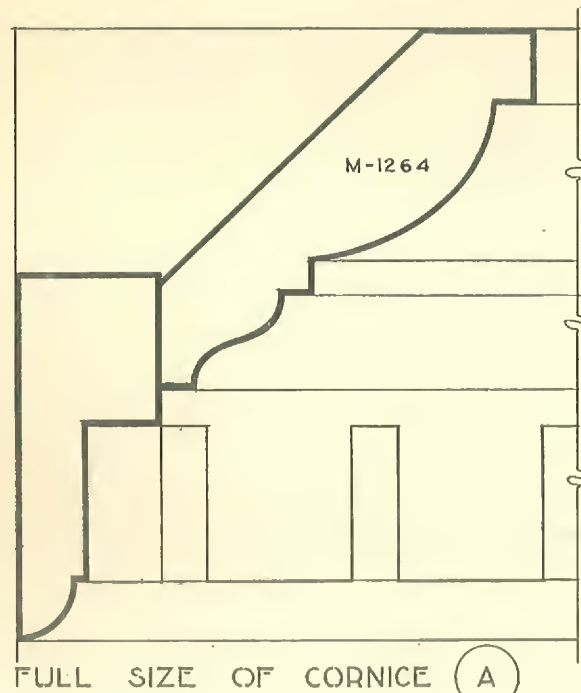


WALL PANELLING WITH M-1251
SCALE $\frac{3}{4}'' = 1'-0''$

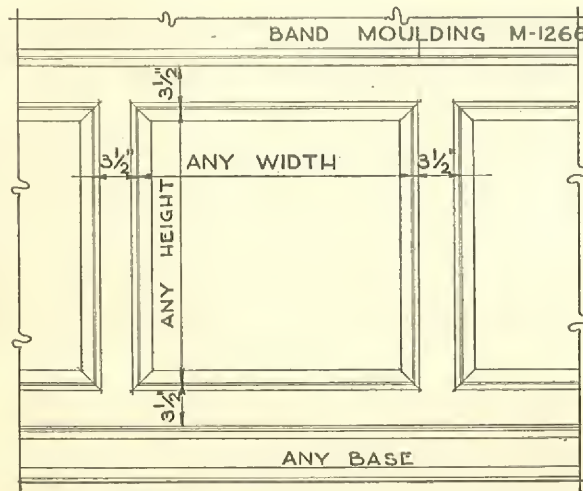

WALL PANELLING M-1301
SCALE $\frac{3}{4}'' = 1'-0''$

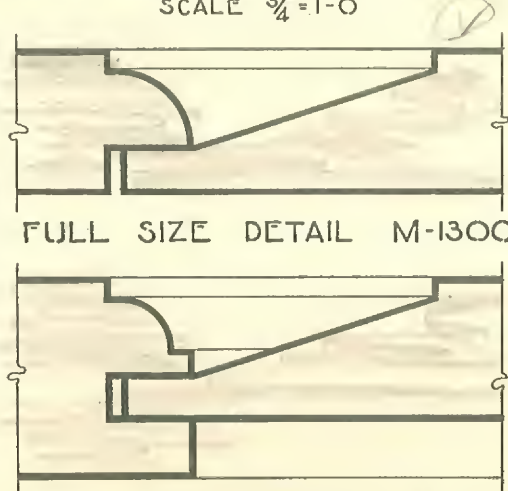

FULL SIZE DETAIL M-1301

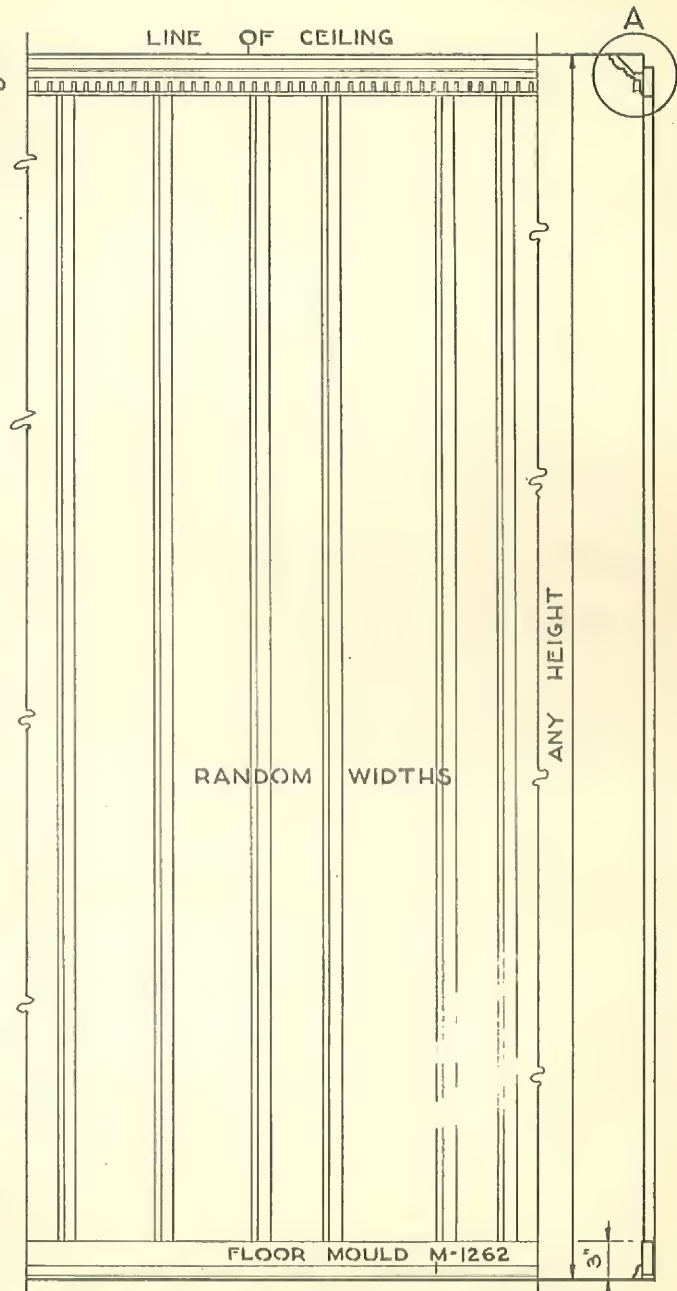


WALL PANELLING M-1300
SCALE $\frac{3}{4}'' = 1'-0''$

COL. ENTRANCE M-28 & M-30


MORGAN

INDEX SHEET NO.17

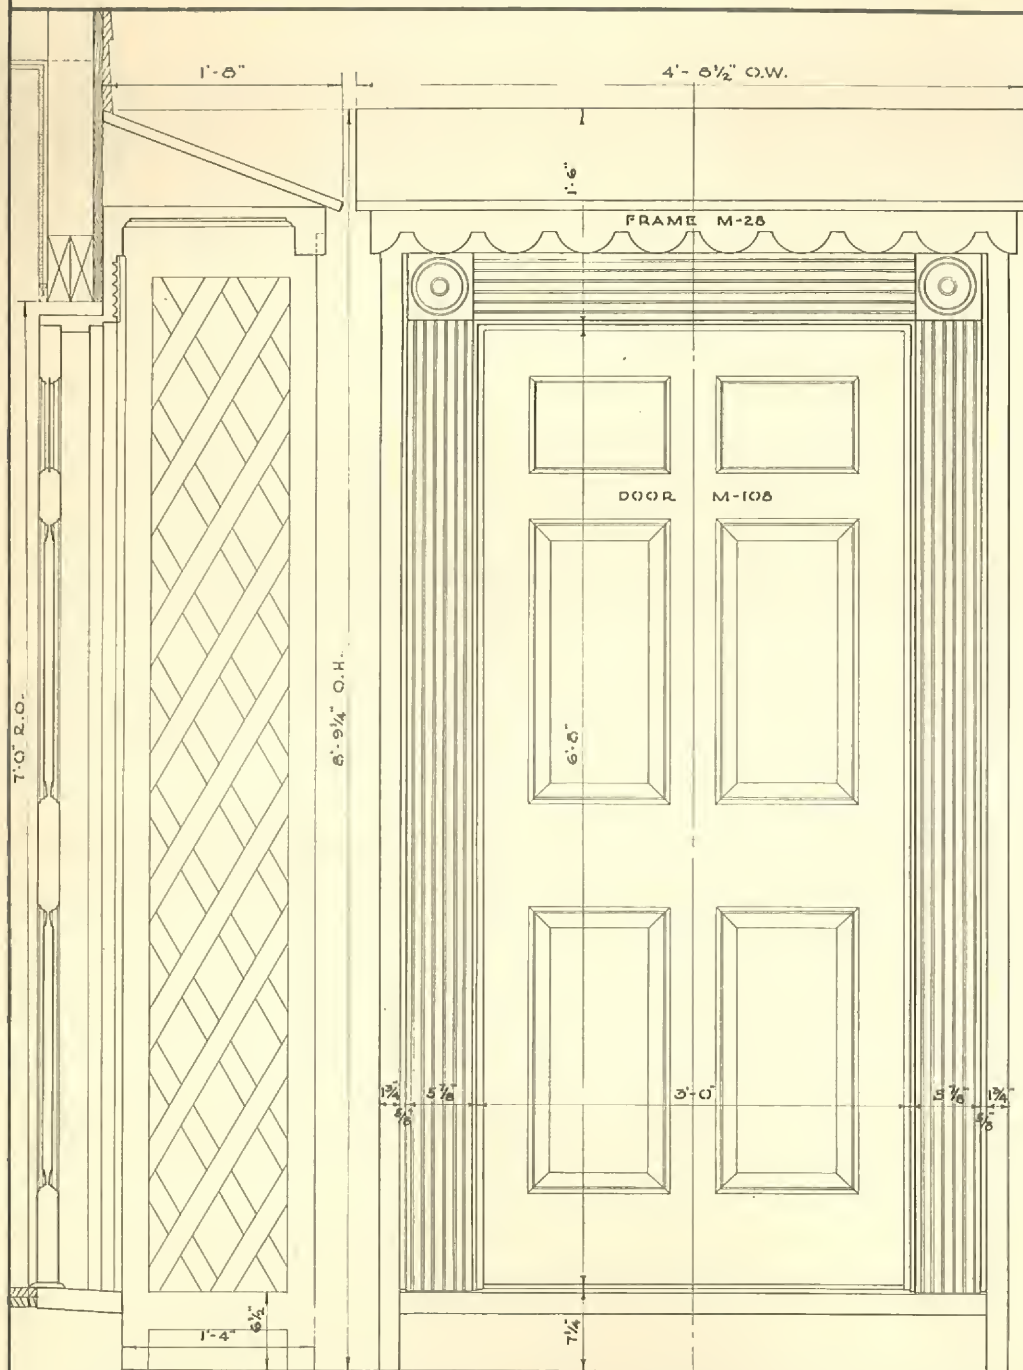


SECTION

FRONT ELEVATION M-28
SCALE $\frac{3}{4}'' = 1'-0''$

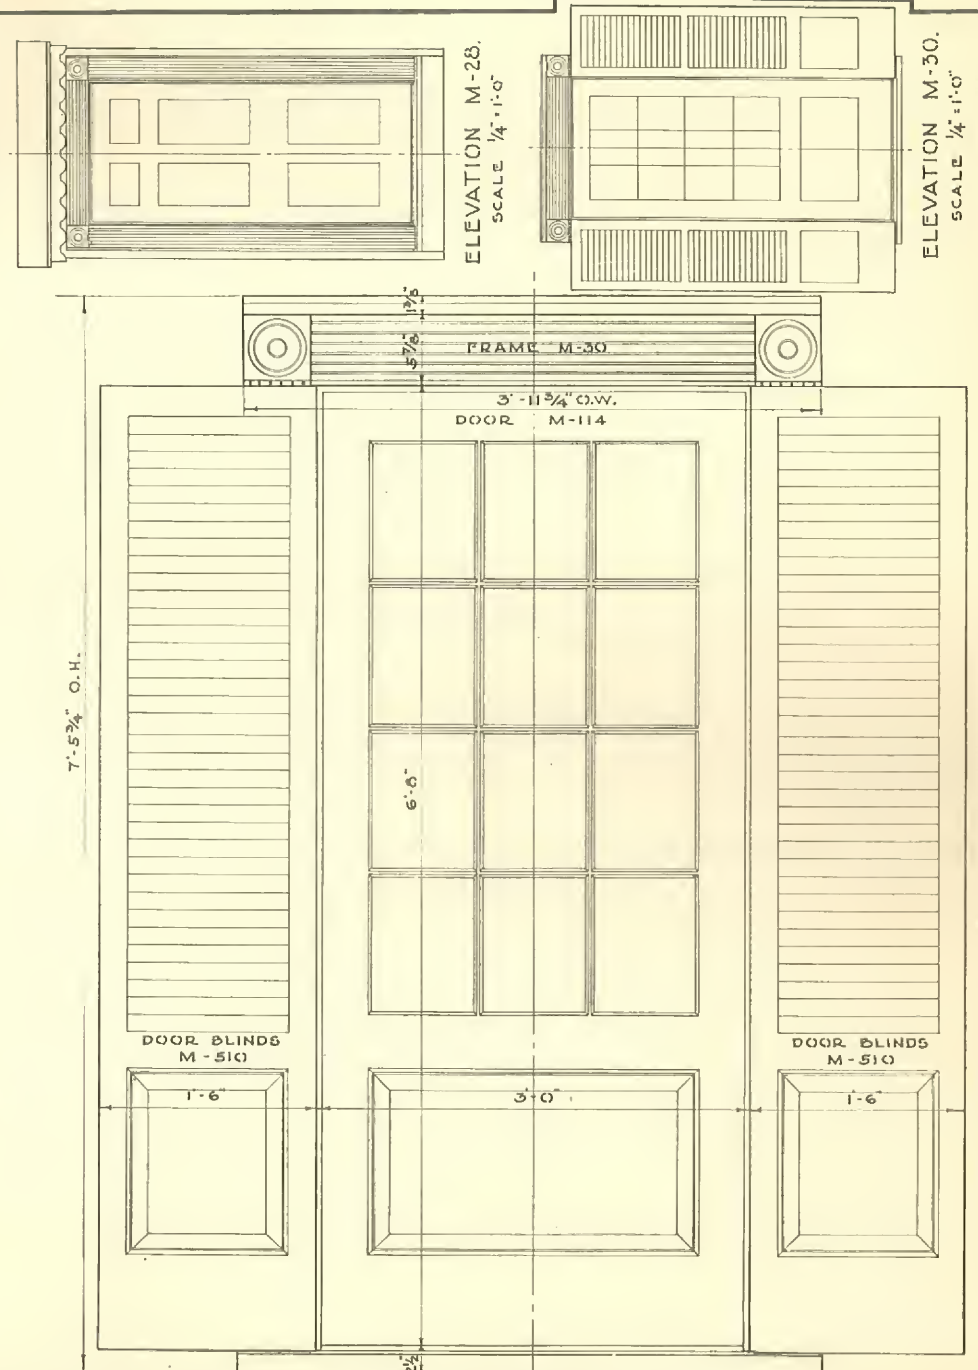

FRONT ELEVATION M-30
SCALE $\frac{3}{4}'' = 1'-0''$

PLANS SECTIONS AND PROFILES
SAME AS M-29 ON REVERSE SIDE.

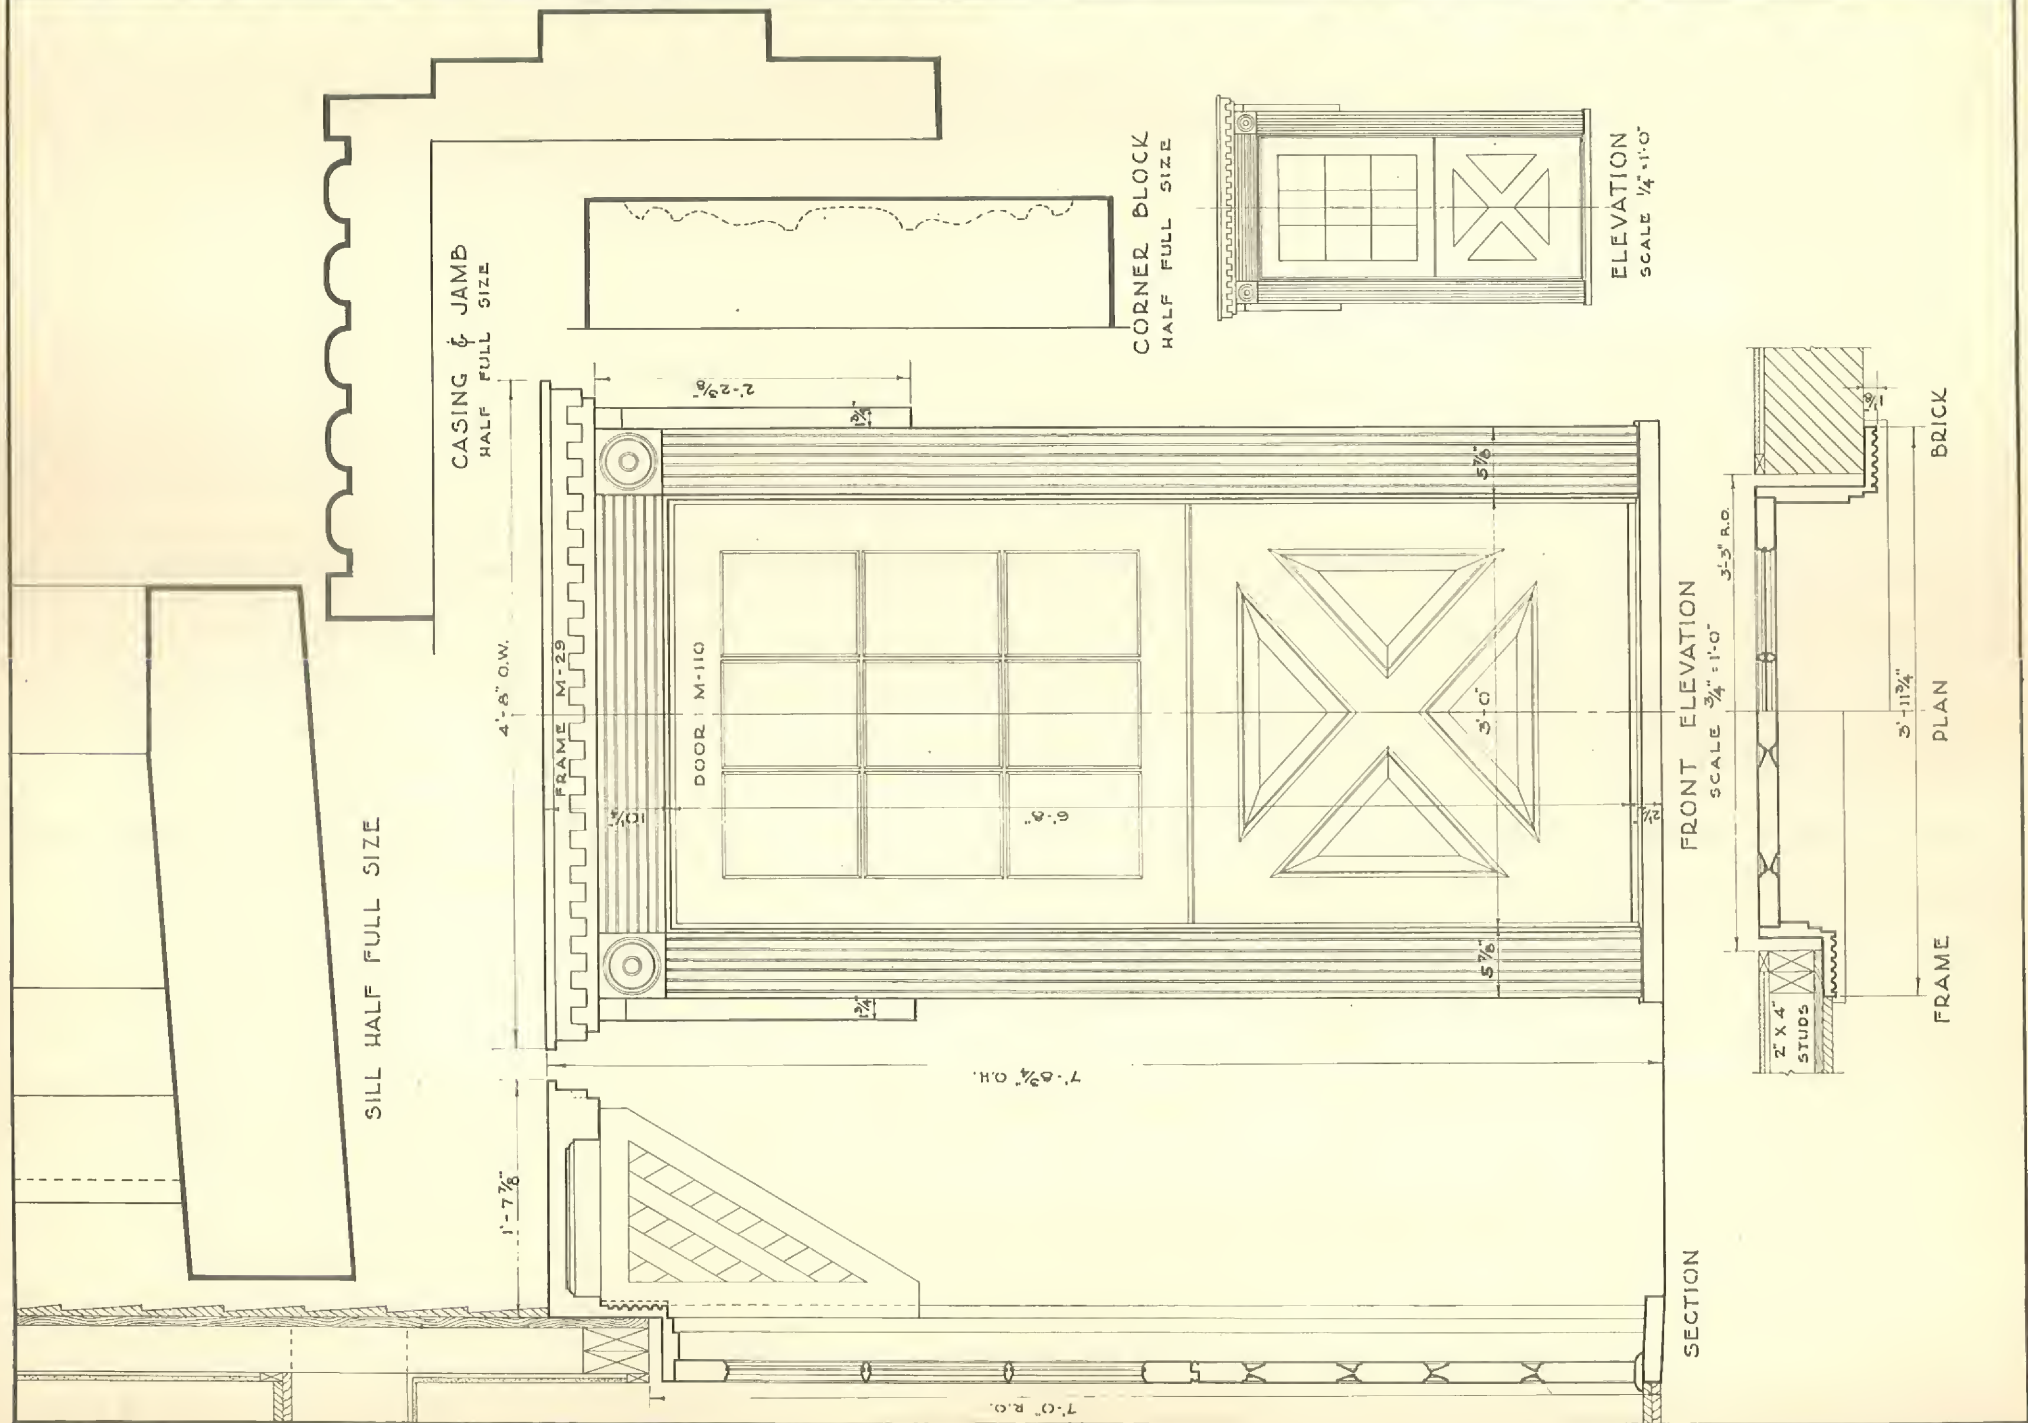

FULL SIZE PROFILE OF STAIR NOSING

FULL SIZE SECTION
OF HALF OF HANDRAIL
M-874

M-867

ROUND

UPPER PART OF NEWELS FULL SIZE


LOWER PART OF NEWELS FULL SIZE

SQUARE


ROUND

NEWEL M-888 NEWEL M-895


BASE OF NEWELS FULL SIZE

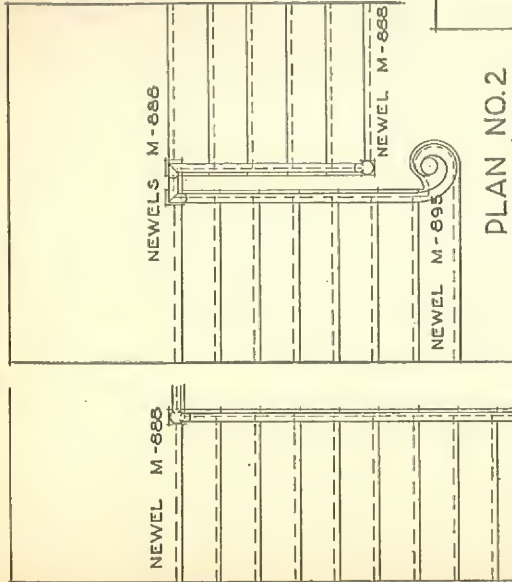


PLAN NO.2
SCALE $\frac{1}{4}" = 1'-0"$

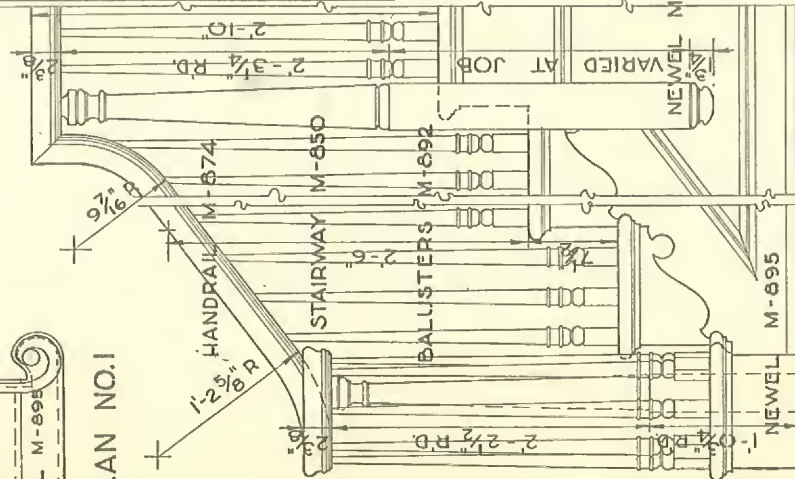

ELEVATION
SCALE $\frac{3}{4}" = 1'-0"$

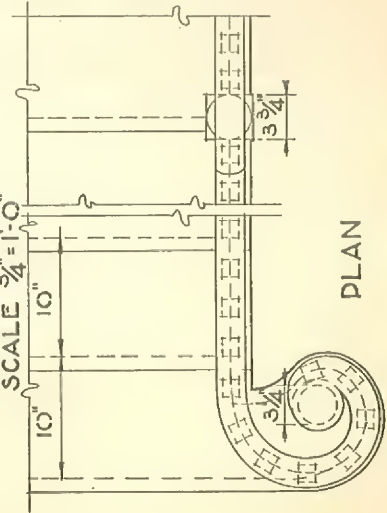


PLAN


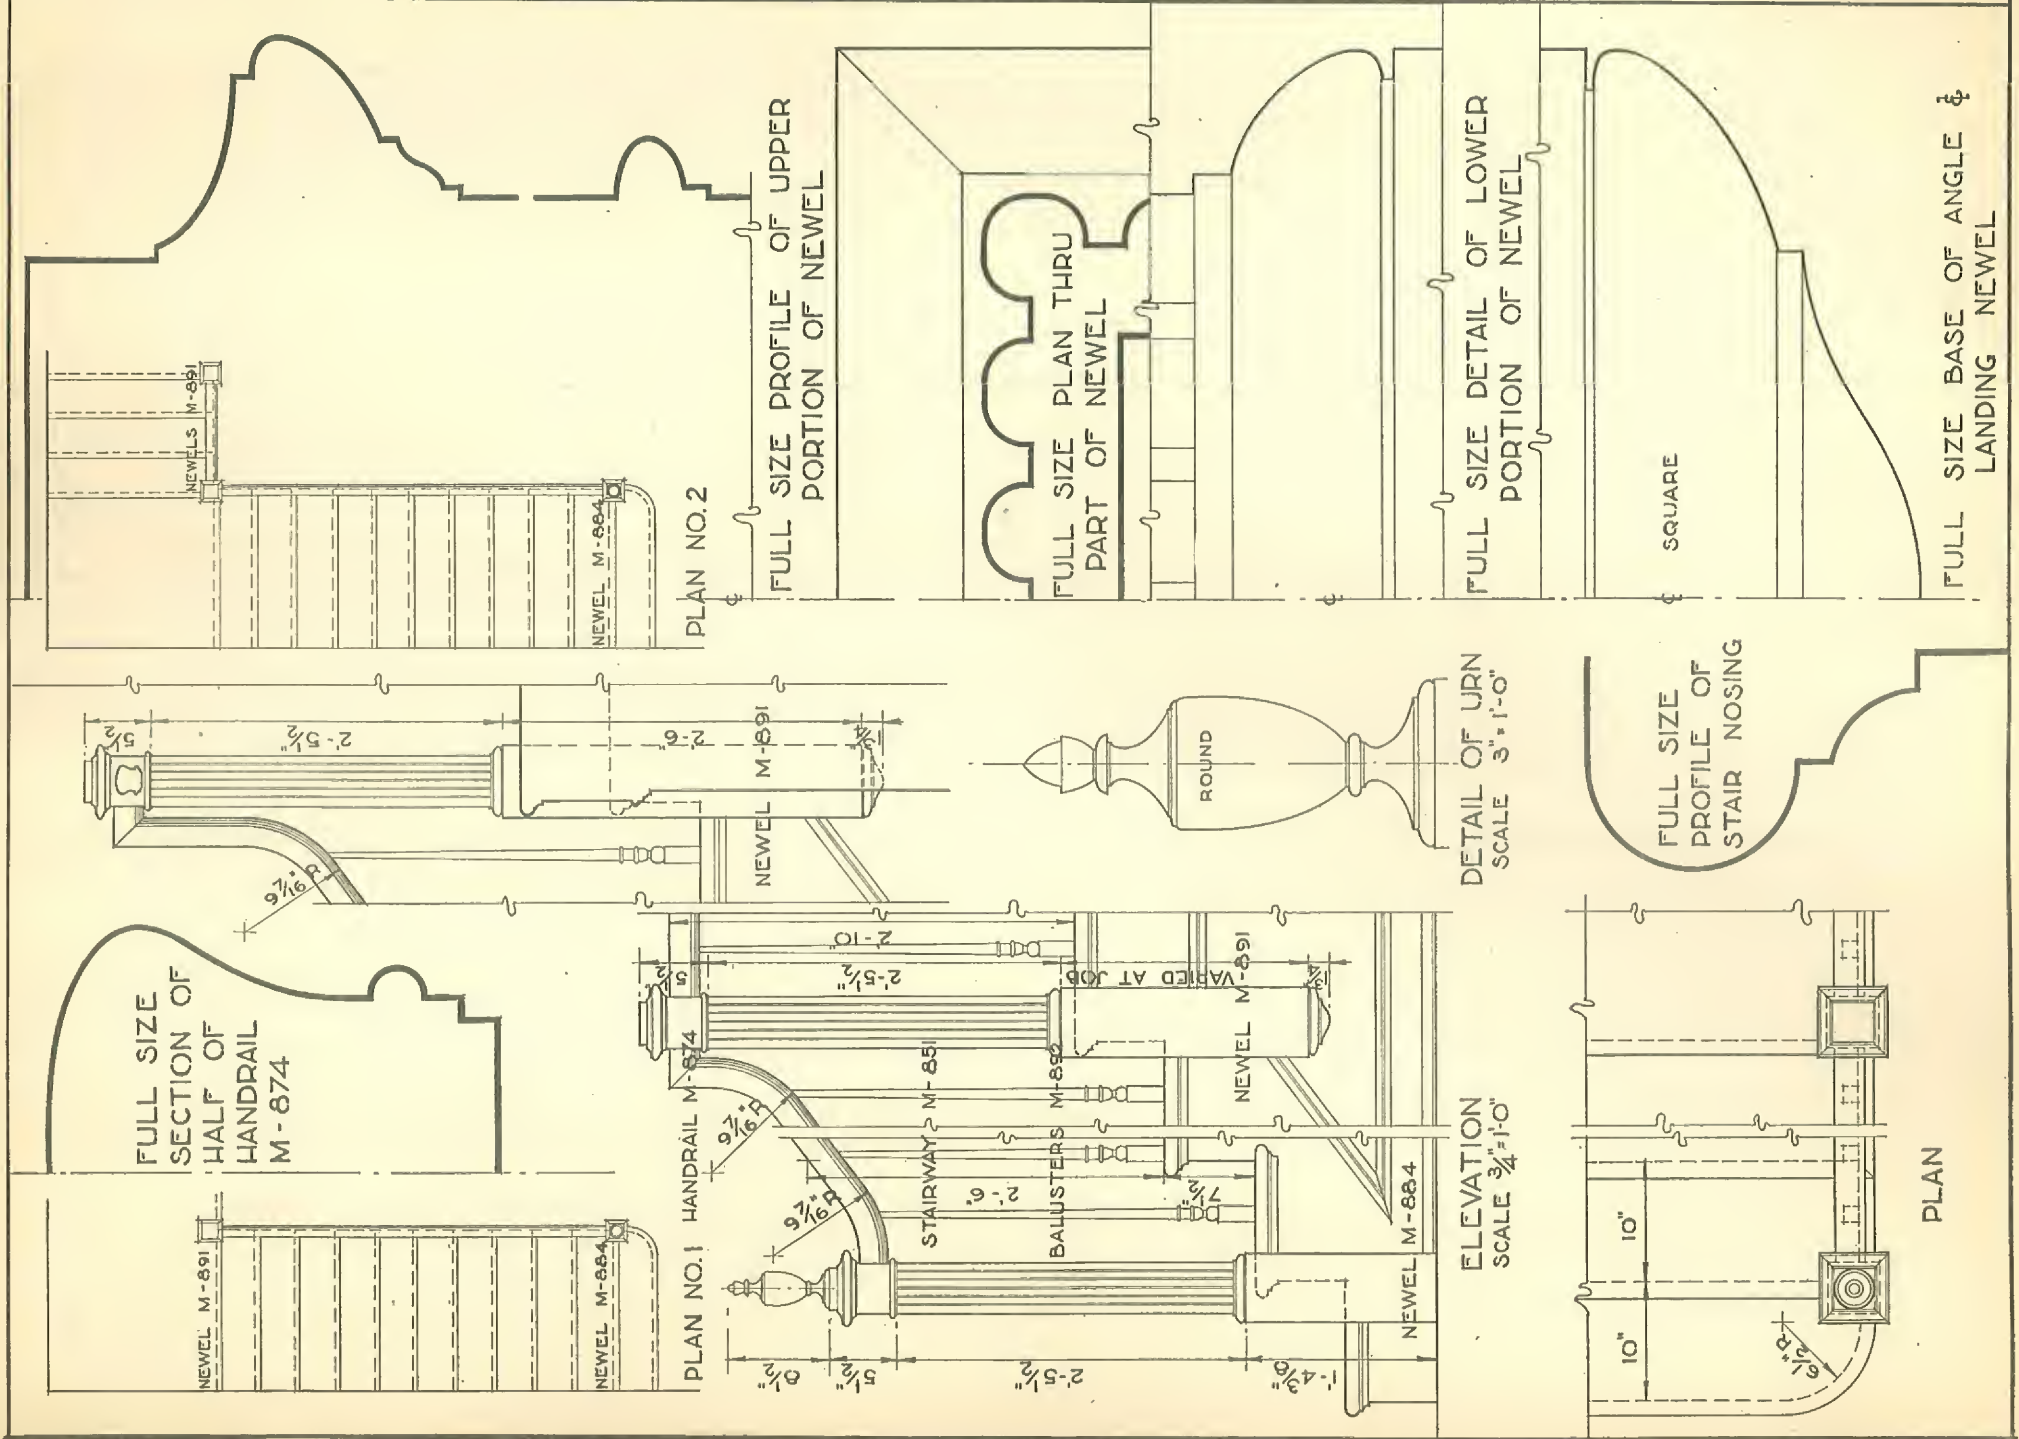


FULL SIZE PROFILE OF STAIR NOSING

FULL SIZE SECTION
OF HANDRAIL
M.-874

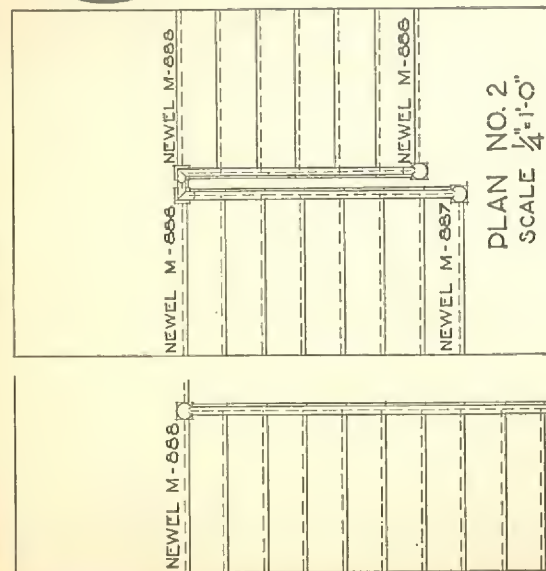


PLAN NO. 2
SCALE $\frac{1}{4}"=1'-0"$

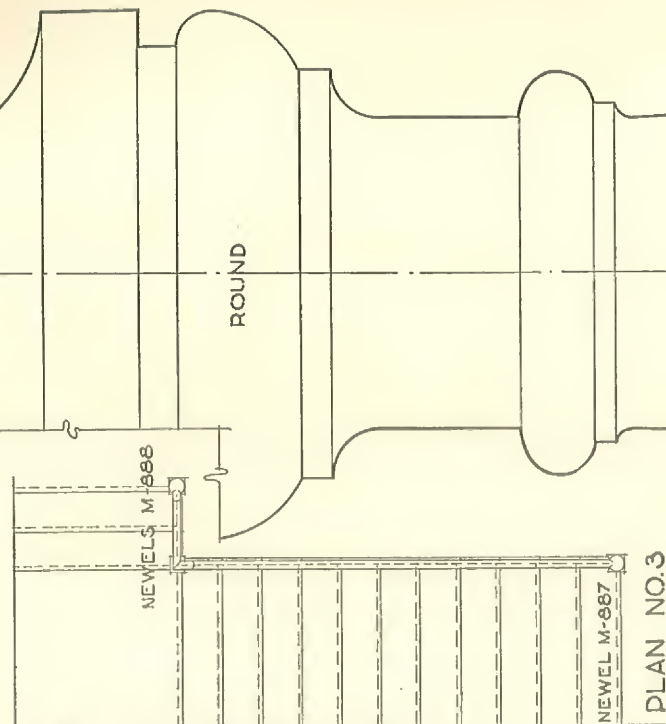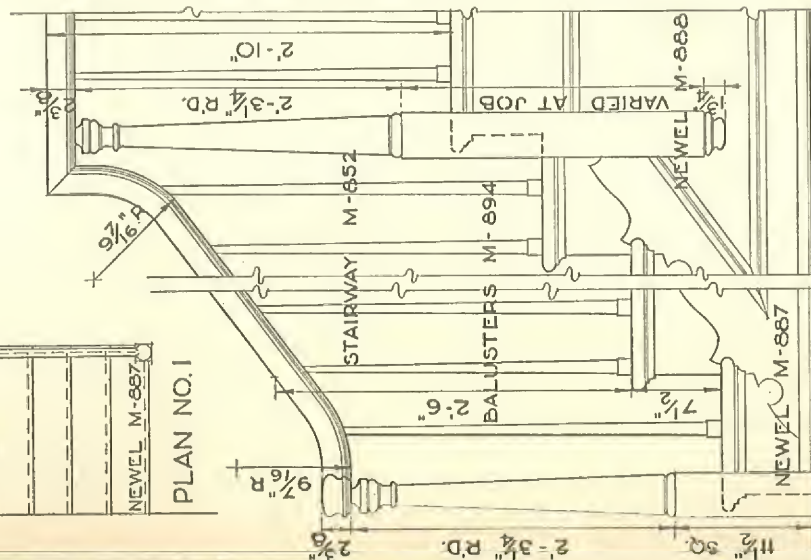

FULL SIZE DETAIL OF
UPPER PART OF NEWEL

ELEVATION
SCALE $\frac{3}{4}"=1'-0"$

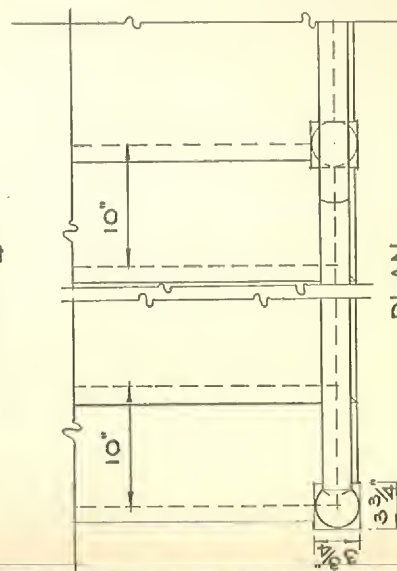





PLAN

FULL SIZE BASE OF ANGLE & LANDING NEWEL


SQUARE

ROUND

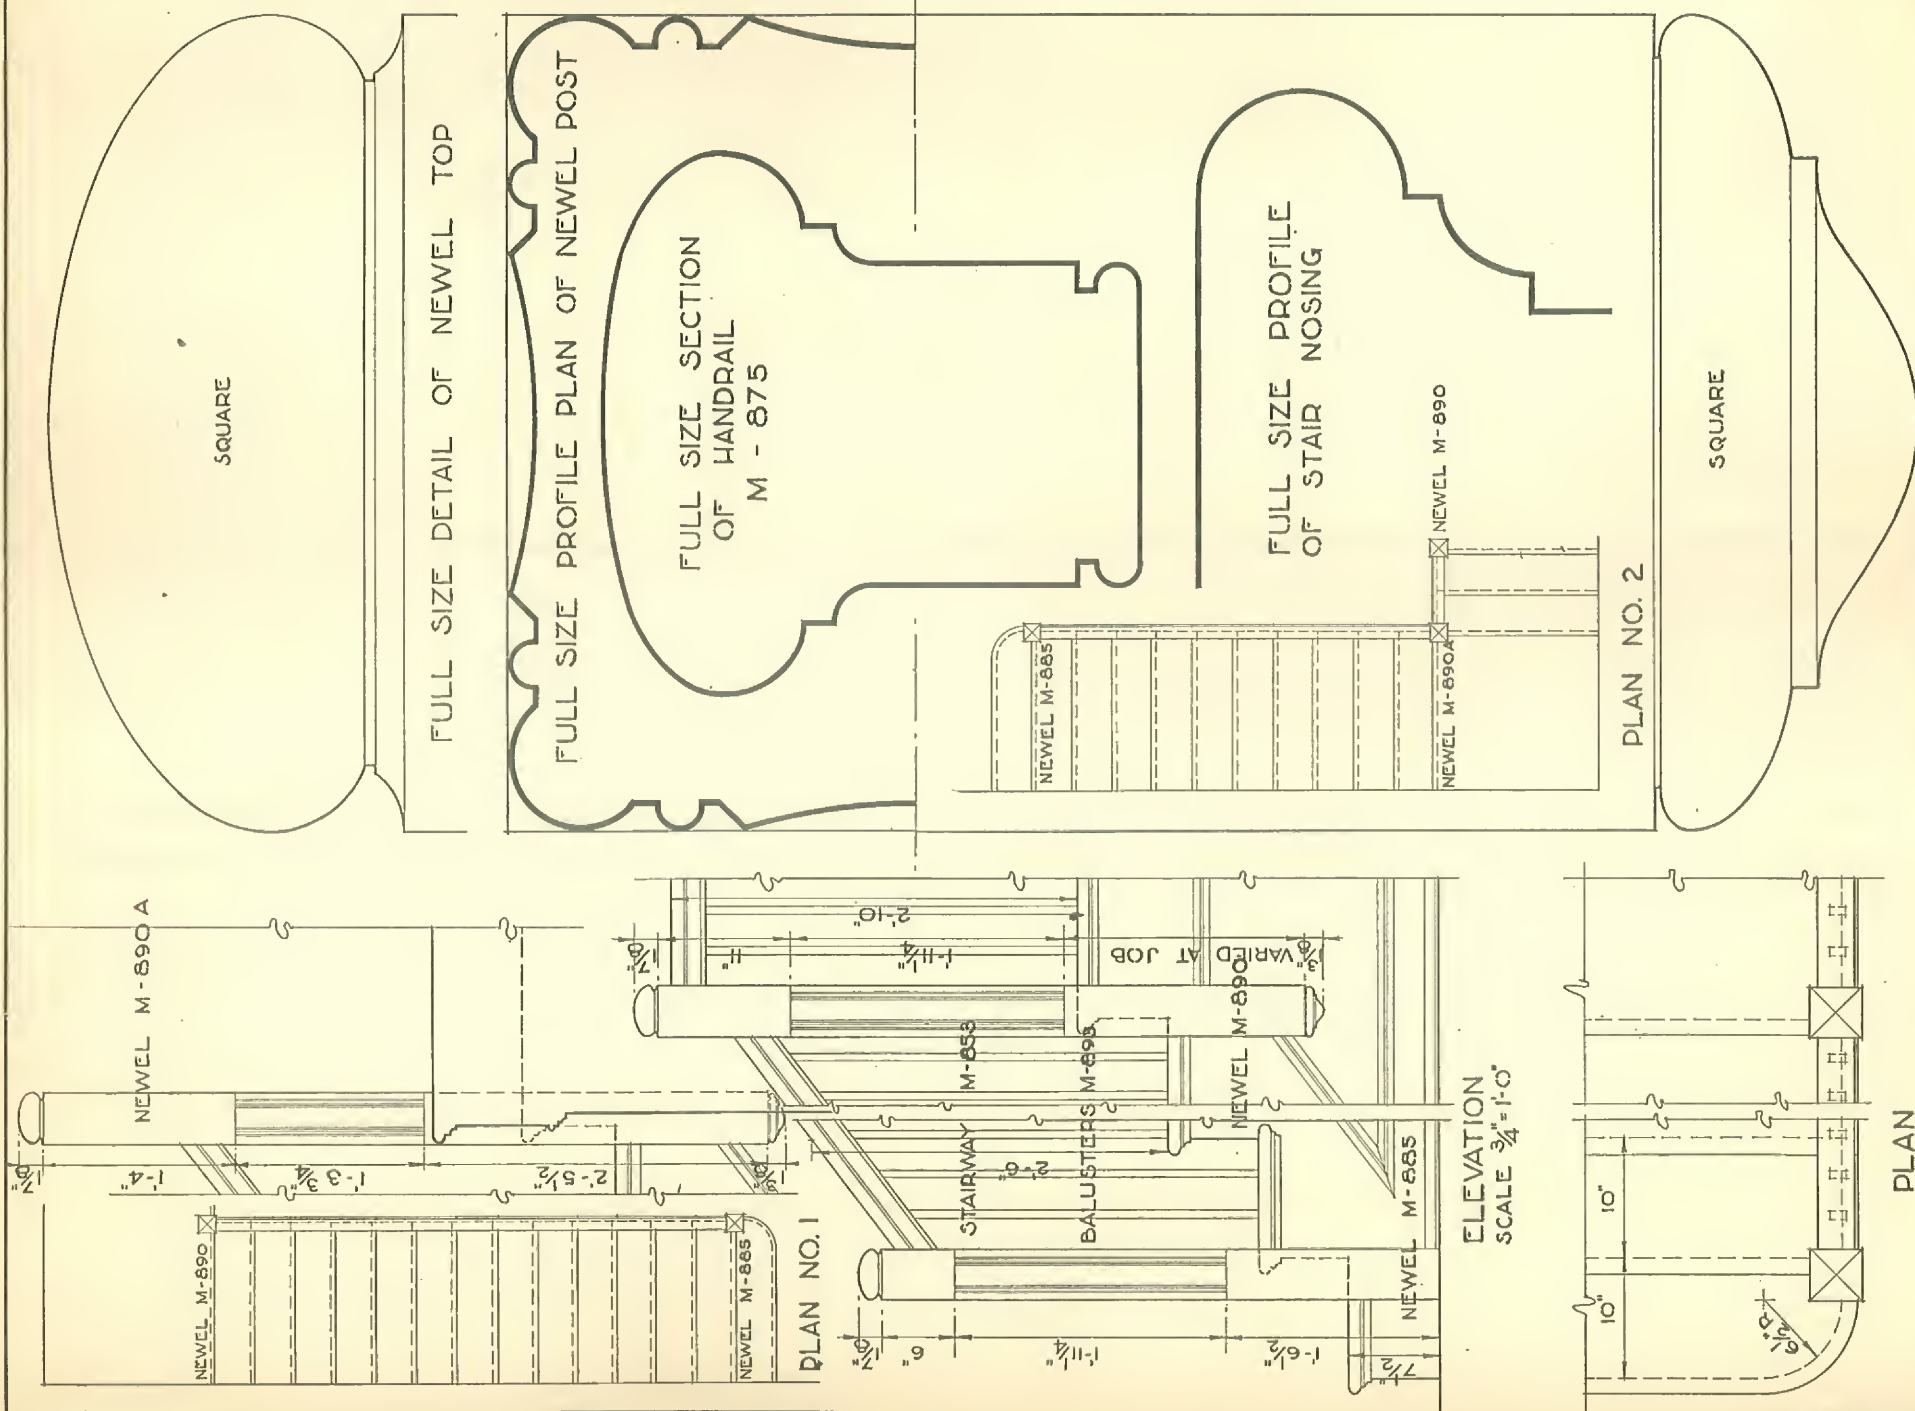


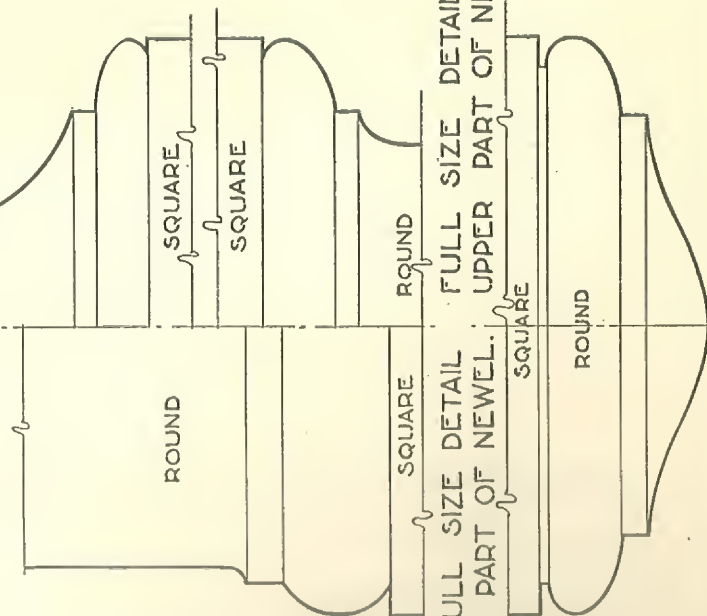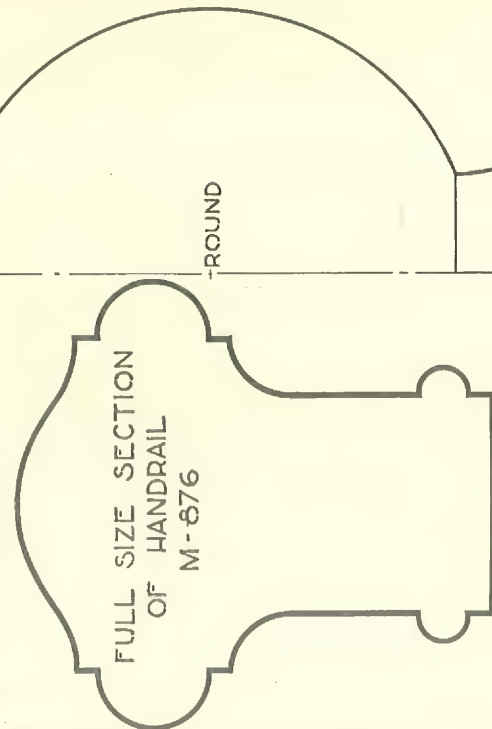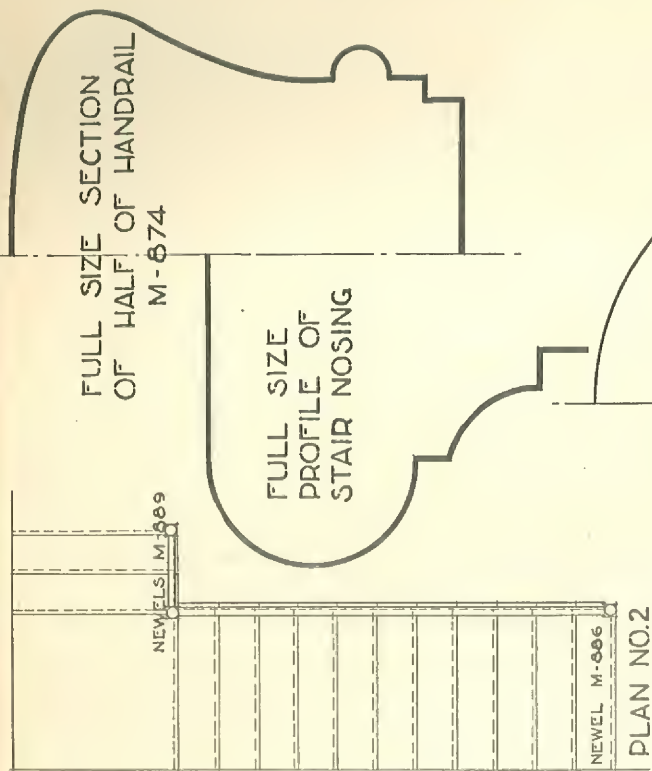

NOTE .
CONDITIONS WHERE
MORE THAN ONE
RISER OCCURS AT A
NEWEL, NECESSI-
TATES USE OF
HANDRAIL NO. M-874
THRUOUT STAIR

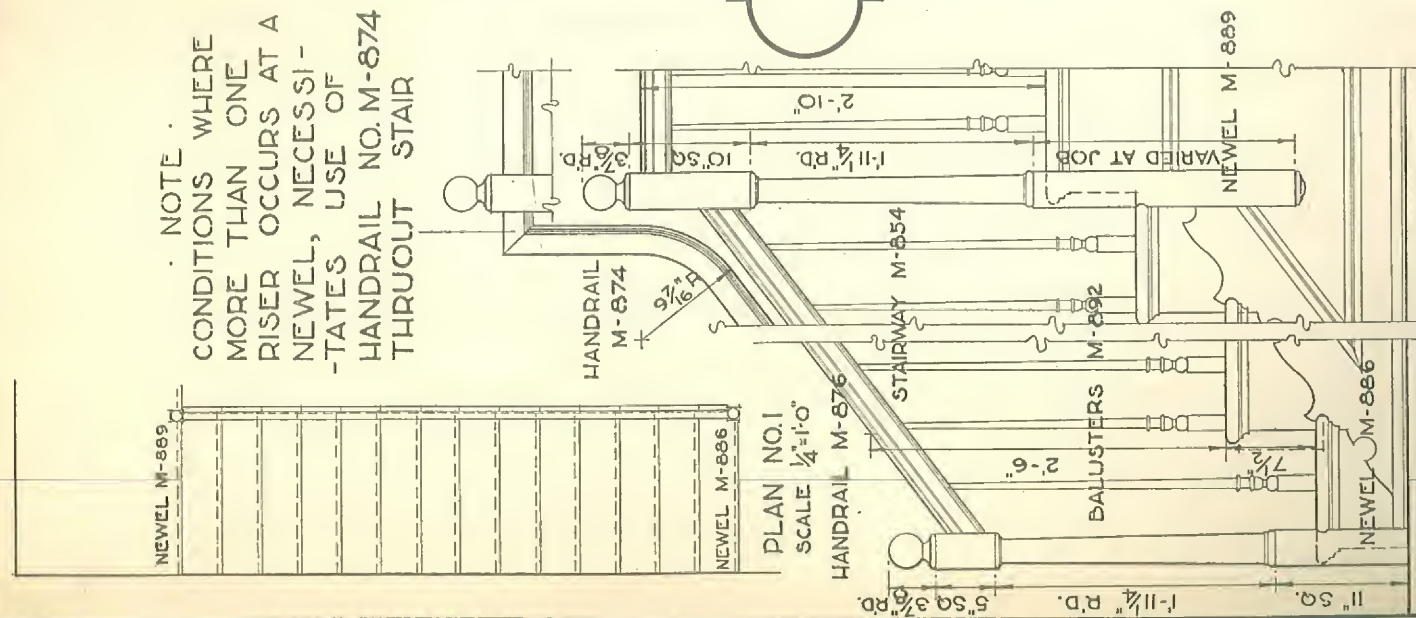

ELEVATION
SCALE $\frac{3}{4}"=1'-0"$


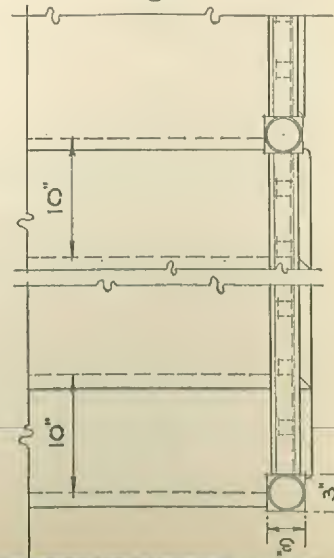


PLAN


FULL SIZE DETAIL OF LOWER PART OF NEWEL. UPPER PART OF NEWEL

FULL SIZE BASE OF ANGLE & LANDING NEWEL


DETAILS OF STAIR PARTS

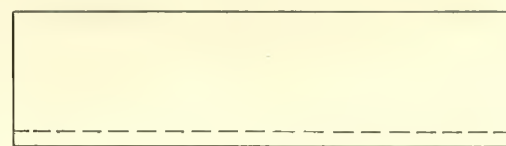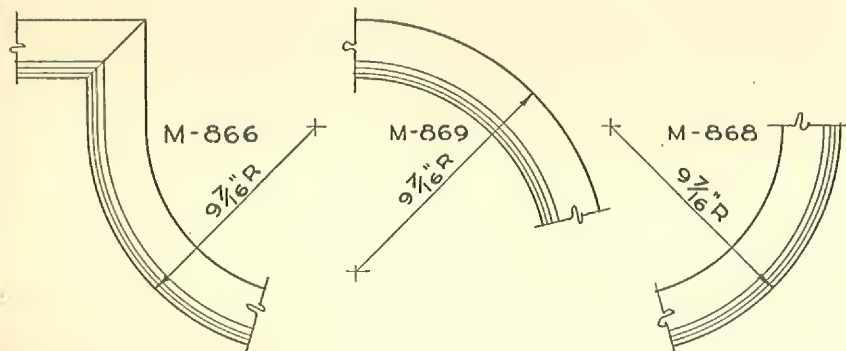


M-879

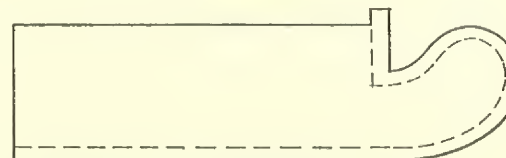


M-881

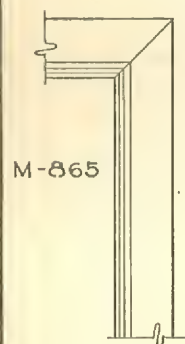


M-865

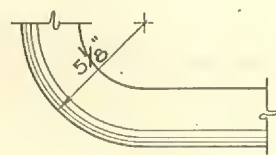


M-870

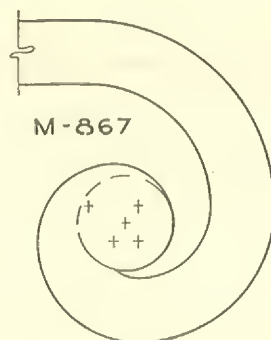


M-867

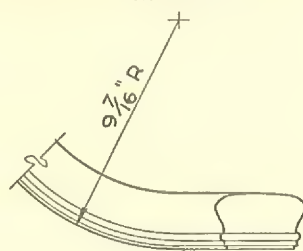

M-872

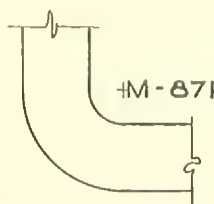

M-871

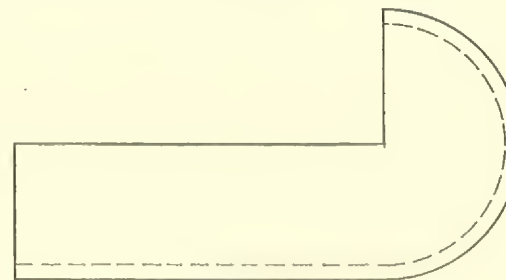

M-880



M-896

STARTING STEPS $\frac{1}{4}$ RISERS
SCALE $\frac{3}{4}$ " = 1'-0"



M-873

RAIL PARTS
SCALE $1\frac{1}{2}$ " = 1'-0"



M-877



M-874




M-876



M-875


STAIR RAILS
SCALE = HALF FULL SIZE

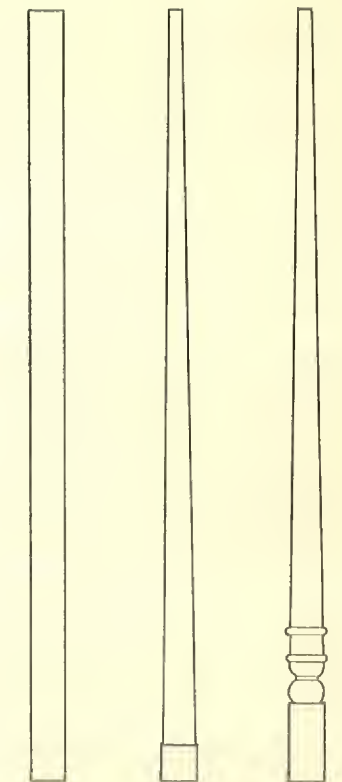


M-893

M-894


M-892



BALUSTERS

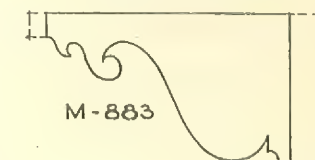














M-883

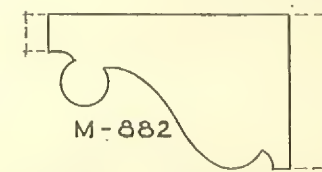

M-882

STAIR BRACKETS
SCALE $1\frac{1}{2}$ " = 1'-0"


RAIL PARTS

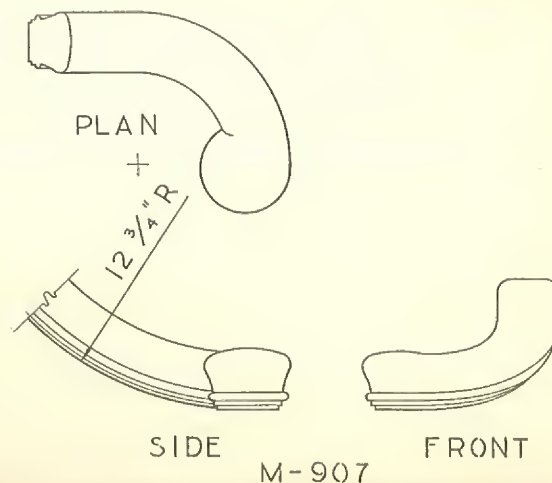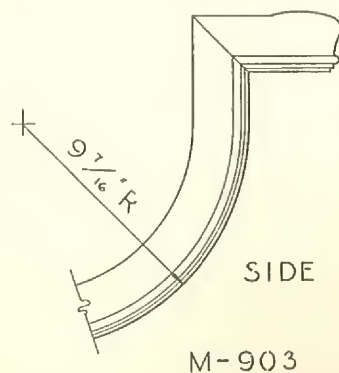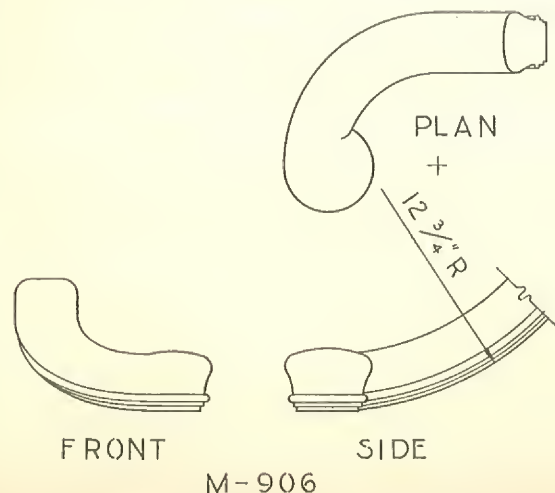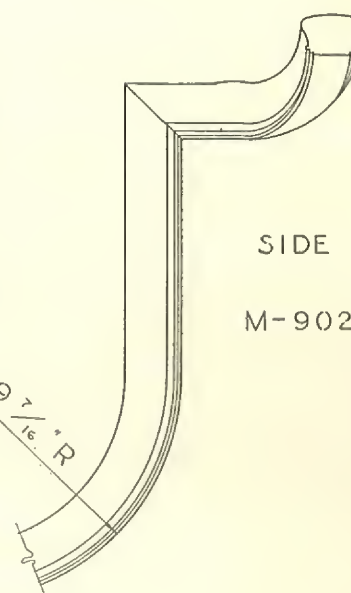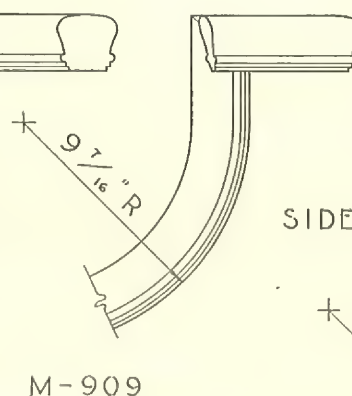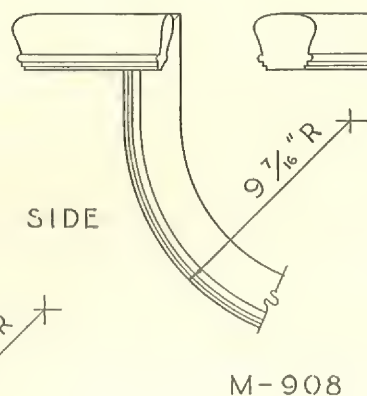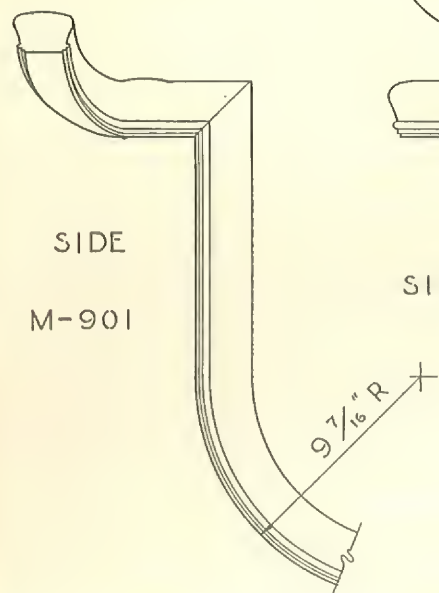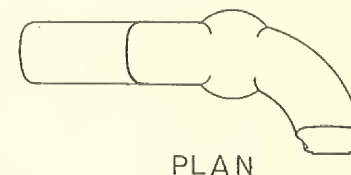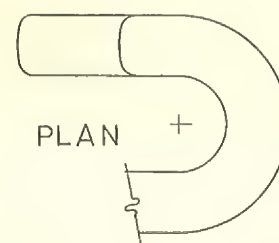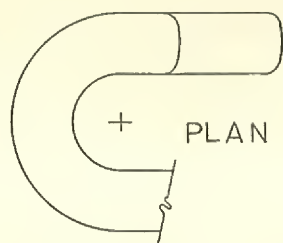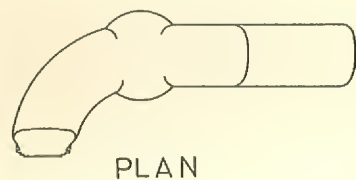

SCALE 1 1/2" = 1'-0"



STAIR NEWEL POST DETAILS
SCALE $1\frac{1}{2}" = 1'-0"$



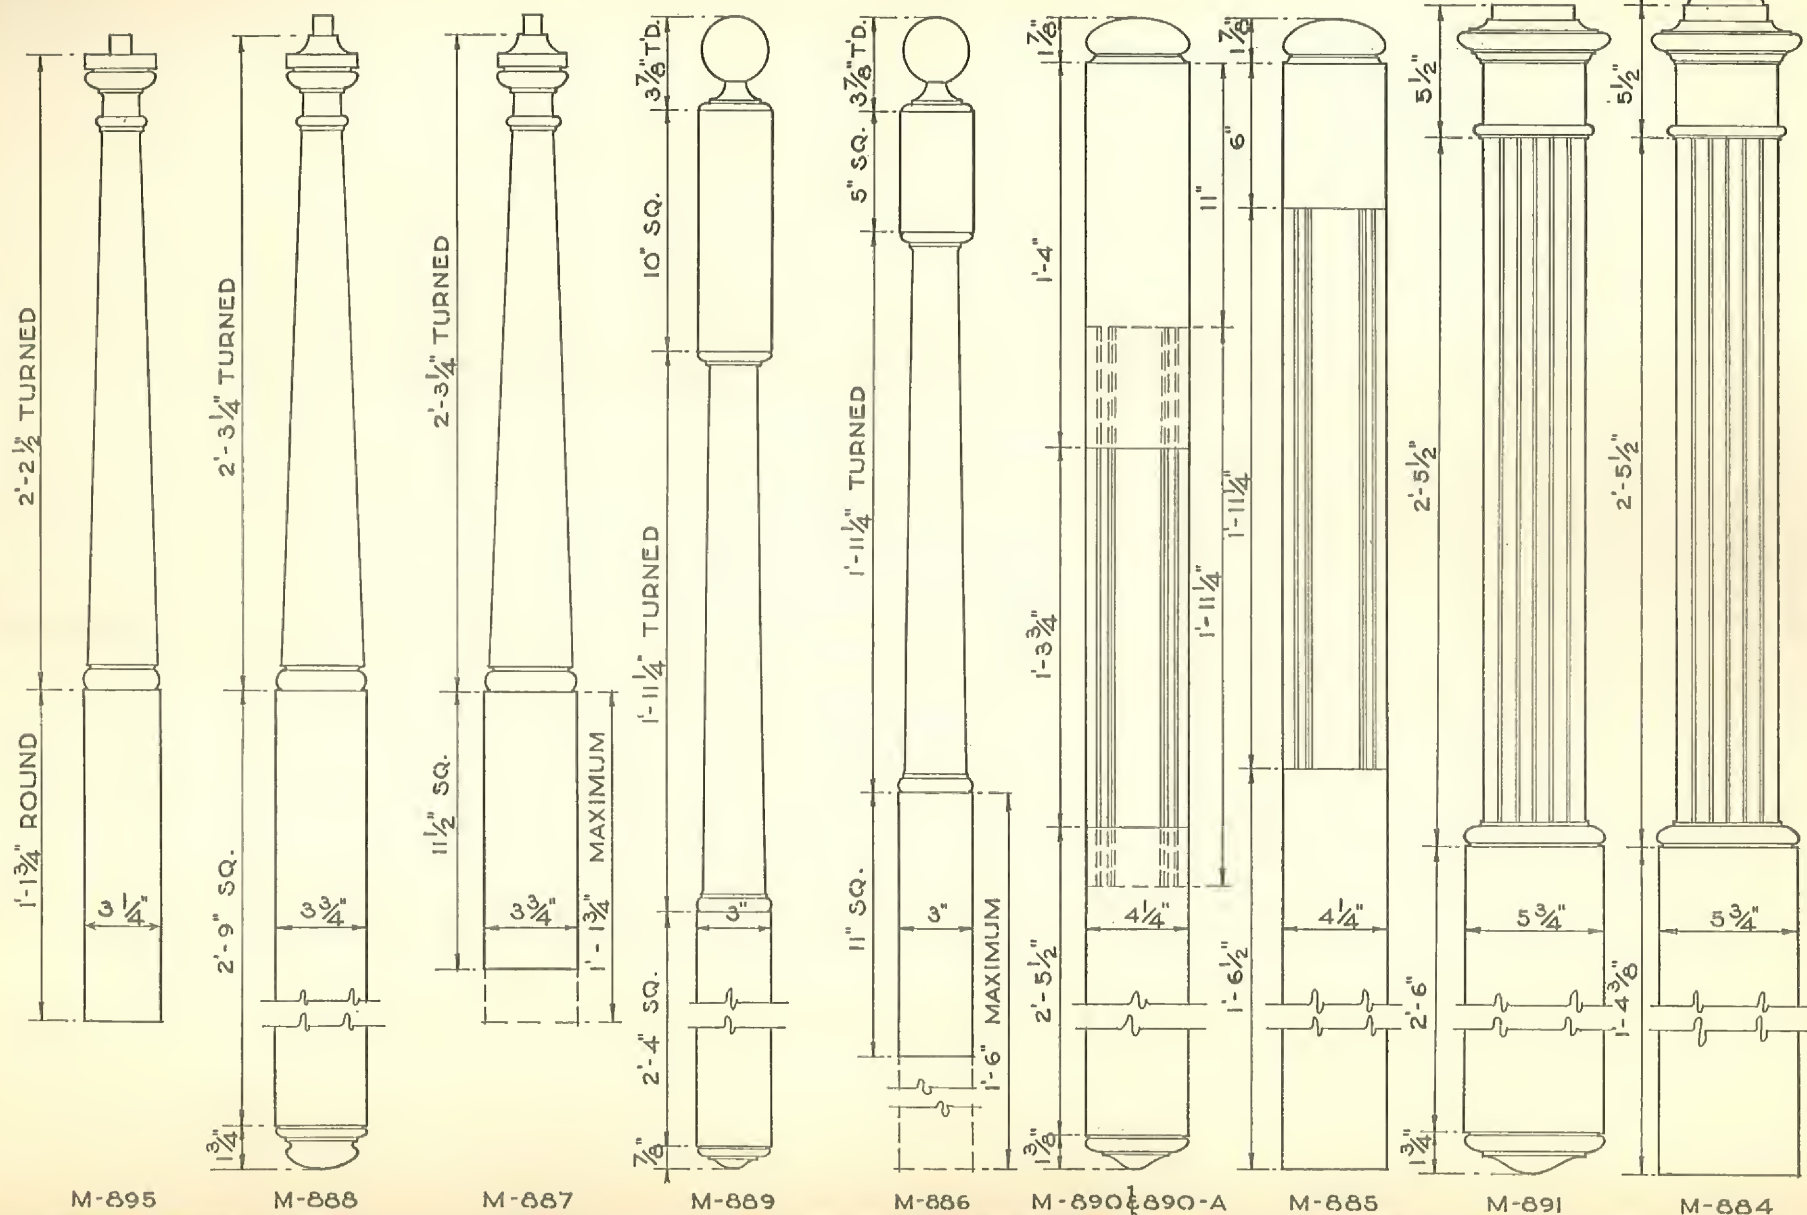


DOOR M-1052

FULL SIZE SECTIONS OF DOORS 1 3/8" THICK

DOOR M-1051

DOOR M-1050

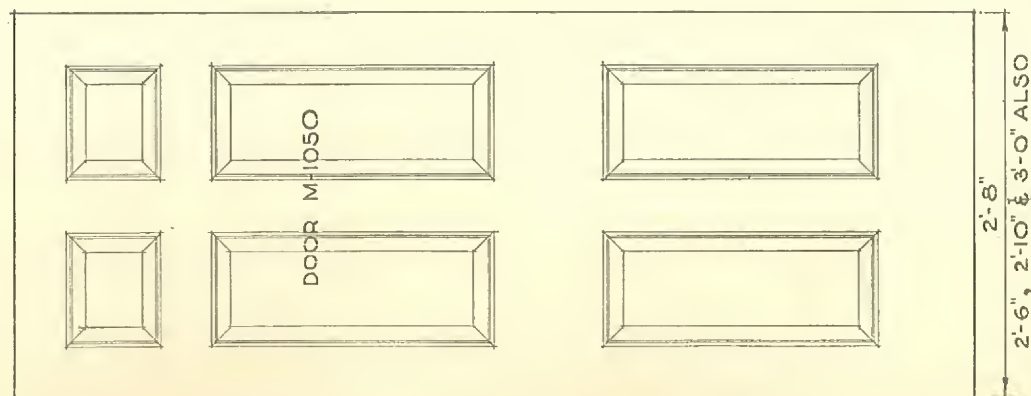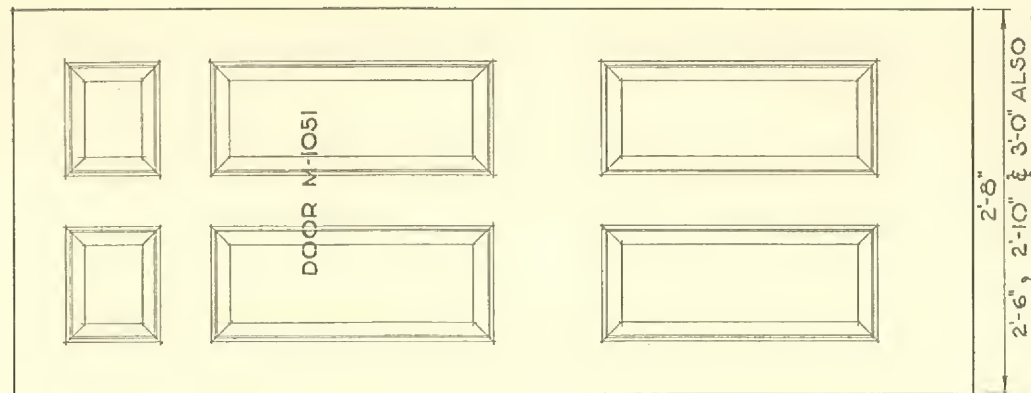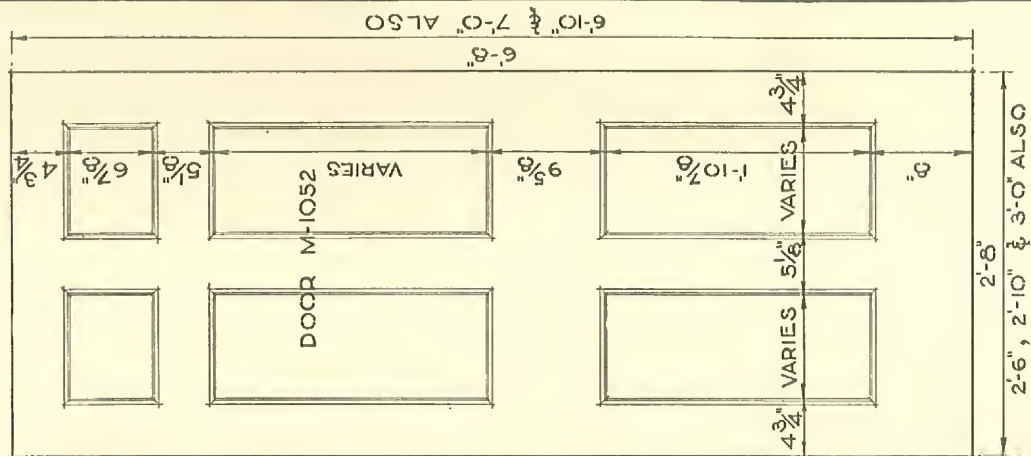

INTERIOR DOORS SCALE 3/4"=1'-0"


DOOR M-1052

DOOR M-1051


DOOR M-1050

FULL SIZE SECTIONS OF DOORS 1 3/4" THICK



DOOR M-1053
FULL SIZE SECTIONS OF DOORS 1 $\frac{3}{8}$ " THICK

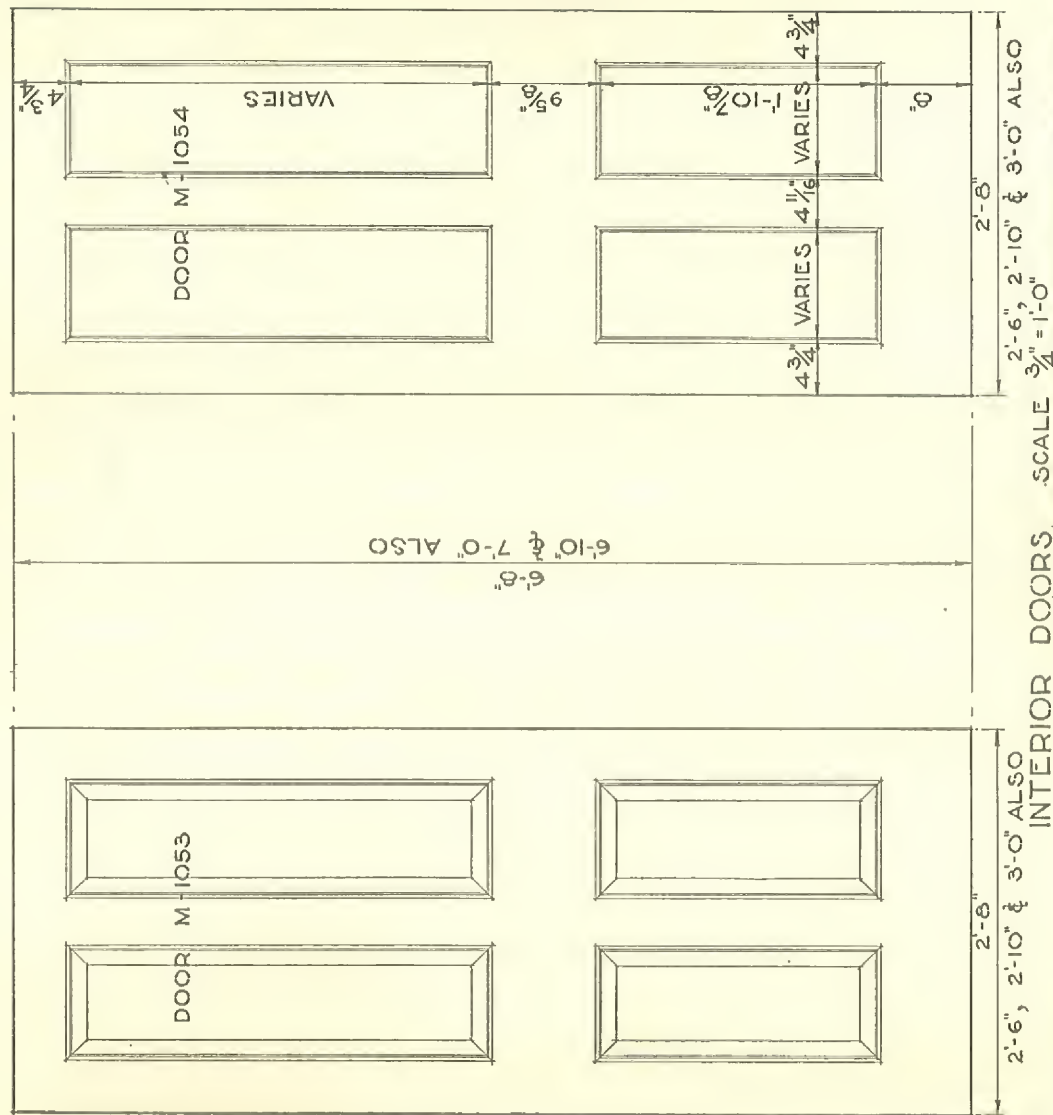




DOOR M-1053
FULL SIZE SECTIONS OF DOORS 1 $\frac{3}{4}$ " THICK



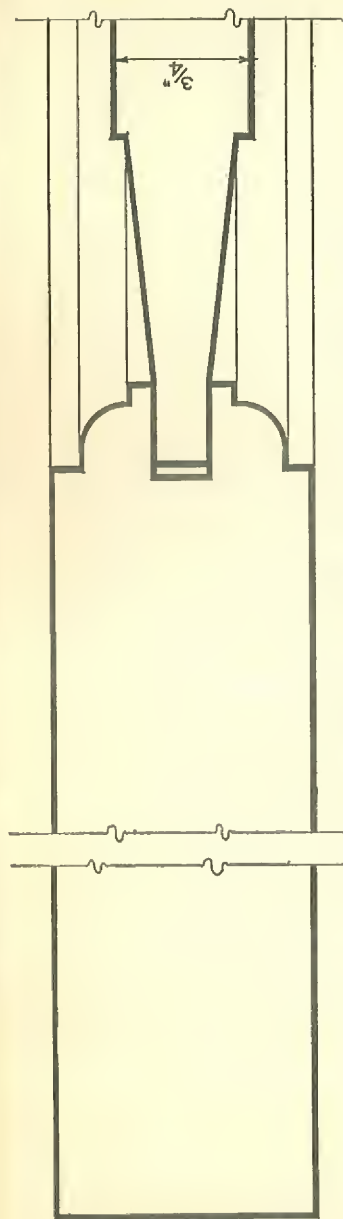


FULL SIZE SECTION OF DOORS 1 3/8" THICK


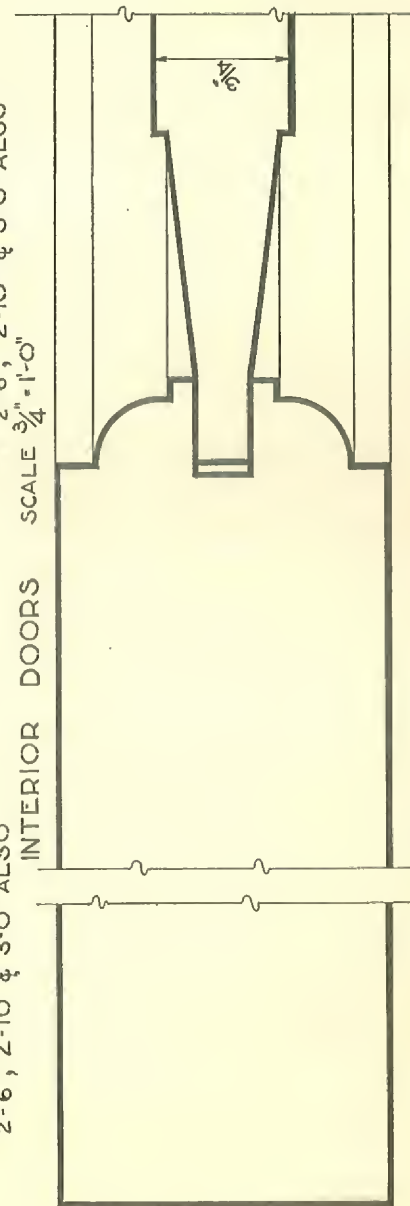
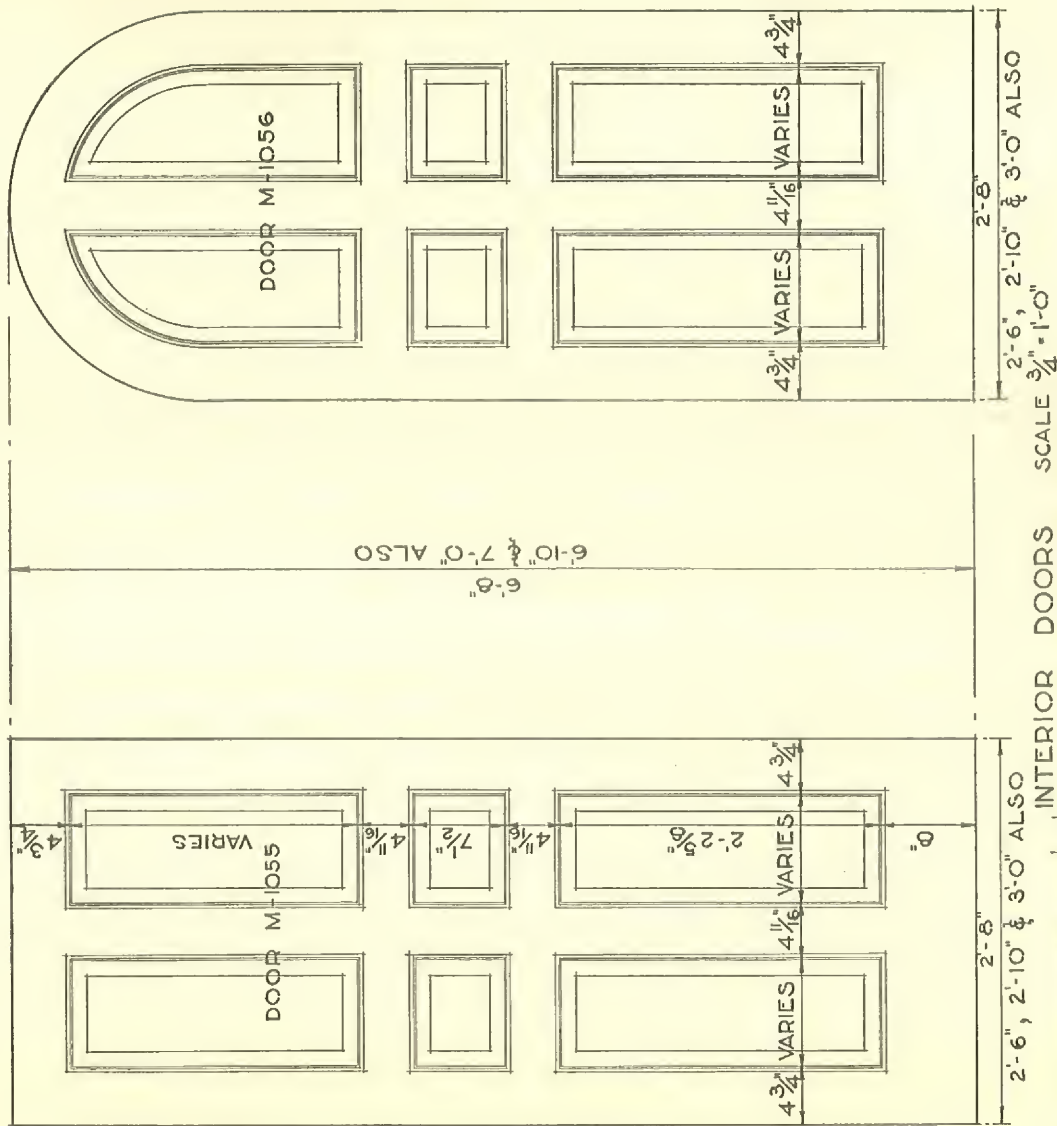



FULL SIZE SECTION OF DOORS 1 3/4" THICK

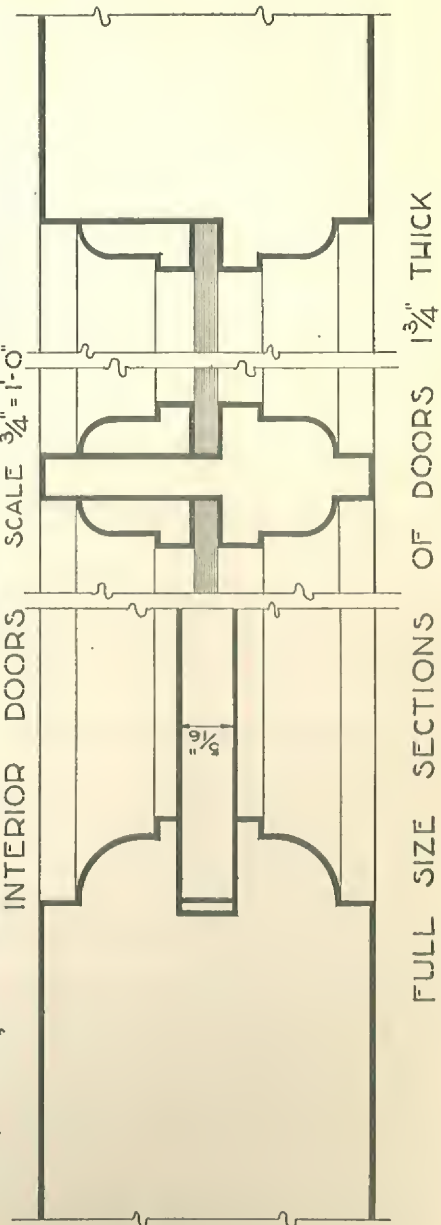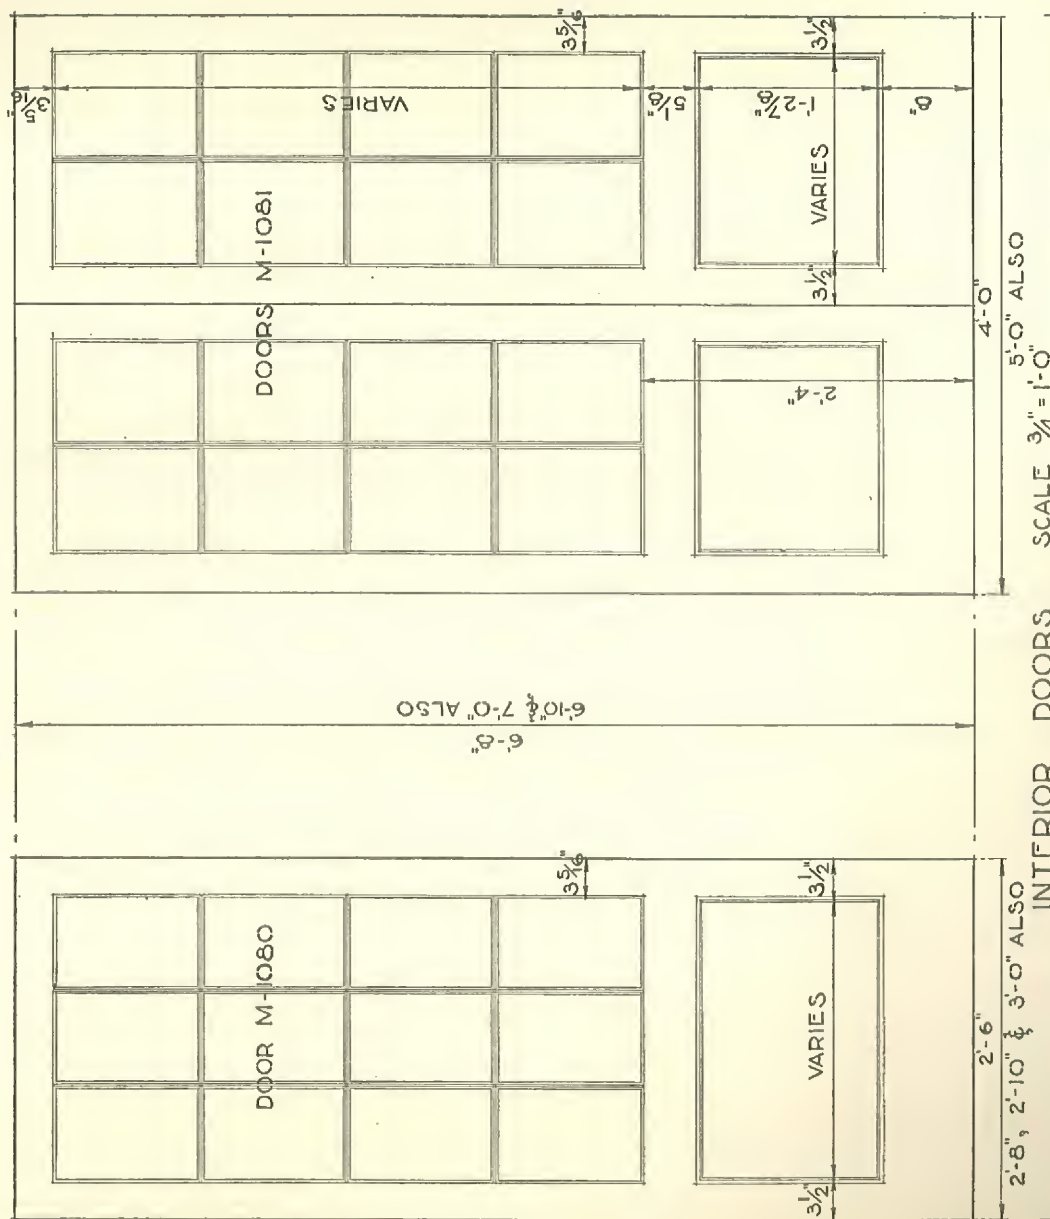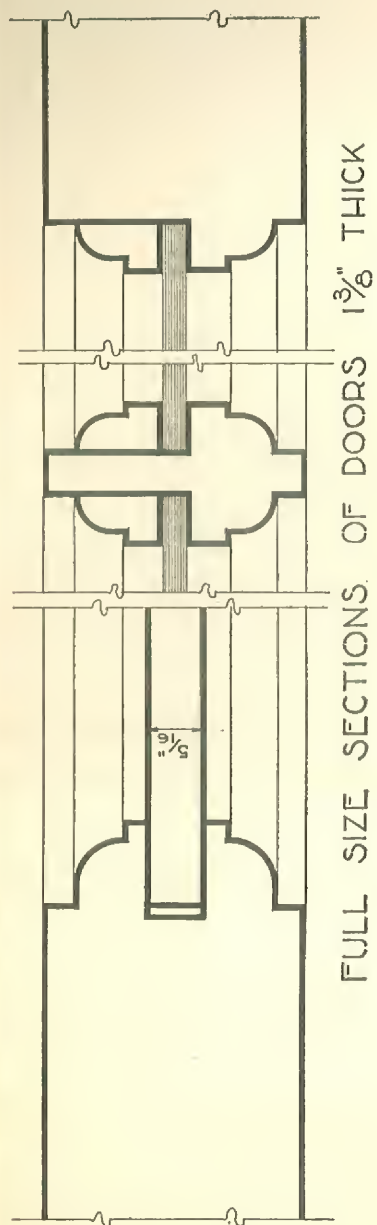

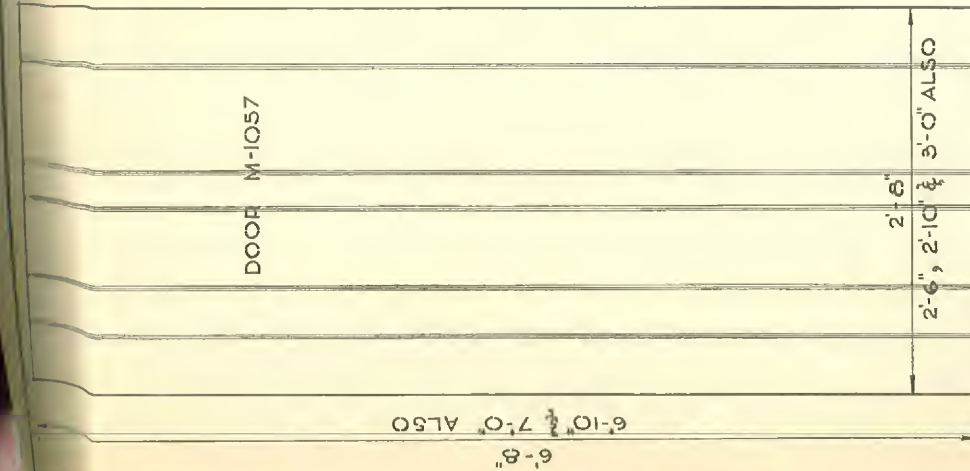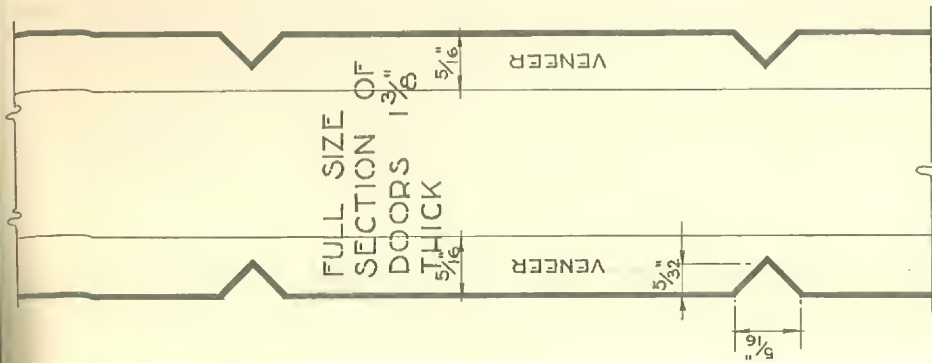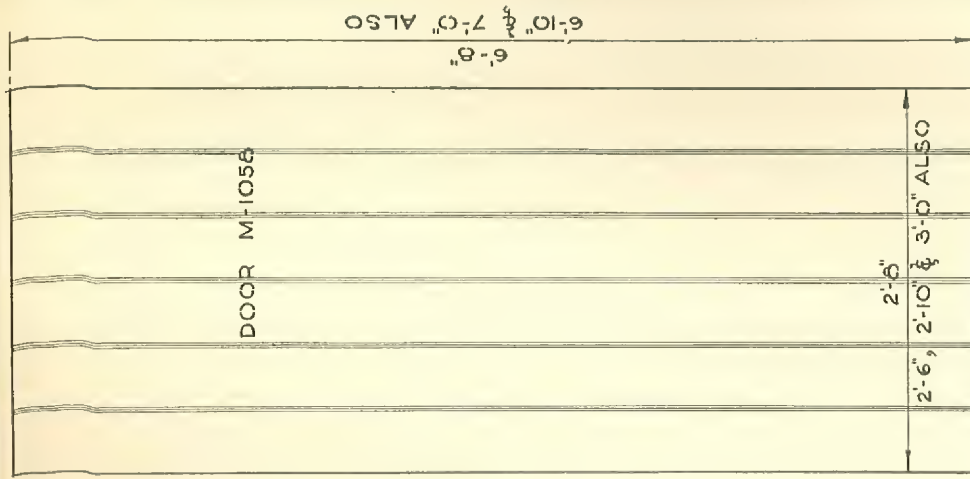

INTERIOR DOORS

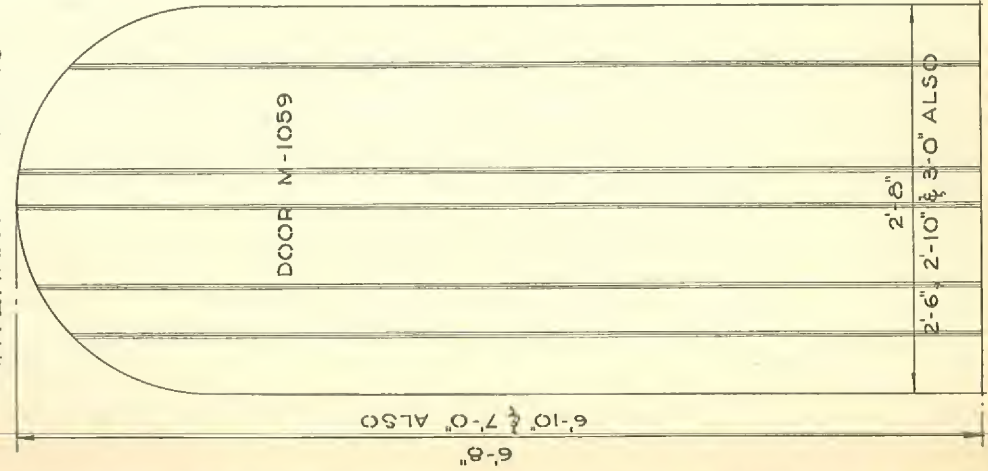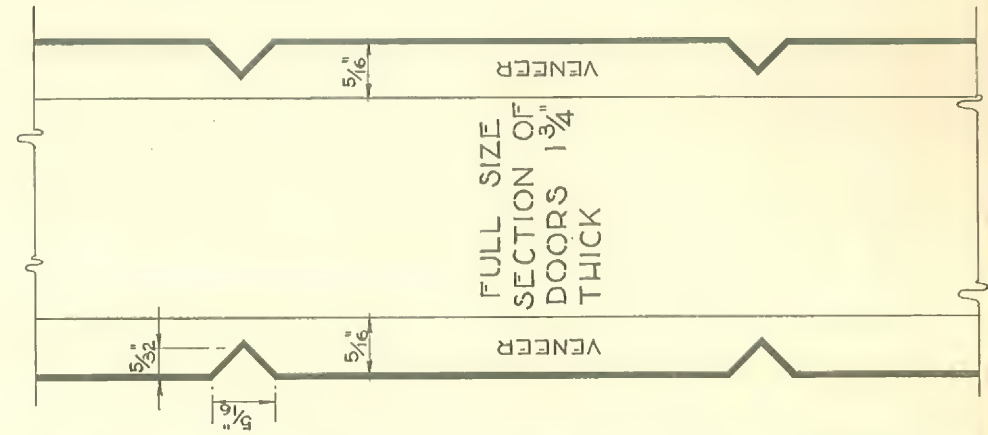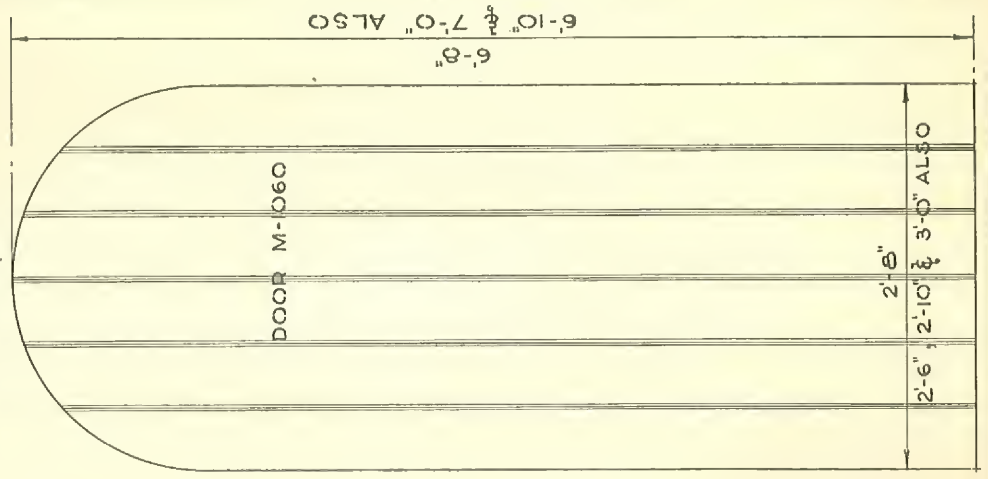

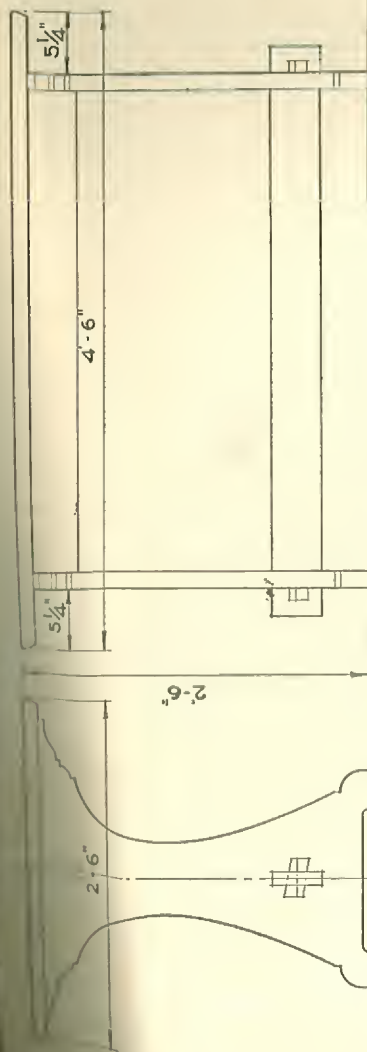


END ELEVATION OF TABLE
SCALE $\frac{3}{4}$ " = 1'-0"

SIDE ELEVATION OF TABLE

NOTE.
COLONIAL SEATS M-551
INTERIOR & EXTERIOR
ARE SIMILAR.






BREAKFAST NOOK M-550


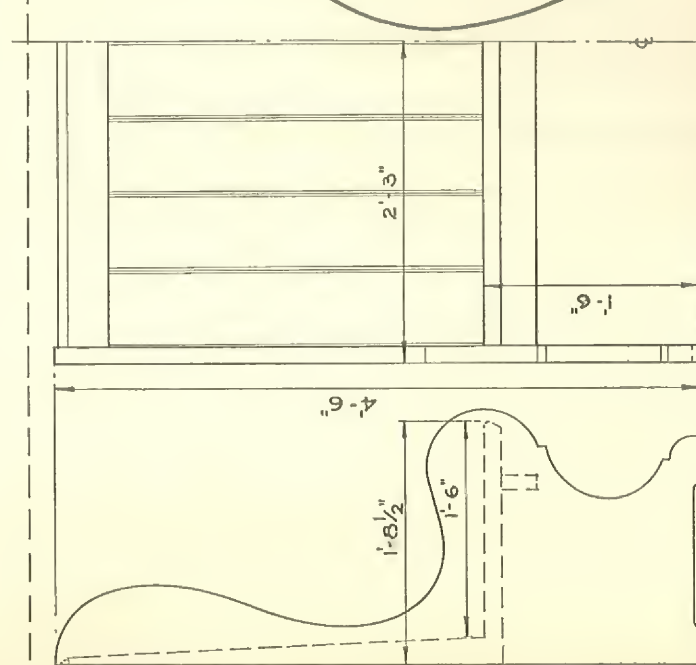


END ELEVATION - BENCH - FRONT ELEVATION
SCALE $\frac{3}{4}$ " = 1'-0"


END ELEVATION OF BENCH
SCALE $\frac{3}{4}$ " = 1'-0"

HALF END ELEVATION OF TABLE
SCALE $\frac{3}{4}$ " = 1'-0"

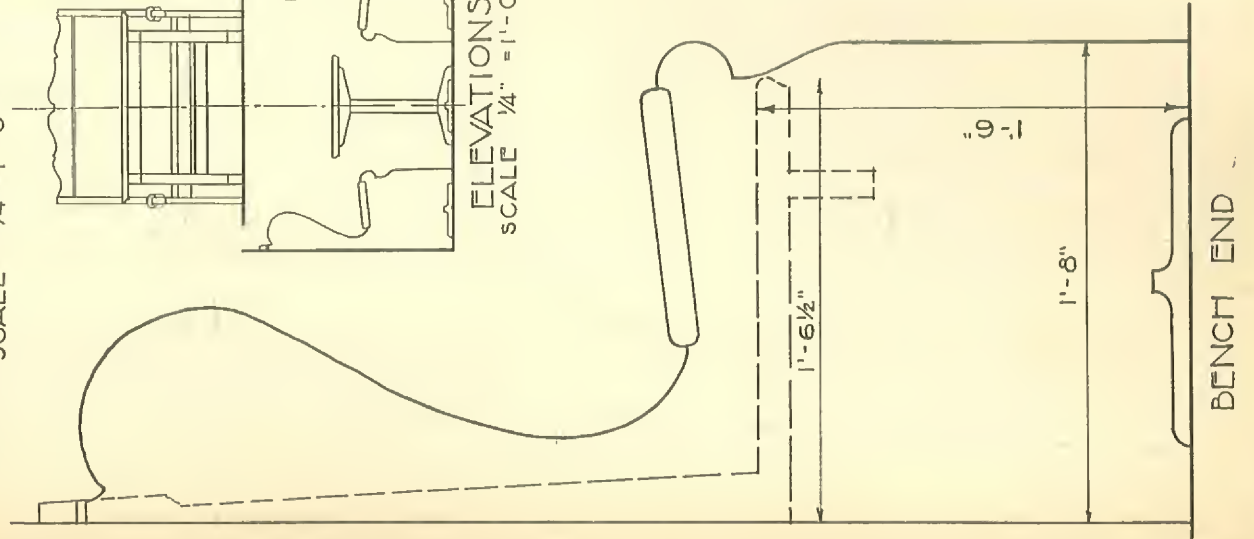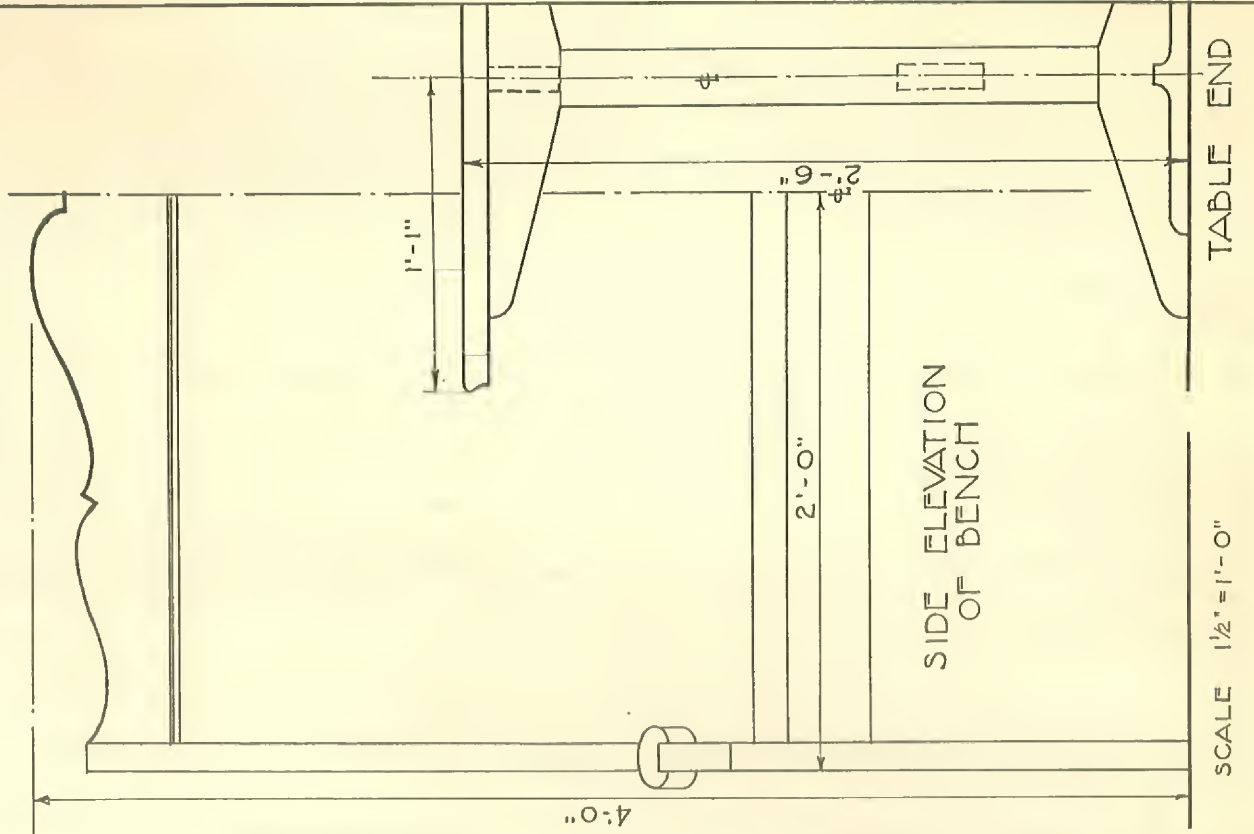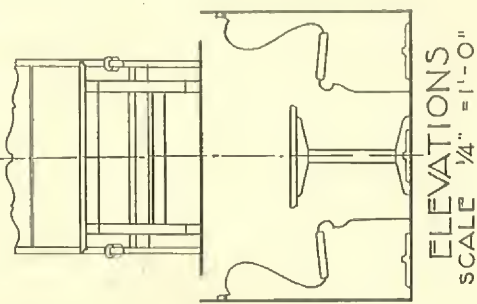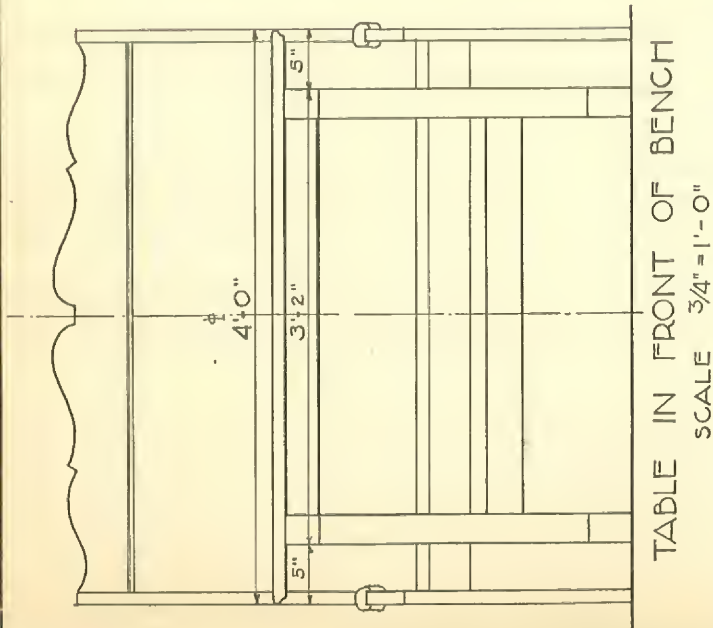
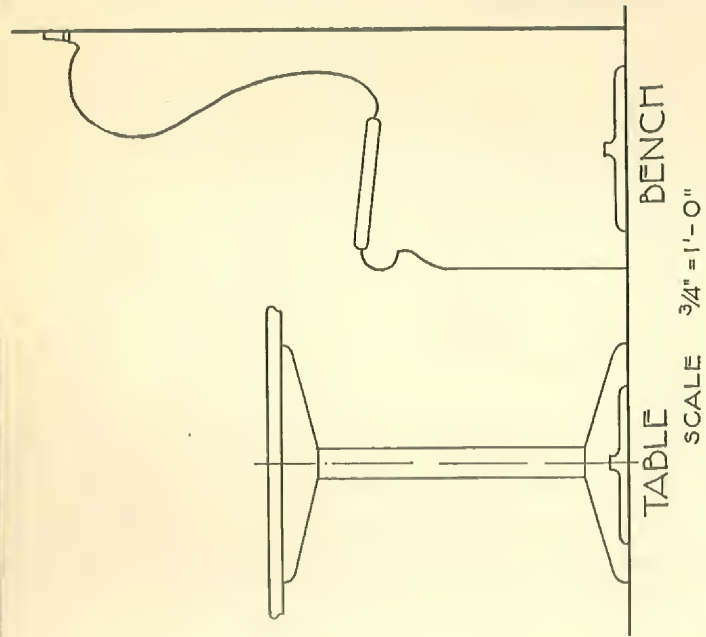


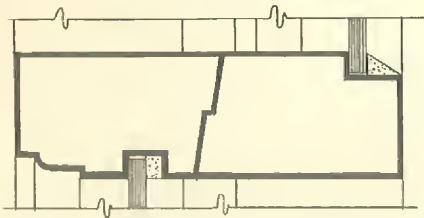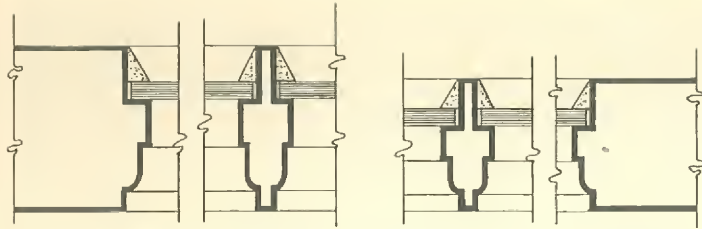



TYPICAL SASH LAYOUTS
SCALE 1/4" = 1'-0"

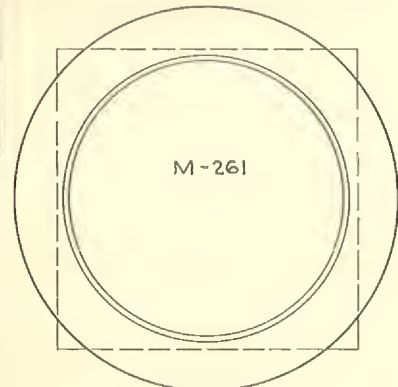


ELEVATION

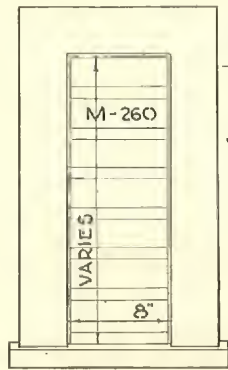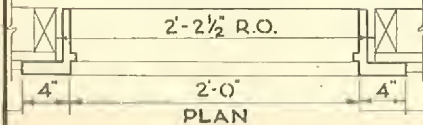



ELEVATION

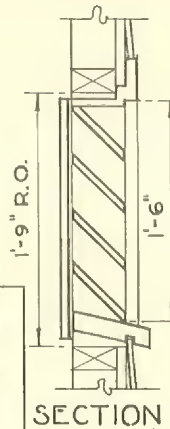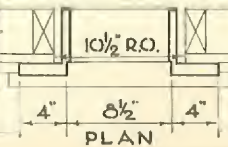


SECTION

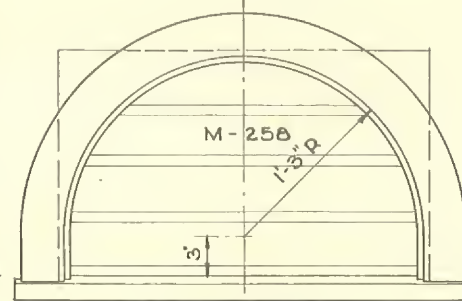


ELEVATION
2'-8 1/2" R.O.

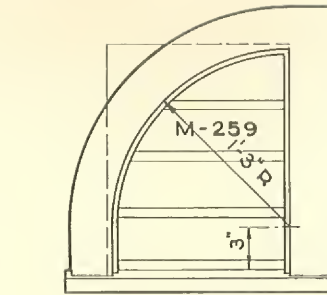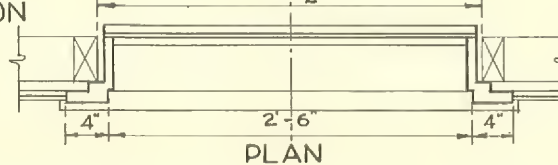





ELEVATION

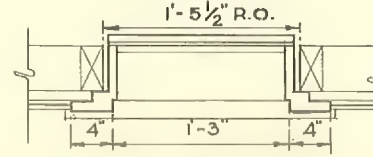





PLAN
SCALE 3/4" = 1'-0"

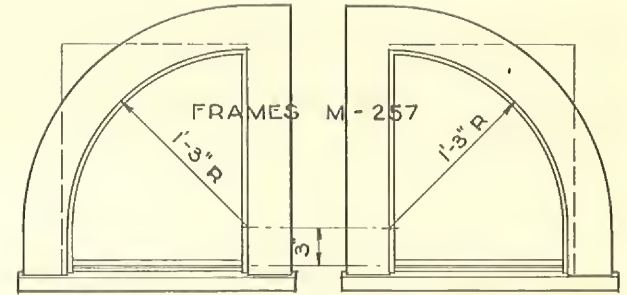


ELEVATION

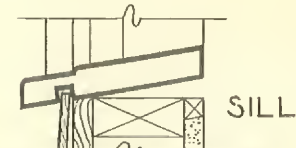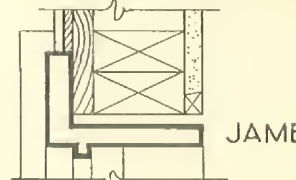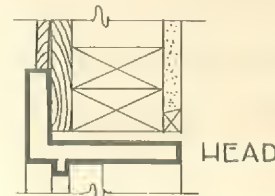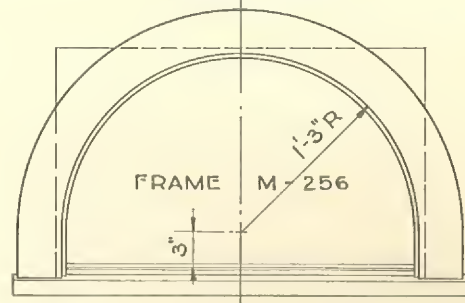

DETAIL OF FRAMES M-256-7
SCALE 1/2" = 1'-0"

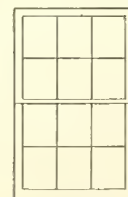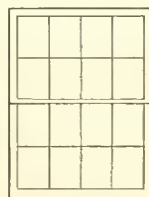

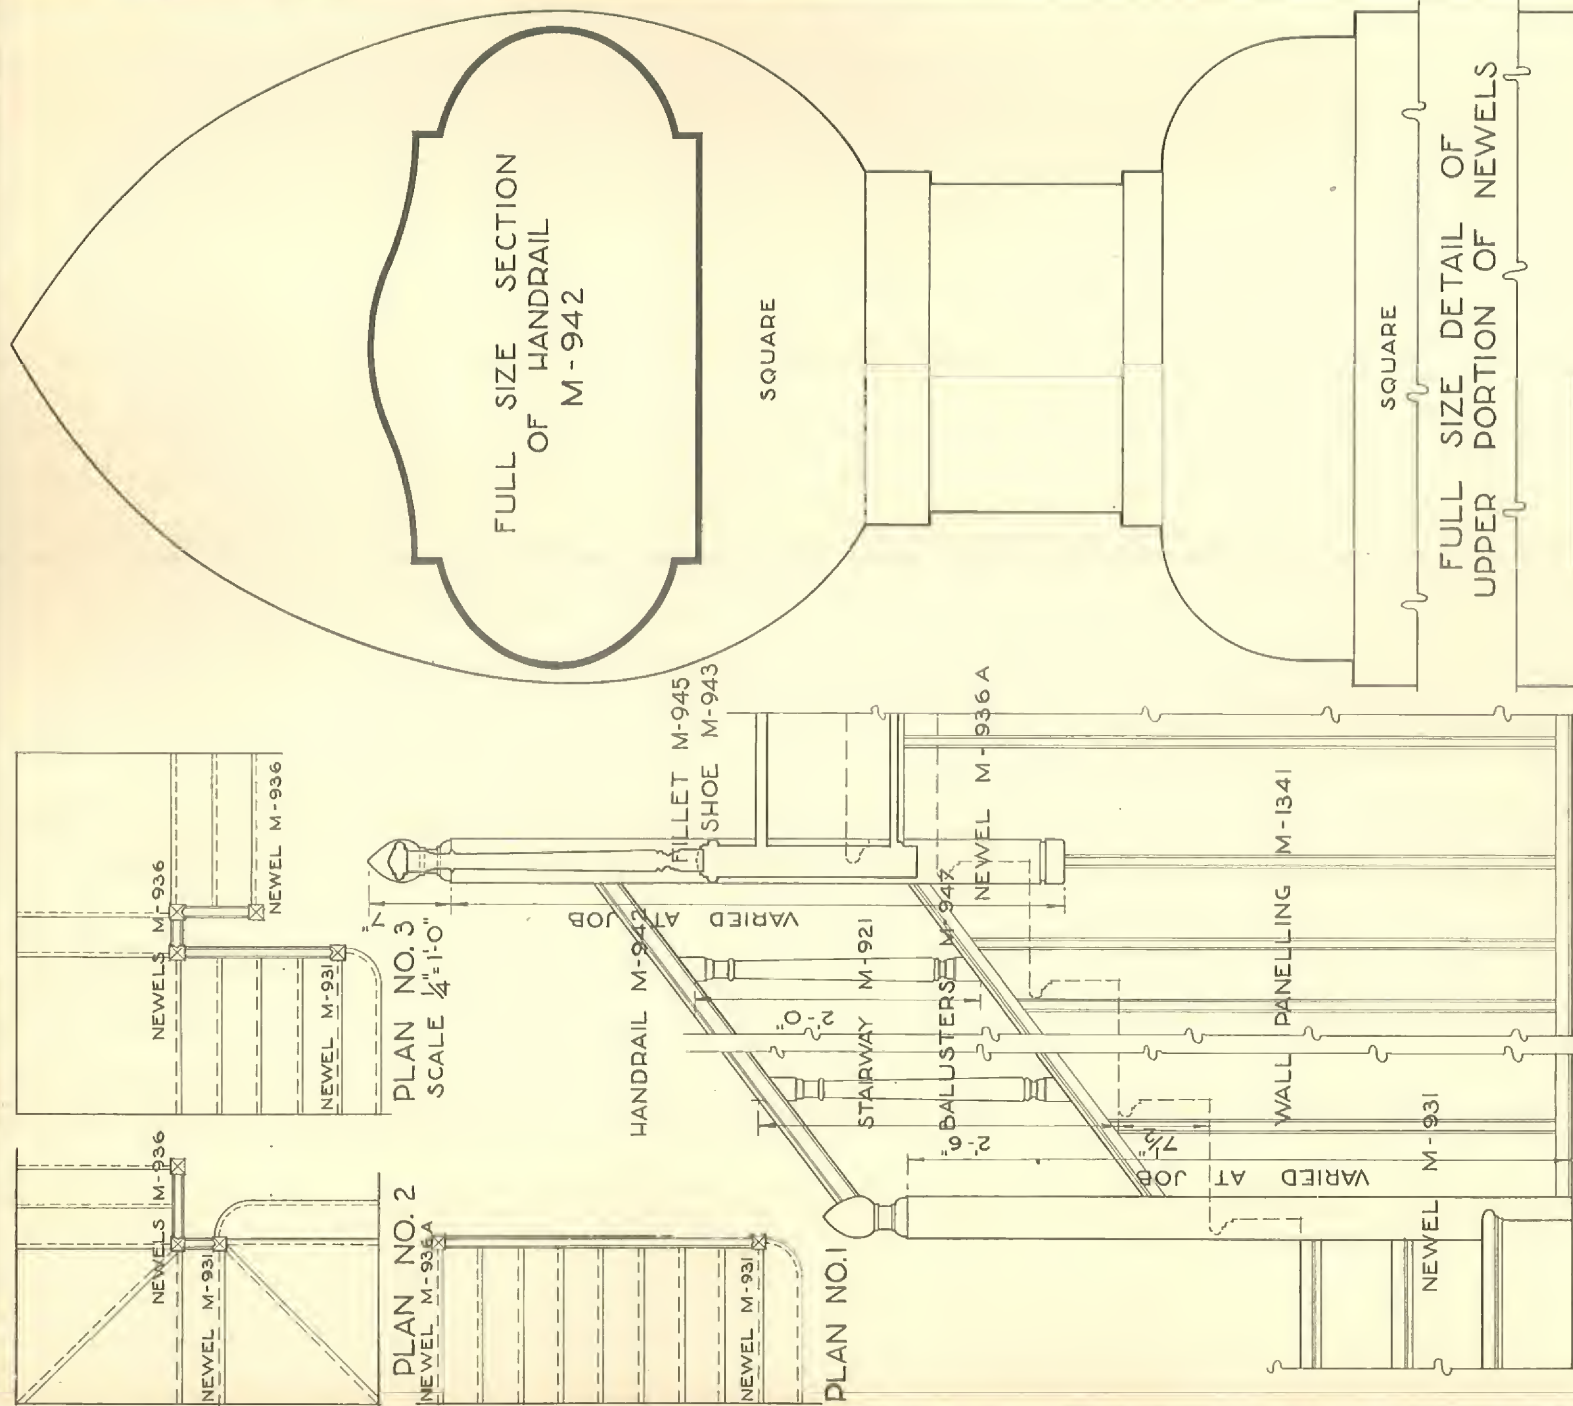


SQUARE

NOTE


NEWEL M-936A IS USED WHEN STAIRWAY IS CLOSED WITH PANELLING. IF STAIRWAY IS OPEN NEWEL M-936 IS USED AT THE ANGLES & LANDINGS WITH A DROP SIMILAR TO THE TOP.

FULL SIZE BASE OF ANGLE & LANDING NEWEL

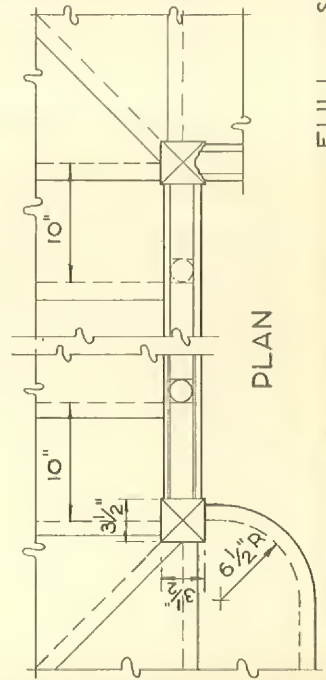


FULL SIZE PROFILE
OF MANTEL


FULL SIZE PROFILE
THRU FRAME

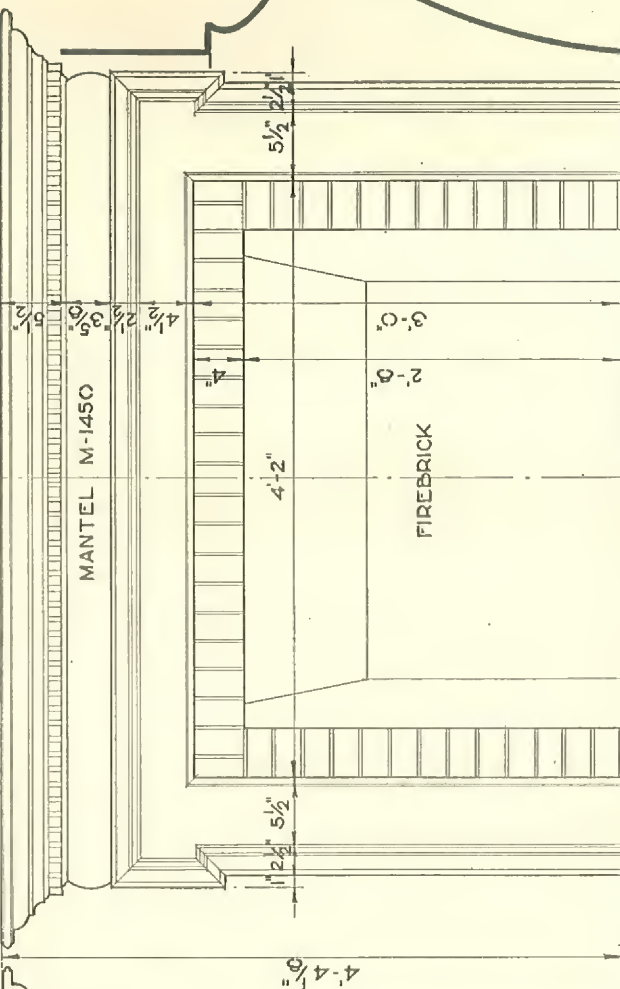


FRONT ELEVATION

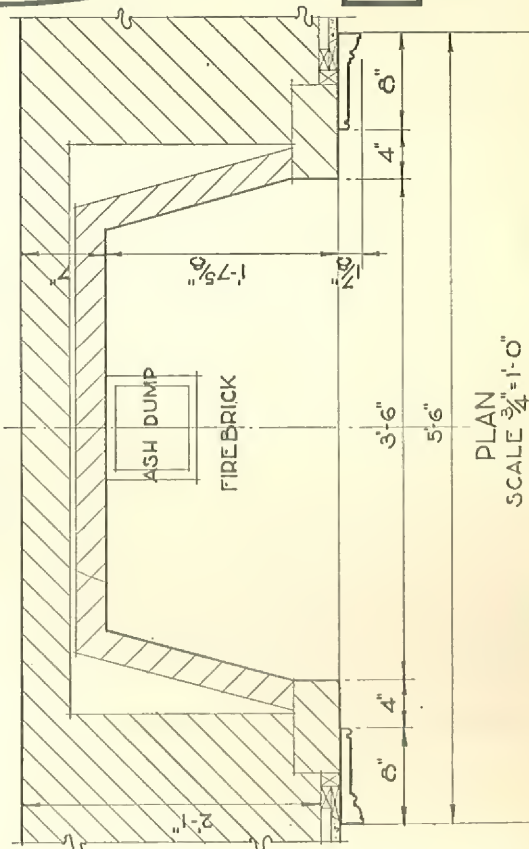

PLAN
SCALE $\frac{3}{4}$ "=1'-0"

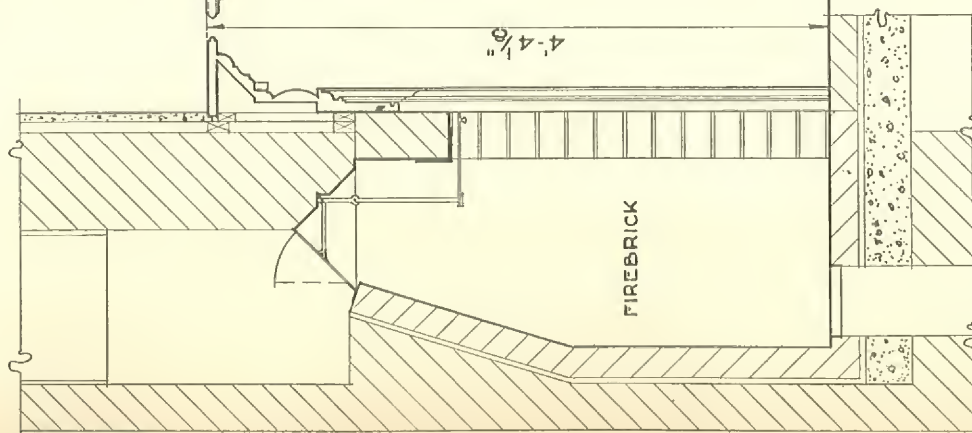


SECTION

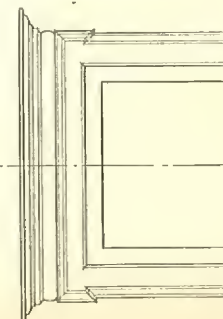


ELEVATION
SCALE $\frac{1}{4}$ "=1'-0"




FULL SIZE PROFILE
OF MANTEL SURROUND

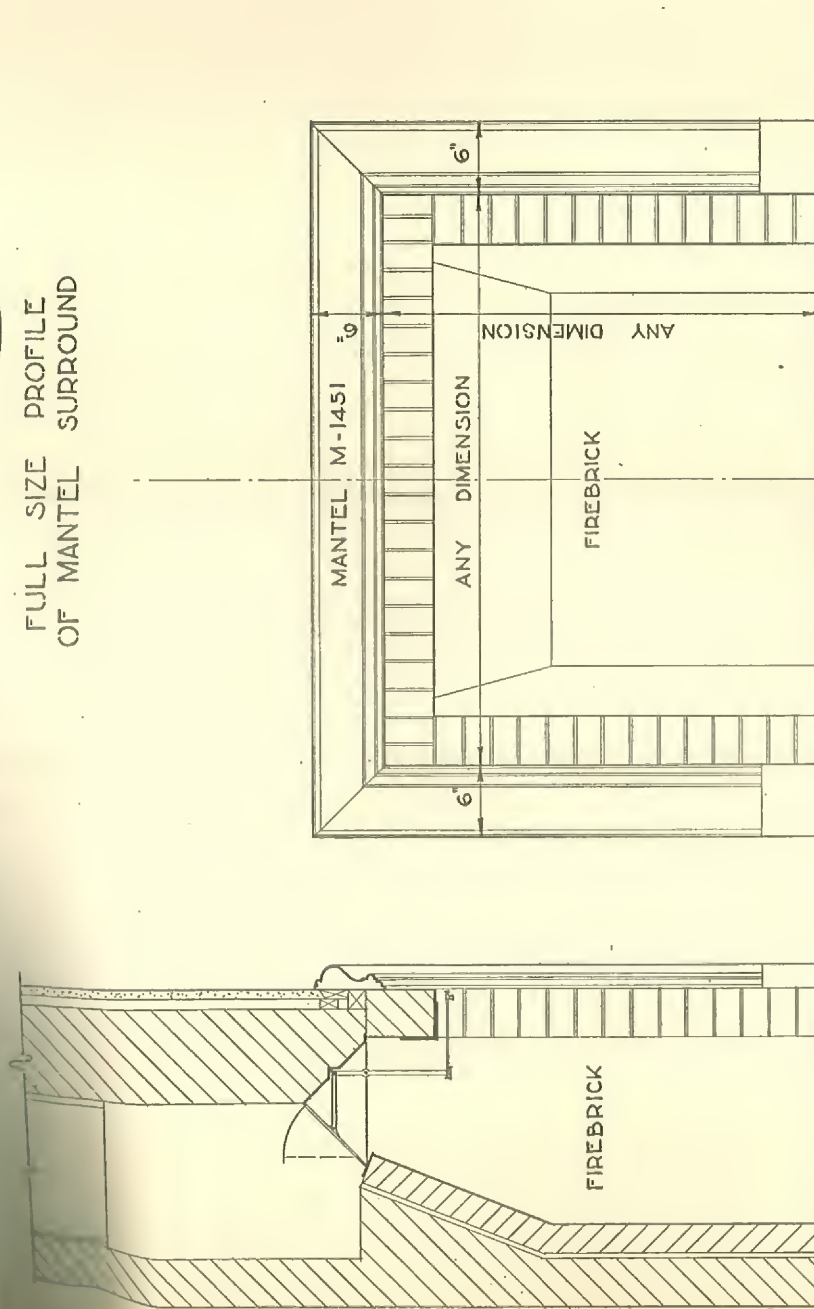

FRONT ELEVATION
SCALE $\frac{3}{4}$ " = 1'-0"

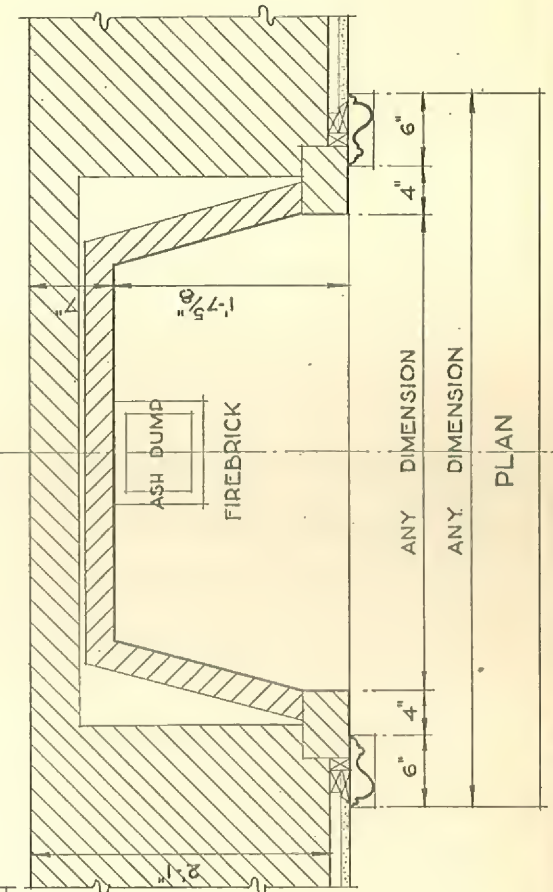

SECTION

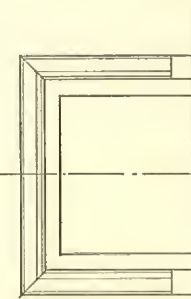


ELEVATION
SCALE $\frac{1}{4}$ " = 1'-0"







ANY DIMENSION
ANY DIMENSION
PLAN

STAIR PARTS

MORGAN

INDEX SHEET NO. 34

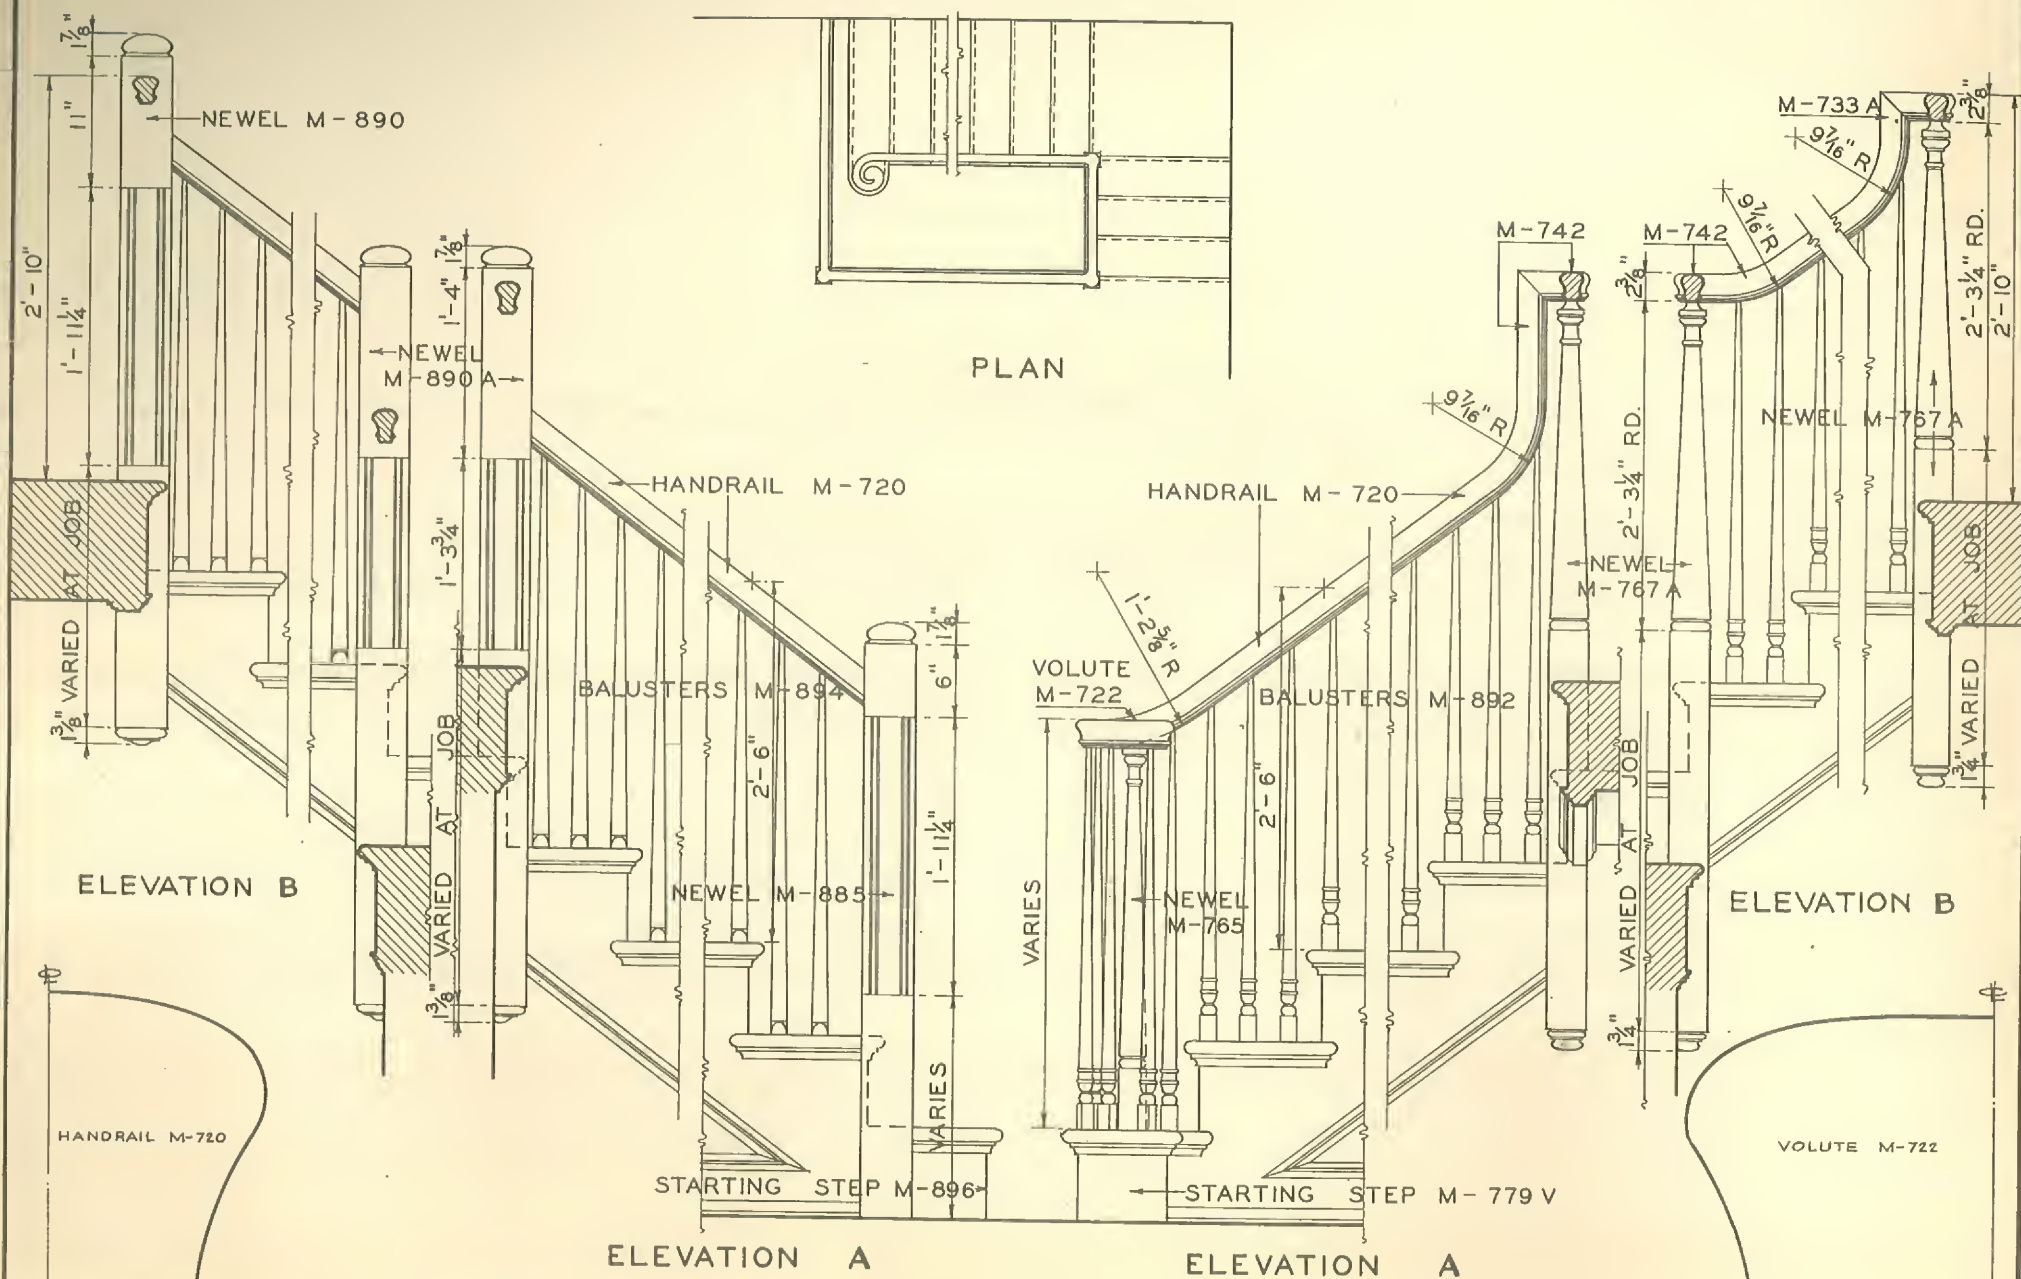

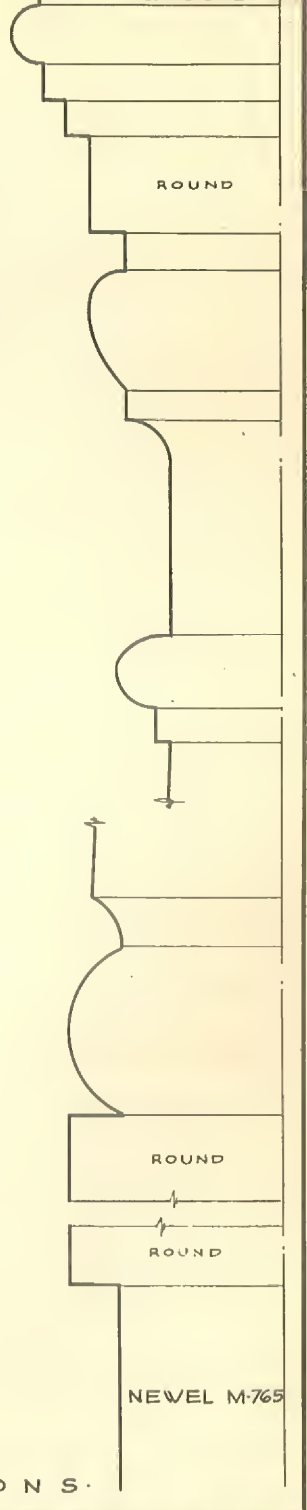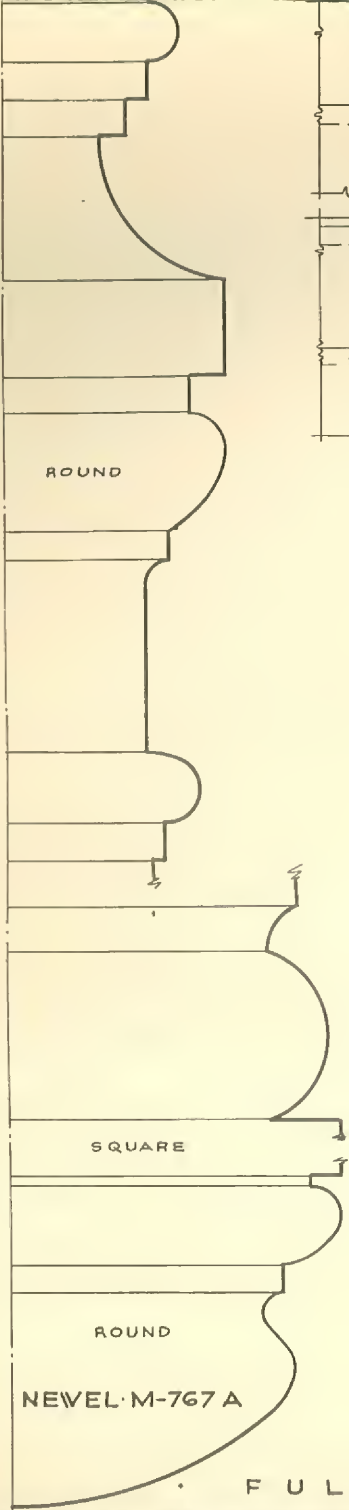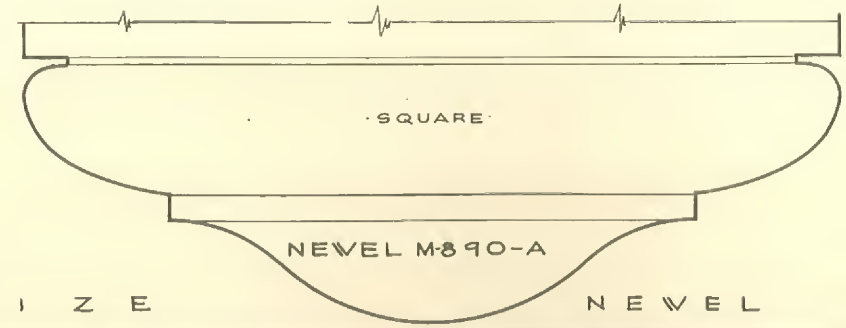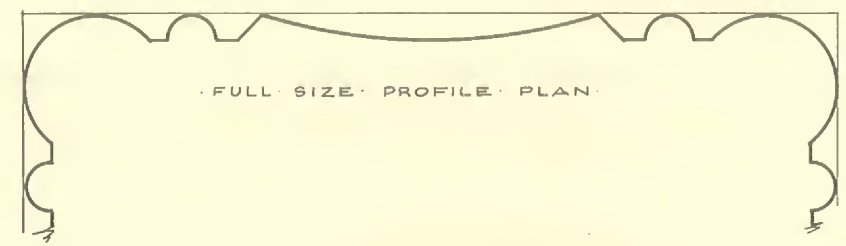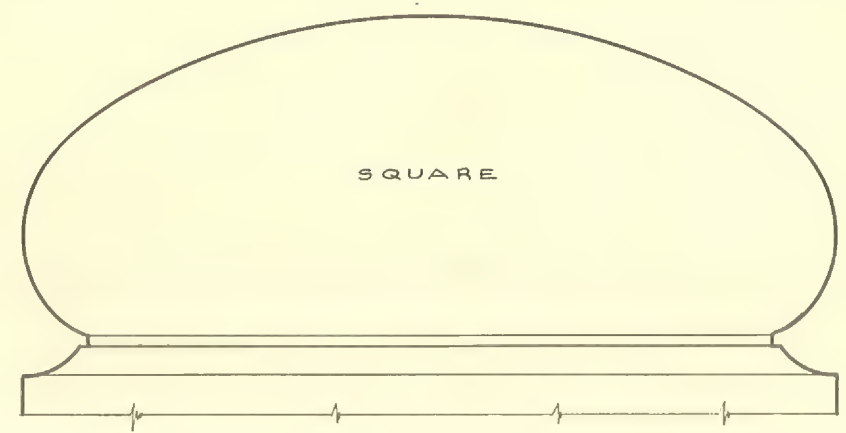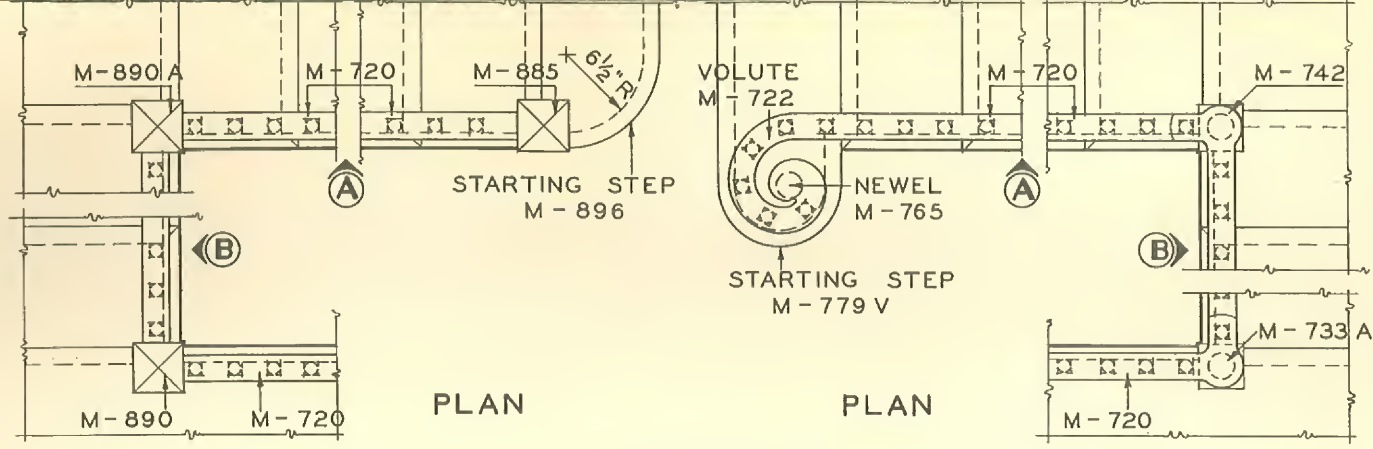






FULL SIZE NEWEL SECTIONS

STAIR PARTS

MORGAN

INDEX SHEET NO. 34

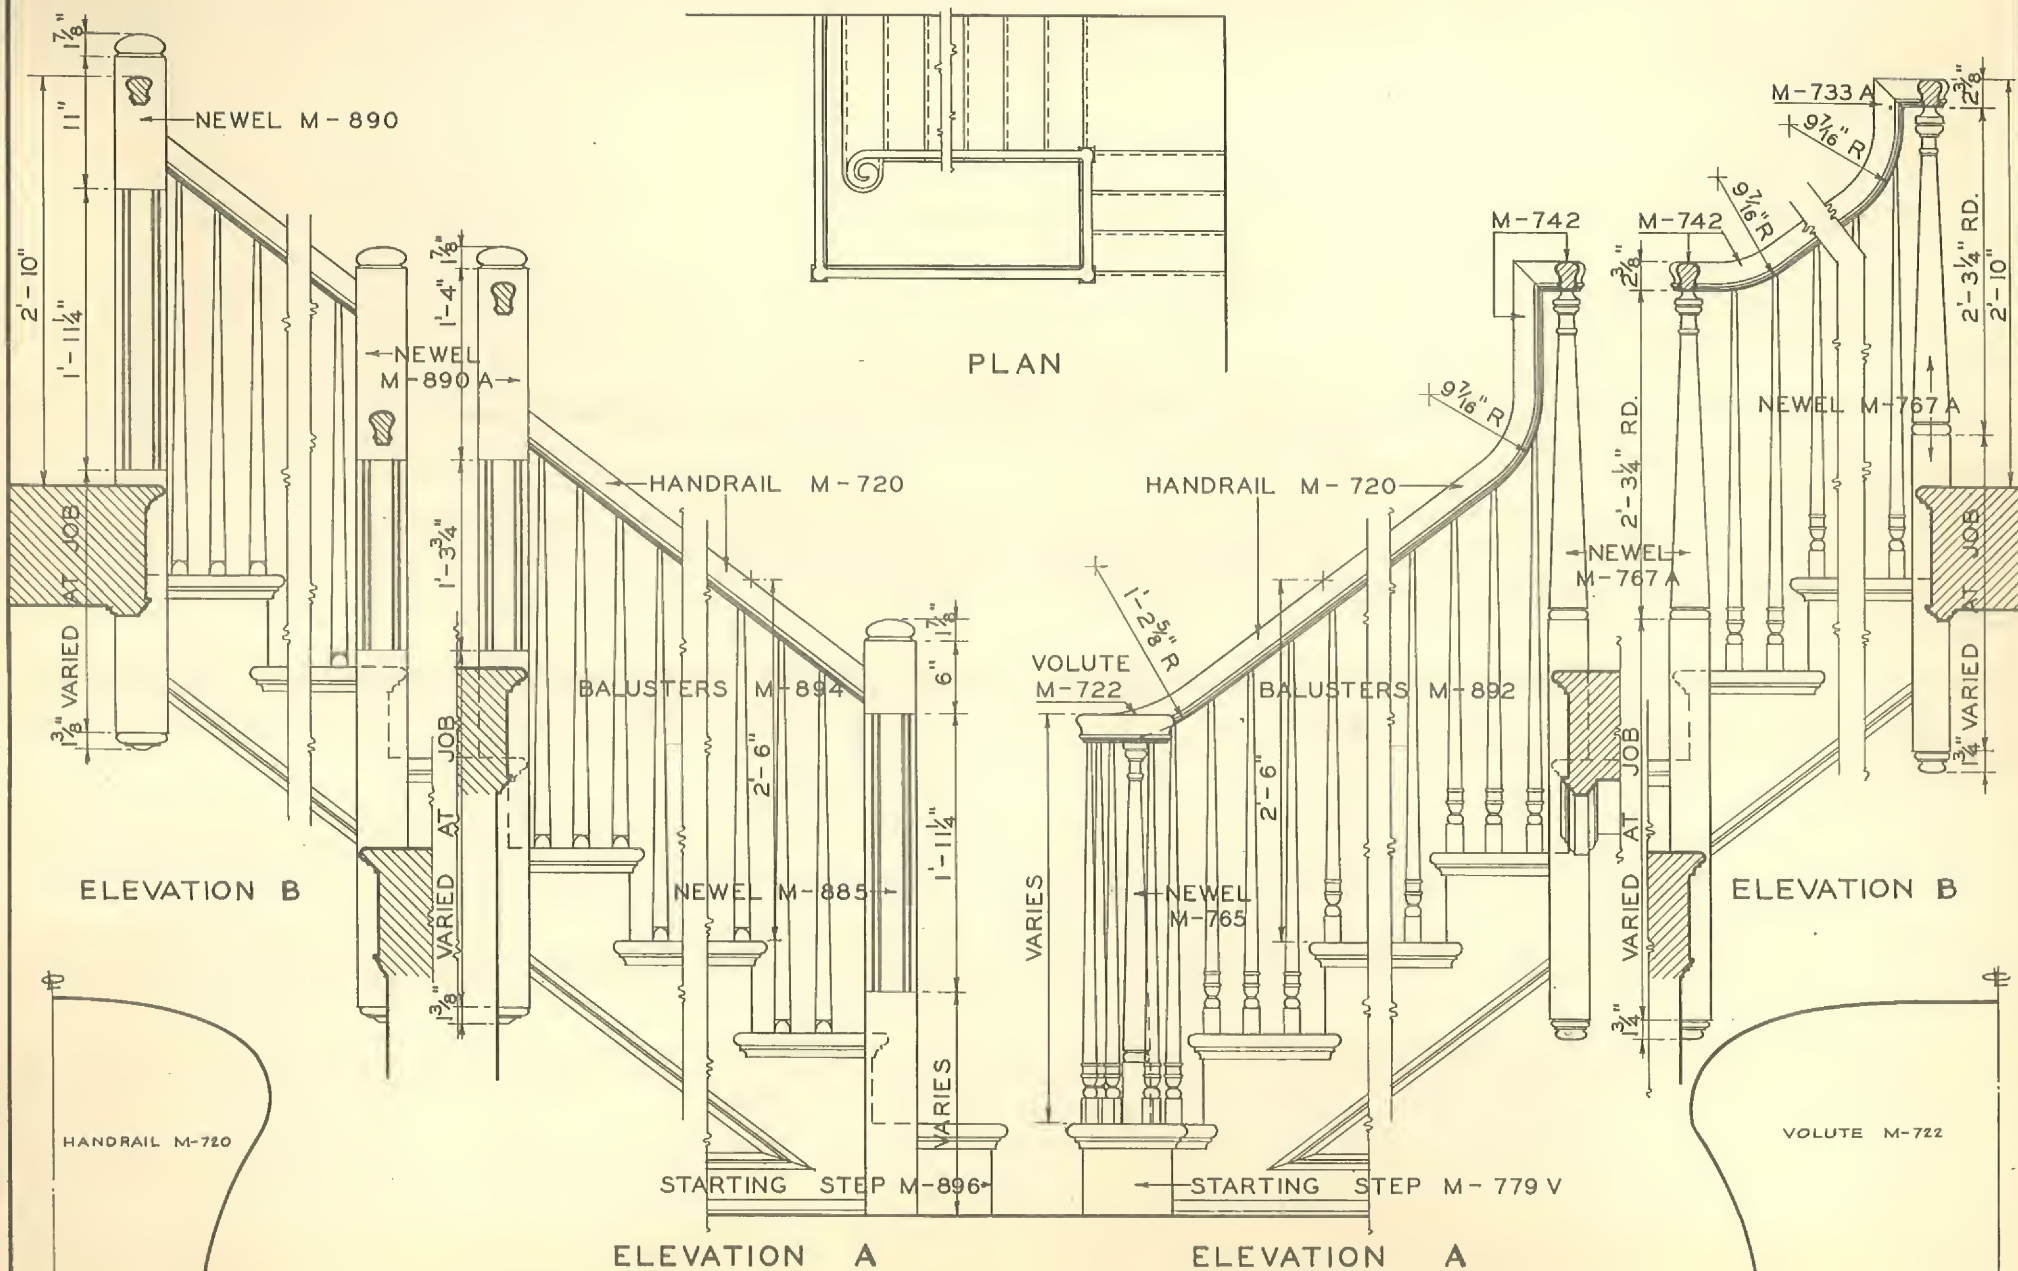

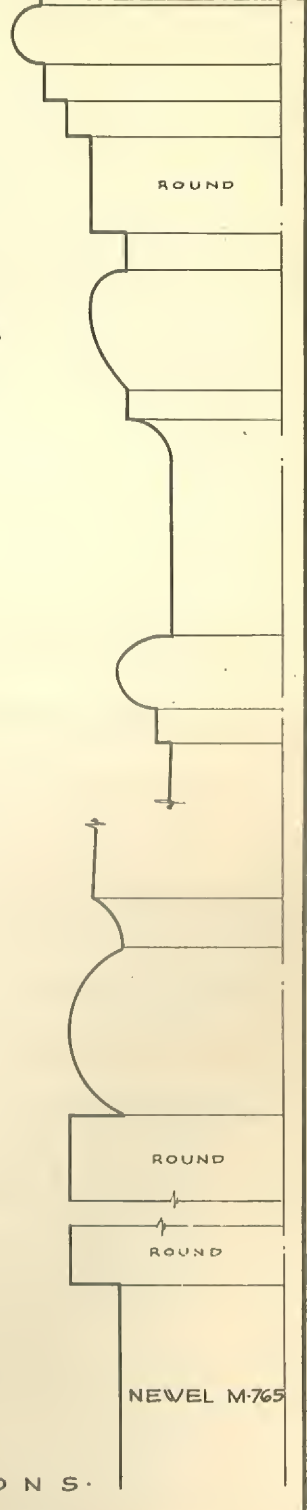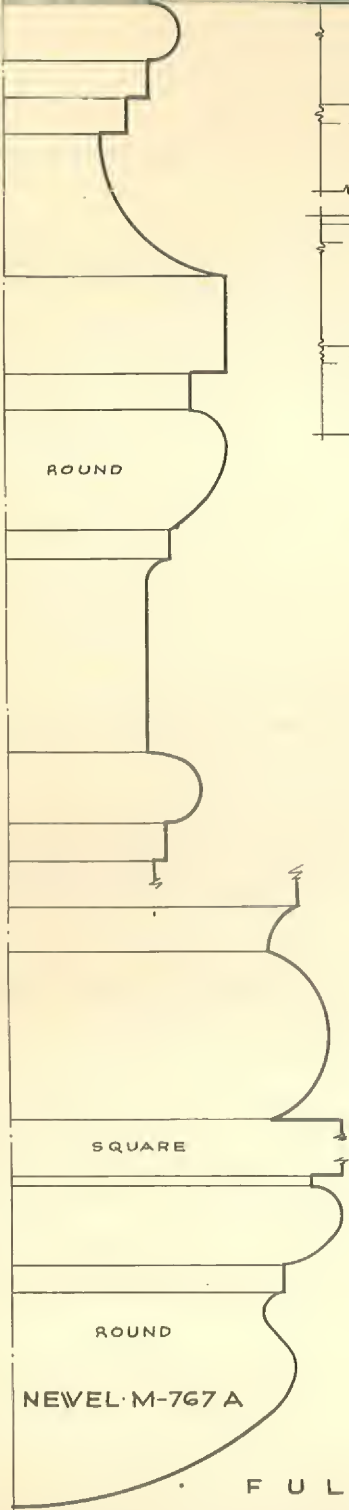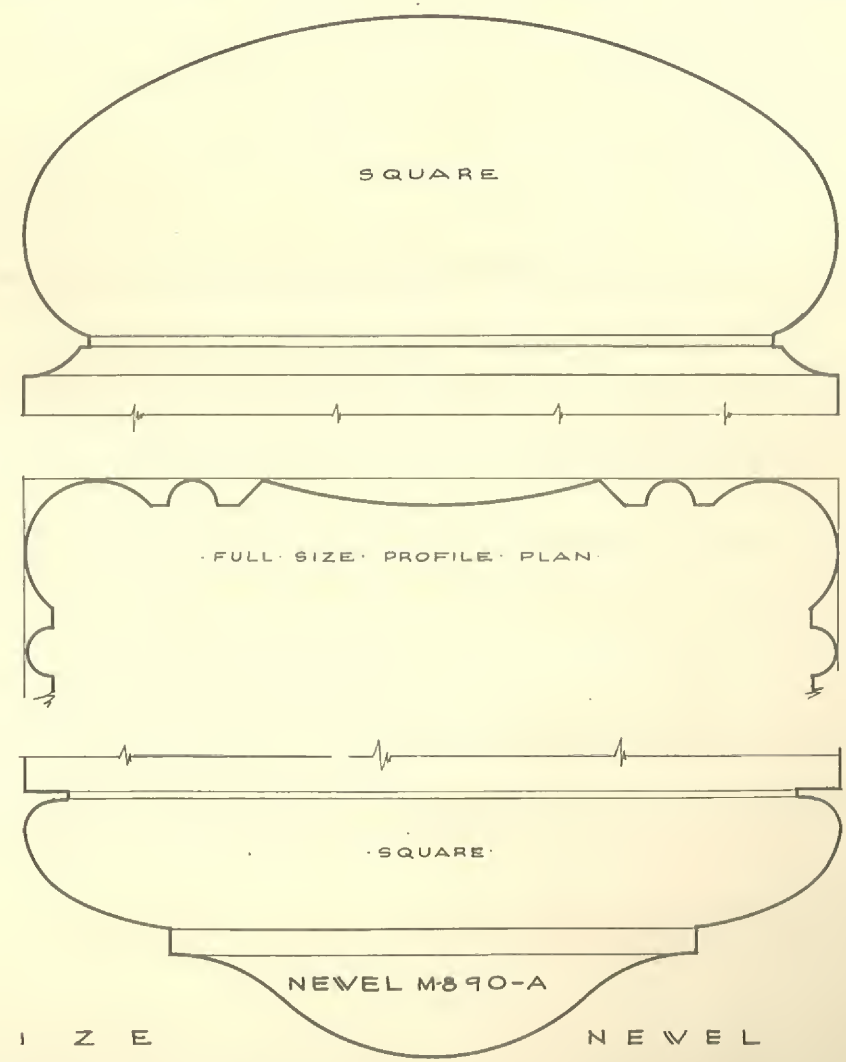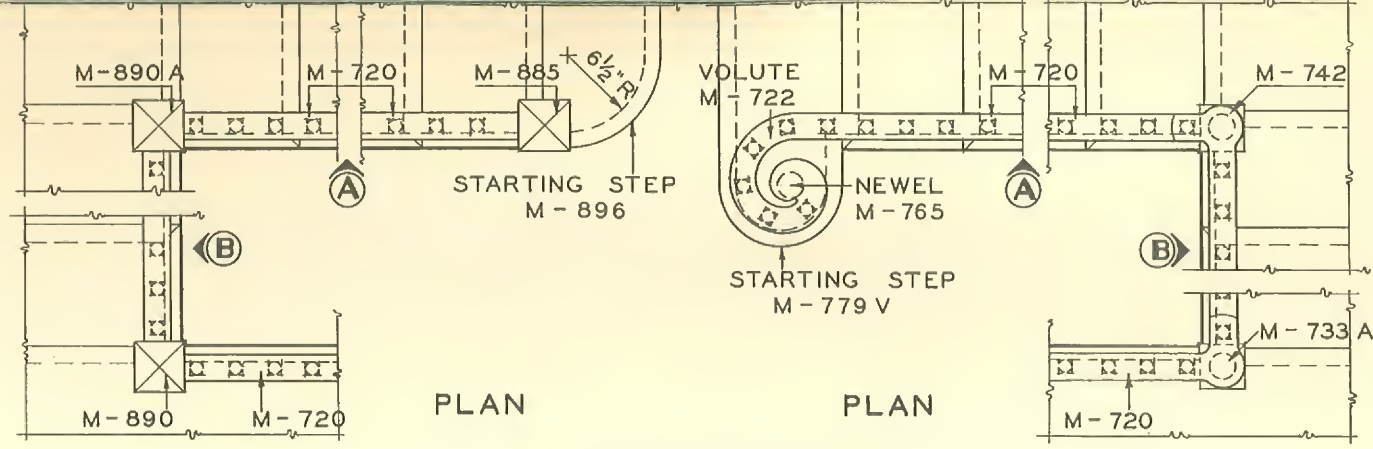




FULL SIZE NEWEL SECTIONS.

STAIR PARTS


MORGAN

INDEX SHEET NO. 35


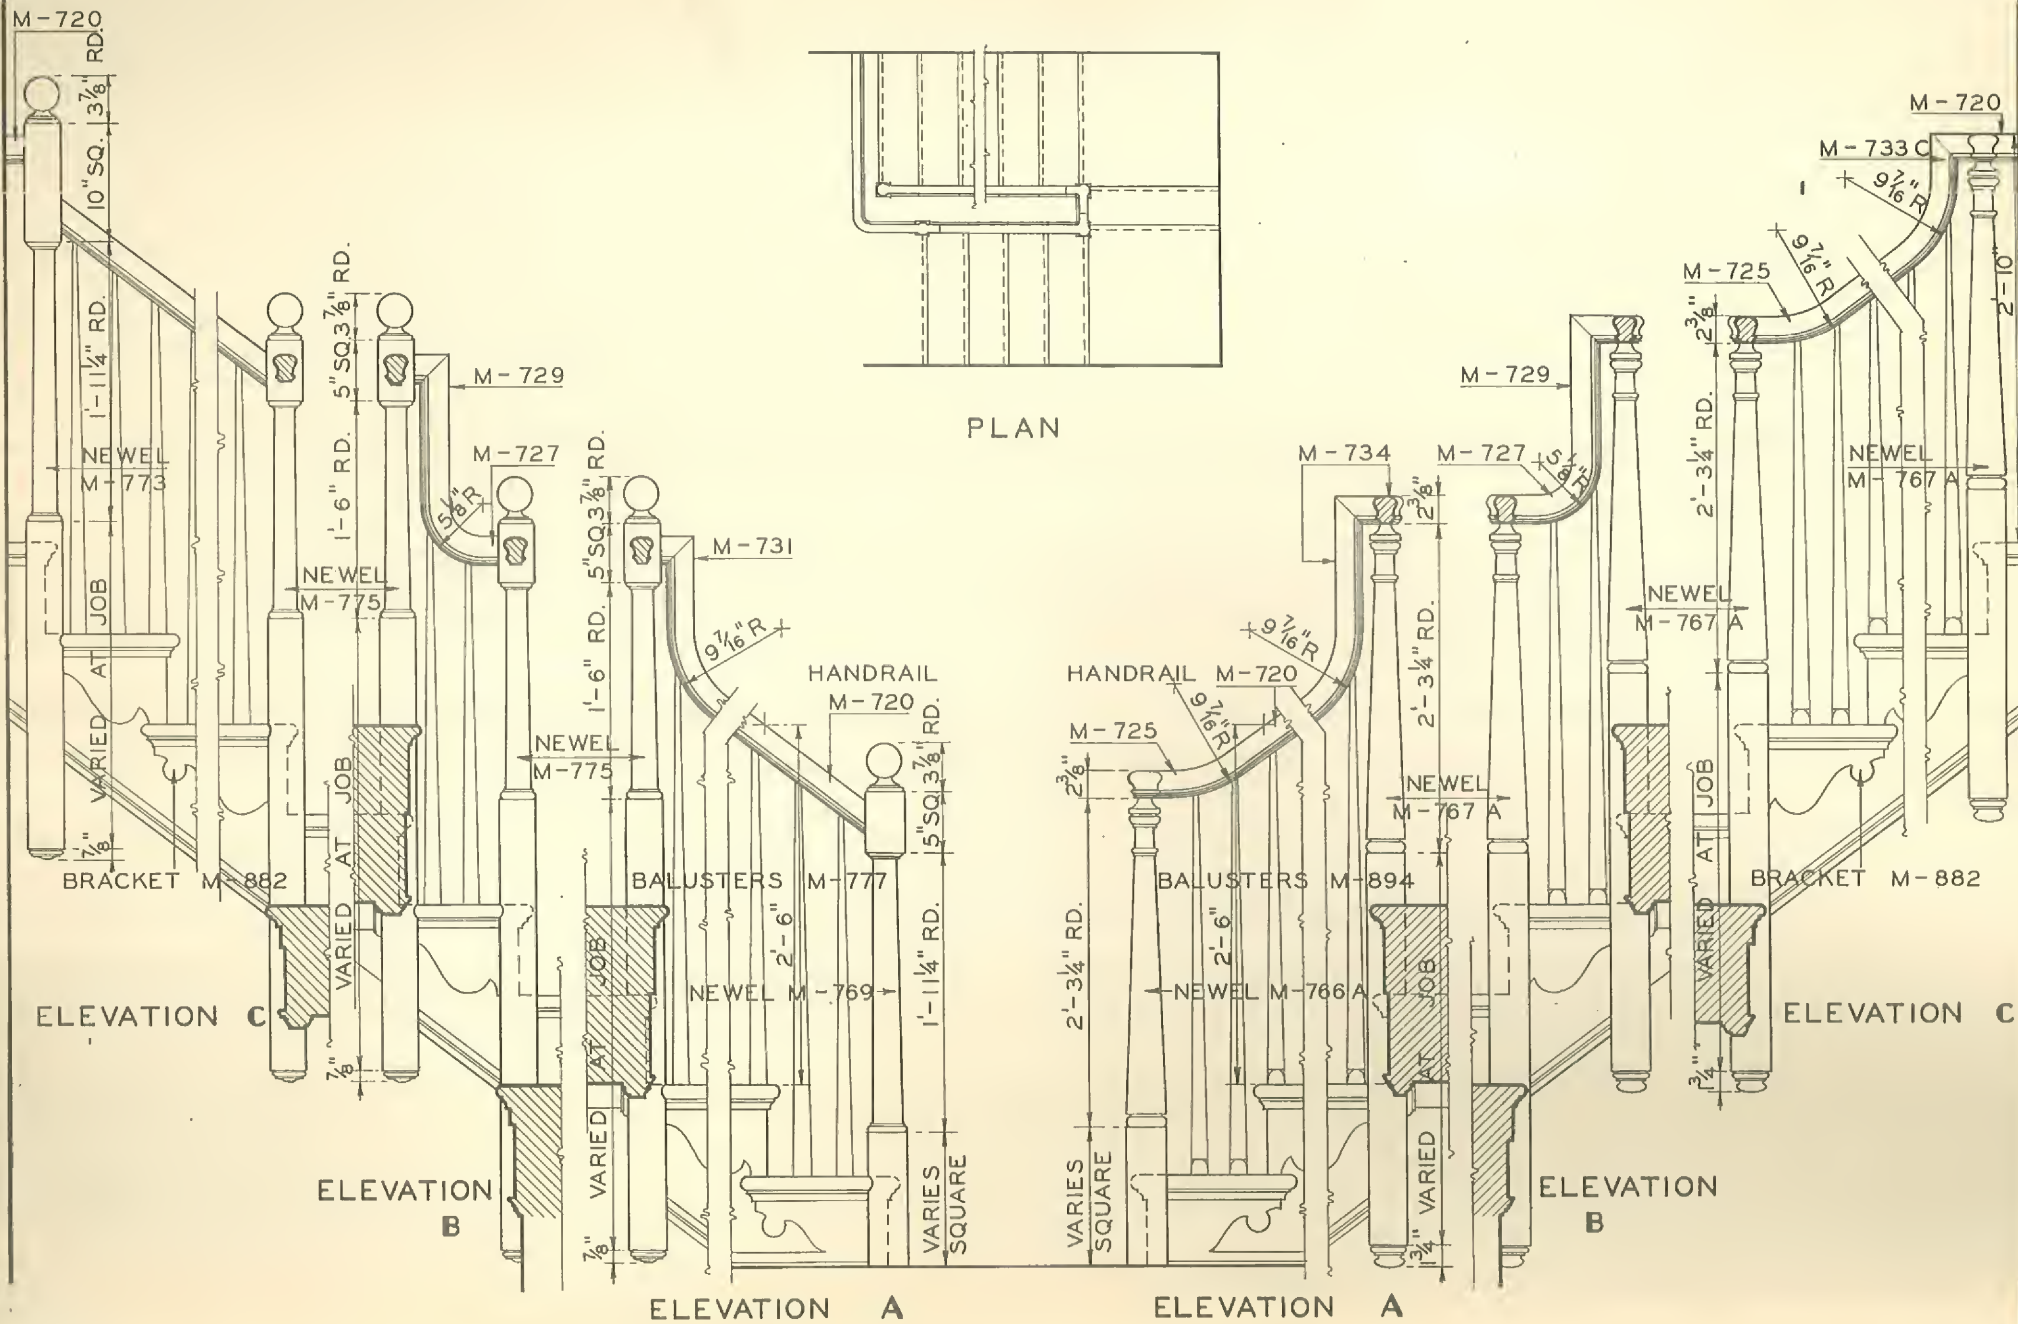


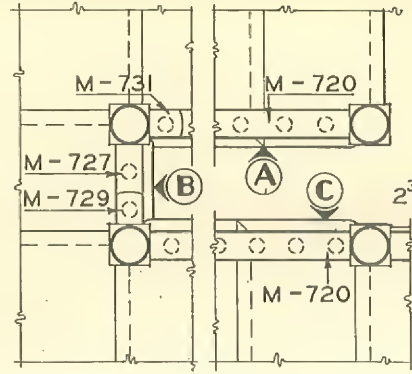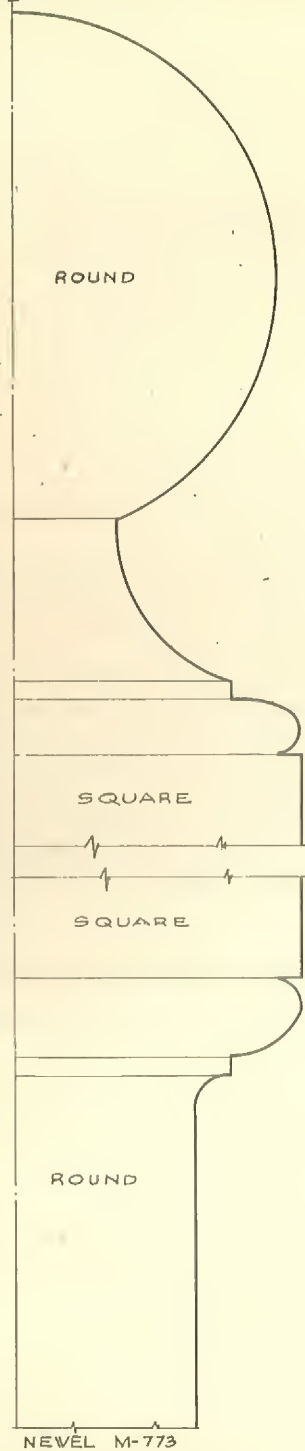


PLAN

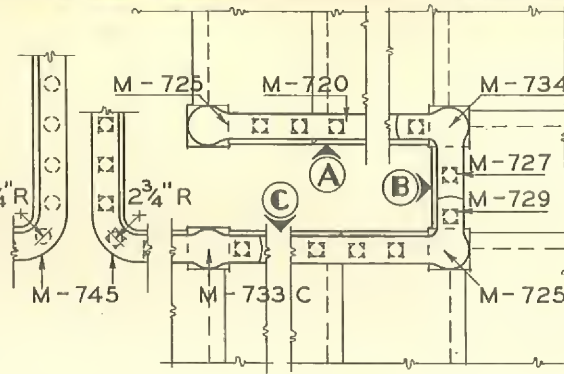

PLAN

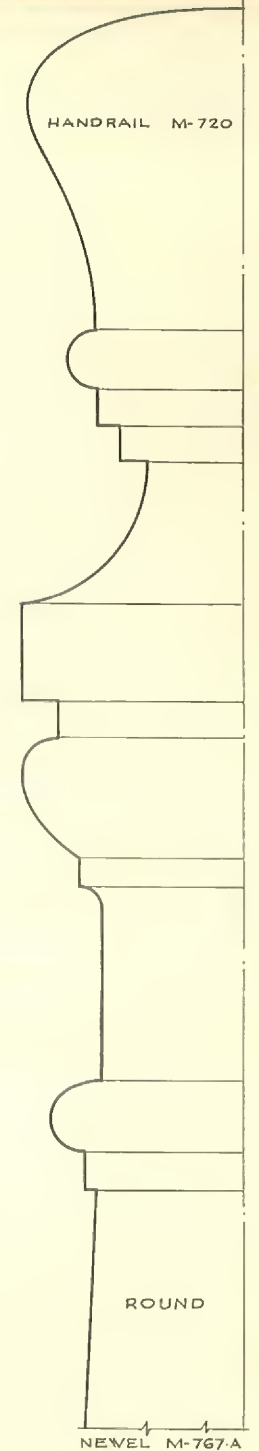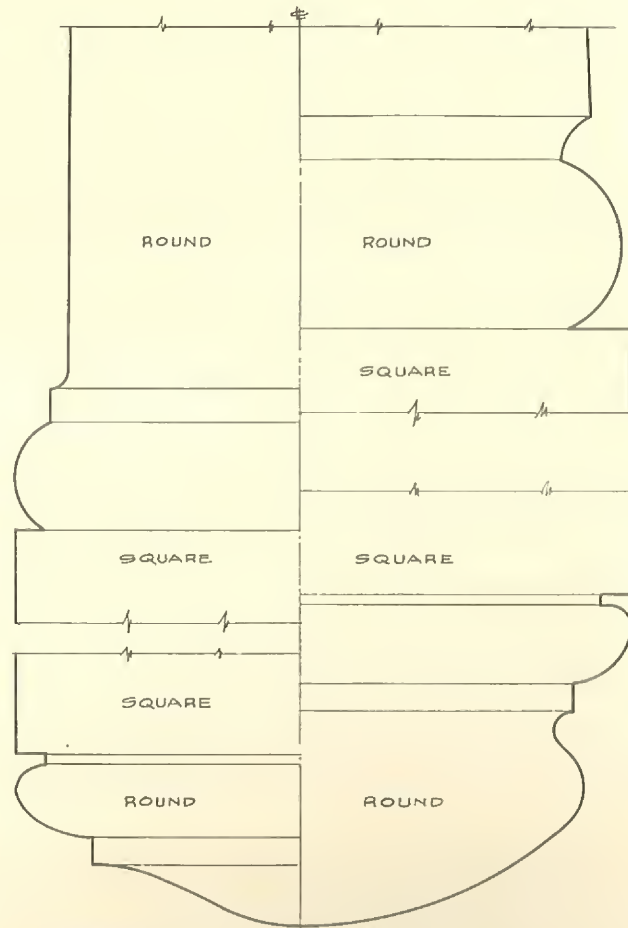

• F U L L • S I Z E • N E W E L • S E C T I O N S •

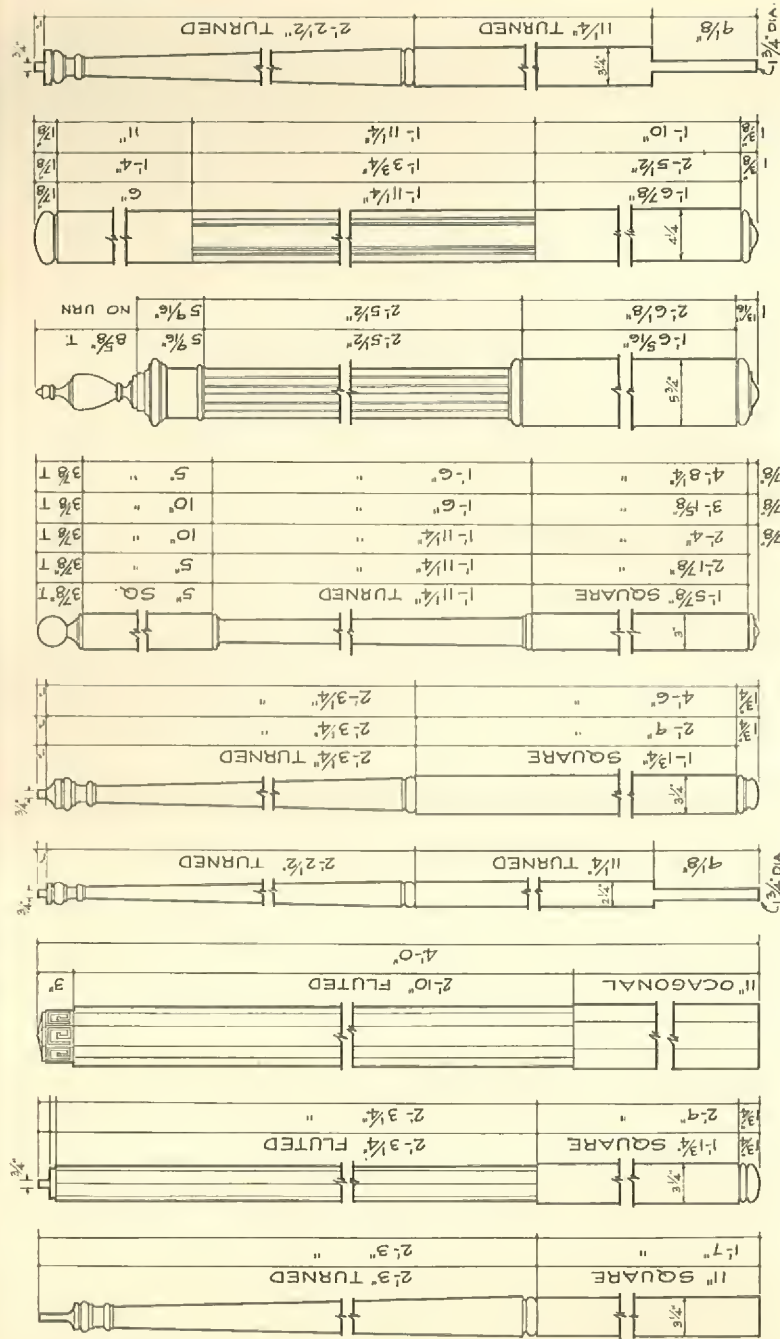


- M-753 1" SQUARE 1 1/2" TURNED
- M-754 1 1/2" SQUARE 2 1/2" TURNED
- M-755 1 1/2" SQUARE 2 1/2" FLUTED
- M-756 1 1/2" SQUARE 2 1/2" FLUTED
- M-764 1 1/2" OCTAGONAL 2 1/2" FLUTED
- M-765 1 1/2" SQUARE 2 1/2" TURNED
- M-766A 1 1/2" SQUARE 2 1/2" TURNED
- M-767A 1 1/2" SQUARE 2 1/2" TURNED
- M-768A 1 1/2" SQUARE 2 1/2" TURNED
- M-769 1 1/2" SQUARE 2 1/2" TURNED
- M-770 1 1/2" SQUARE 2 1/2" TURNED
- M-773 1 1/2" SQUARE 2 1/2" TURNED
- M-774 1 1/2" SQUARE 2 1/2" TURNED
- M-775 1 1/2" SQUARE 2 1/2" TURNED
- M-884 1 1/2" SQUARE 2 1/2" TURNED
- M-891 1 1/2" SQUARE 2 1/2" TURNED
- M-885 1 1/2" SQUARE 2 1/2" TURNED
- M-890A 1 1/2" SQUARE 2 1/2" TURNED
- M-895 1 1/2" SQUARE 2 1/2" TURNED
- M-896 1 1/2" SQUARE 2 1/2" TURNED

• ELEVATIONS •

• BALUSTERS •

BALUSTERS ARE FURNISHED IN 30" - 33" 36" & 42" LENGTHS OVERALL. M-777 HAS 3/4" DOVEL PIN TURNED ON BOTTOM. OTHER DESIGNS ARE DOVEetailed OR DOVEetailed AS SPECIFIED.

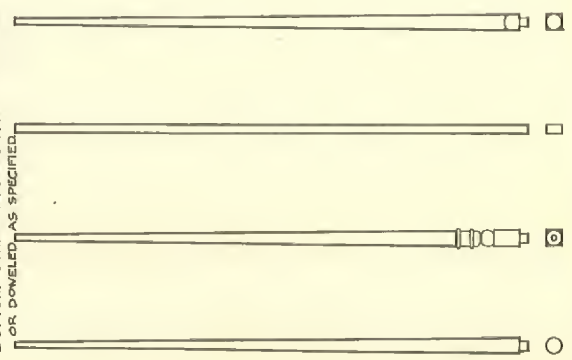


- M-777 1 1/2" SQUARE 2 1/2" TURNED
- M-892 1 1/2" SQUARE 2 1/2" TURNED
- M-893 1 1/2" SQUARE 2 1/2" TURNED
- M-894 1 1/2" SQUARE 2 1/2" TURNED

• STARTING STEPS •

STARTING STEPS M-779T, M-779V & M-896 INCLUDE TREAD AS SHOWN BELOW RISER - 3/4" x 7" COVE - 1/2" x 1 1/2"

TREAD, RISER & COVE ARE FURNISHED KNOCKED DOWN, EASILY PUT TOGETHER



M-780 BORED FOR VOLUTE M-718 & M-719



M-905-A OVAL ROSETTE


• BRACKETS •



M-882




M-784



M-779V BORED FOR VOLUTE M-721-M-722

M-779T BORED FOR TURNOUT M-723-M-724




M-896


STAIR PARTS

MORGAN


INDEX SHEET No 37

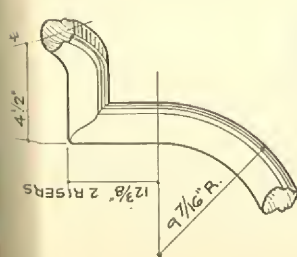

M-735 L
M-736 R




M-747




M-749




M-748

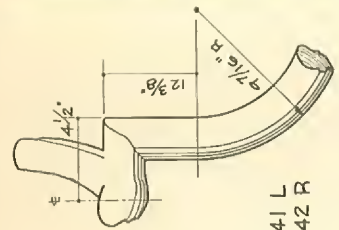


M-741 L
M-742 R

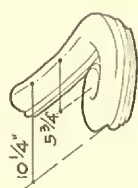


M-718 L
M-719 R

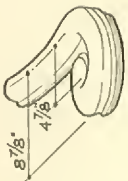


M-721 L
M-722 R

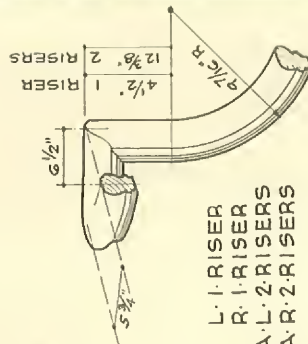


M-743 L: 1-RISER
M-744 R: 1-RISER
M-743 A: L: 2-RISERS
M-744 A: R: 2-RISERS

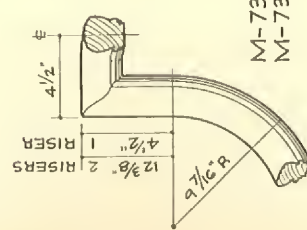


M-737 L: 1-RISER
M-739 R: 1-RISER

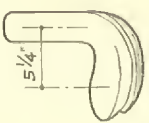


M-724 R
M-723 L

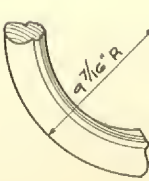


M-728

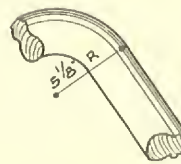


M-727

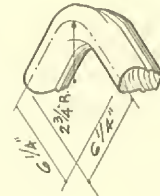


M-745

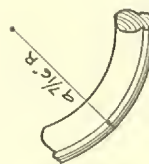


M-726

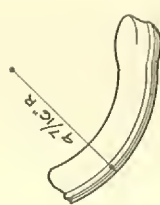


M-725

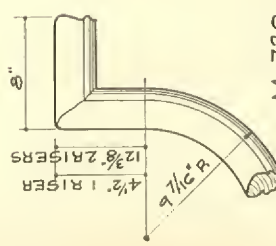


M-730 1 RISER
M-731 2 RISERS

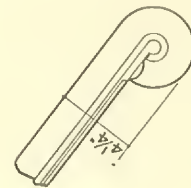


M-750

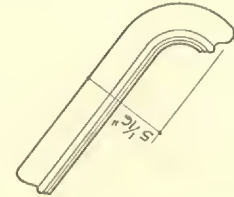


M-751

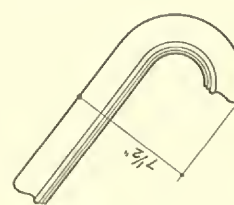


M-752

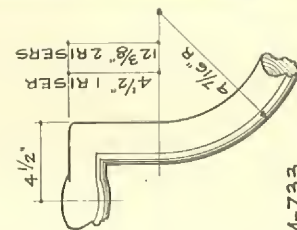


M-733
M-734

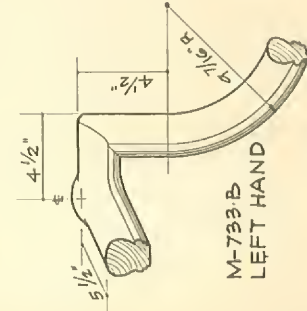


M-733 B
LEFT HAND

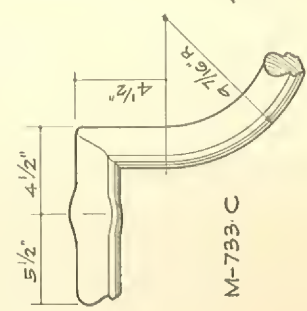

M-733 C

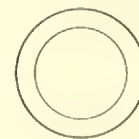

M-905
4 3/8" DIA. OUTSIDE
3 1/8" DIA. INSIDE

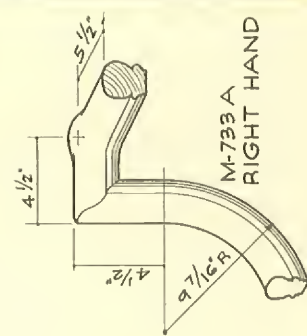

M-733 A
RIGHT HAND

FULL SIZE PROFILE OF TRIM

DETAIL OF URN SCALE 3" = 1'-0"

CHINA CABINET M-1555

FULL SIZE DETAIL OF PILASTER CAP.

FULL SIZE PLAN OF PILASTER

SECTION

FRONT ELEVATION SCALE: 3/4" = 1'-0"


ELEVATION SCALE 1/4" = 1'-0"

PLAN

LOWER


FULL SIZE PILASTER BASE

FULL SIZE PROFILE
OF TRIM

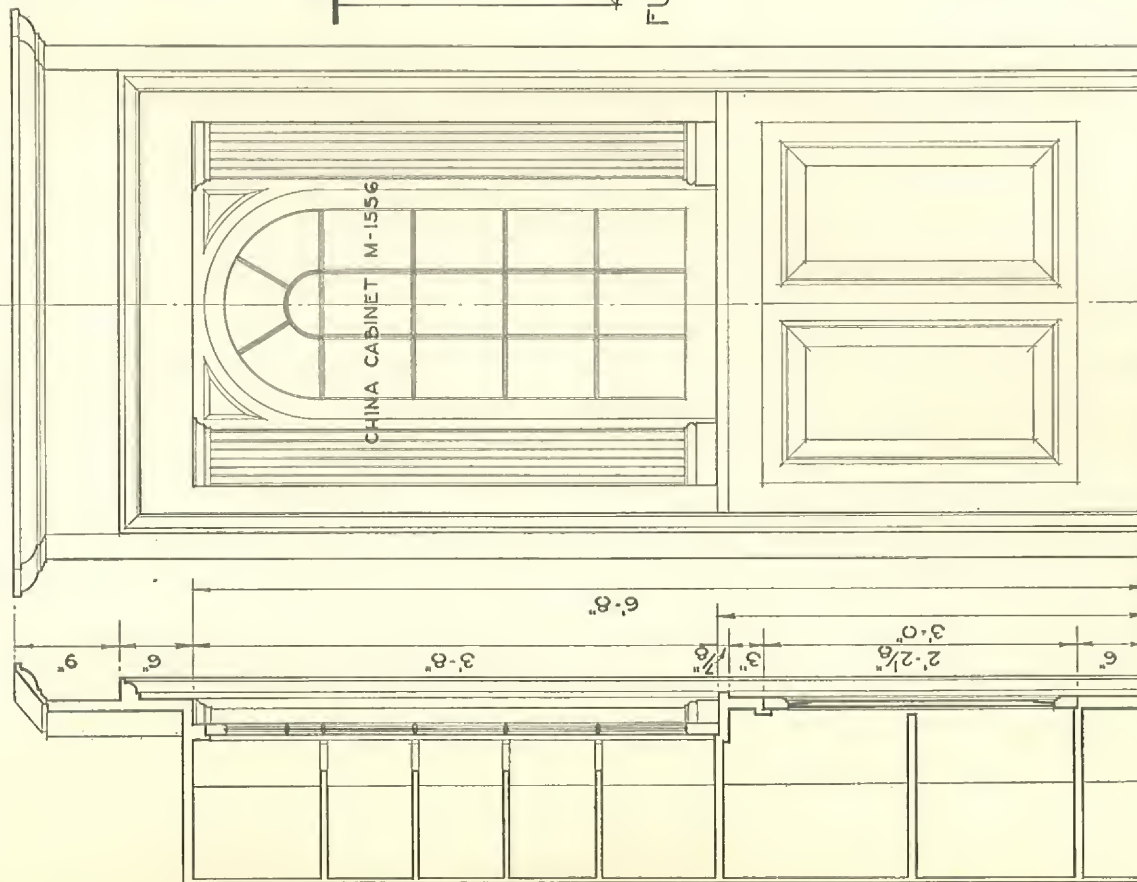

SECTION

FRONT ELEVATION
SCALE $\frac{3}{4}$ "=1'-0"

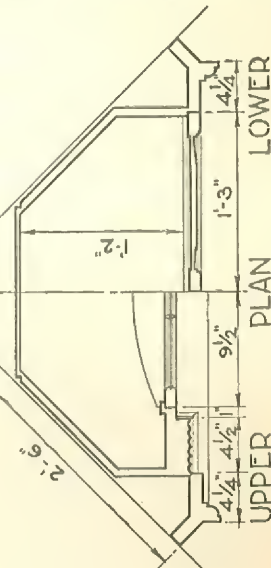

UPPER PLAN LOWER

FULL SIZE PILASTER CAP

FULL SIZE PLAN OF PILASTER

ELEVATION
SCALE $\frac{1}{4}$ "=1'-0"

FULL SIZE PILASTER BASE

FULL SIZE PROFILE
OF TRIM

FULL SIZE SECTION
OF CROWN MOULD



CHINA CABINET M-1557

SECTION

FRONT ELEVATION
SCALE $\frac{3}{4}$ "-1'-0"

ELEVATION
SCALE $\frac{1}{4}$ "-1'-0"


FULL SIZE SECTION
OF DRAWER

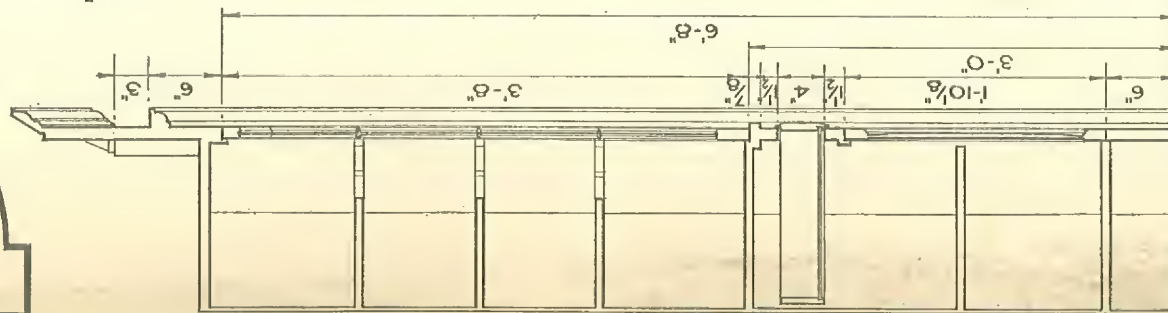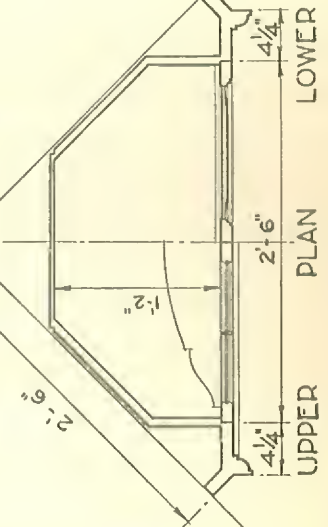


FULL SIZE
PROFILE OF
CORNICE CAP

LOOKING DOWN
PILASTER PLAN

LOOKING UP

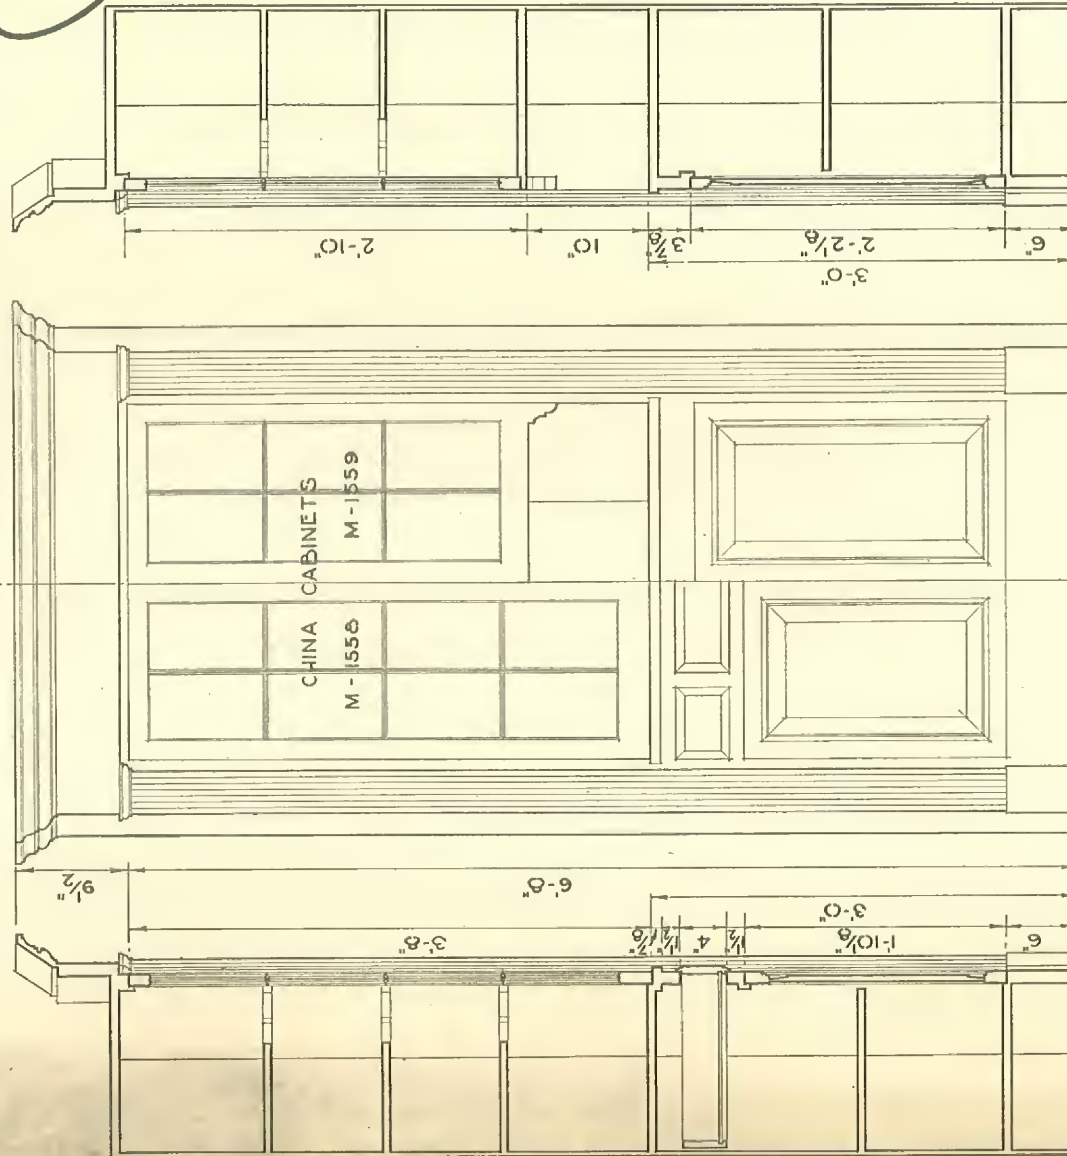


SECTION

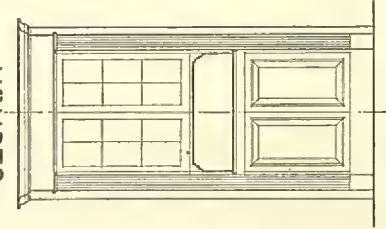

ELEVATION
SCALE 1/4"=1'-0"

HALF FRONT ELEVATIONS
SCALE 3/4"=1'-0"

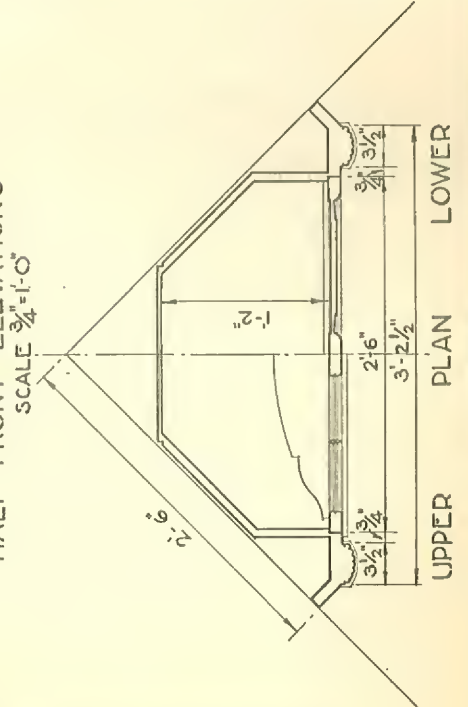


LOWER

PLAN


UPPER

SECTION

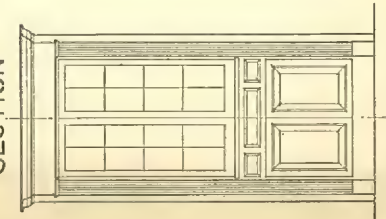


ELEVATION
SCALE 1/4"=1'-0"


FULL SIZE PROFILE OF TRIM

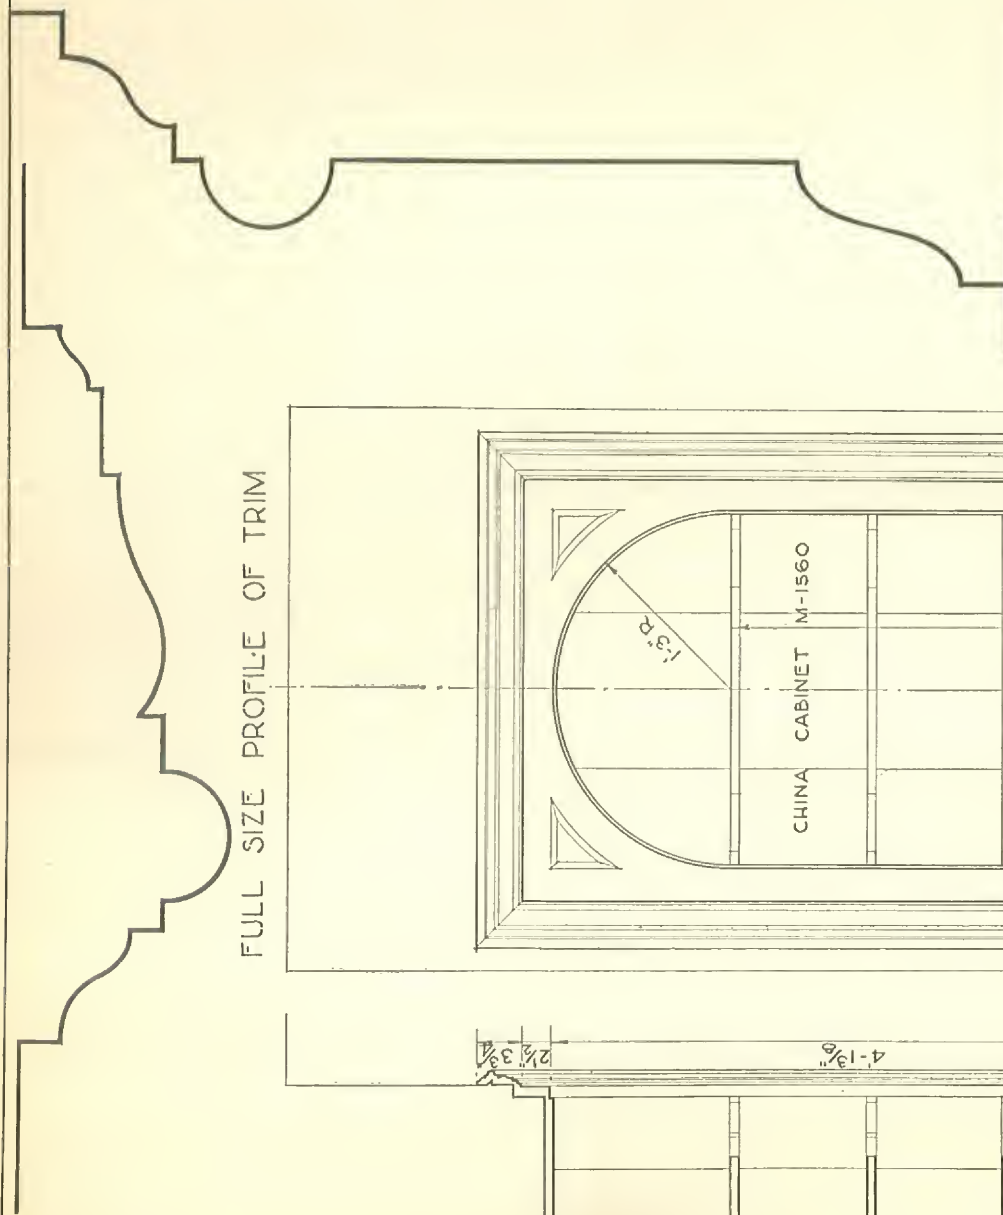

FULL SIZE PROFILE OF BASE

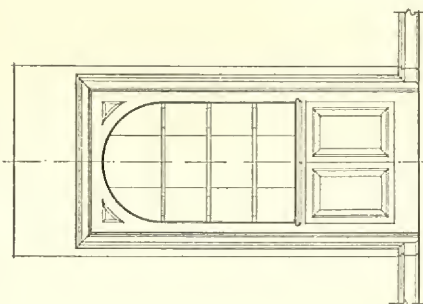


ELEVATION
SCALE $\frac{1}{4}" = 1'-0"$

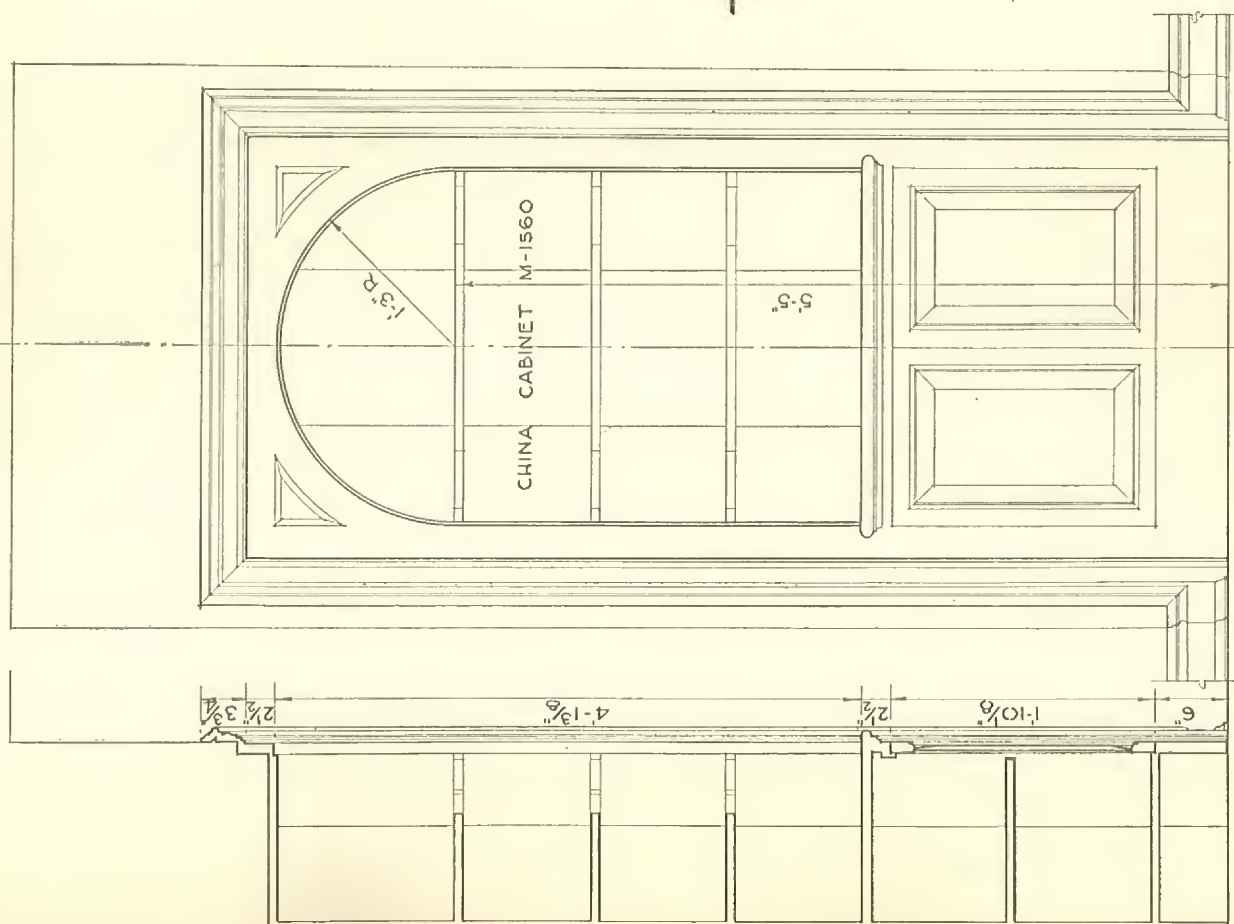

FRONT ELEVATION
SCALE $\frac{3}{4}" = 1'-0"$

SECTION

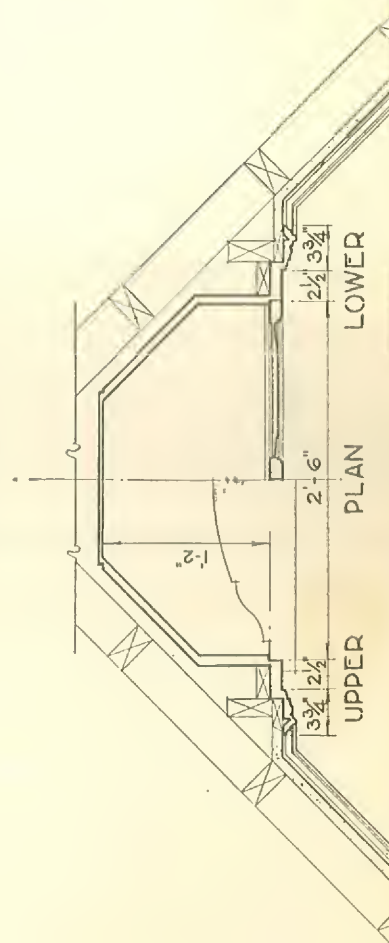

F.S.D. OF ARCH TRIM

FULL SIZE DETAIL
OF PILASTER CAP

FULL SIZE OF
CORNICE CAP

CHINA CABINETS
M-1562

M-1561

SECTION

HALF FRONT ELEVATIONS

SECTION

ELEVATION

ELEVATION

UPPER

PLAN

LOWER

ELEVATION OF KEYSTONE - SEC.

SCALE 3"=1'-0"

SCALE 3/4"=1'-0"

1'-2"

2'-6"


1/4" 4 1/4" 1/4"

1/4" 4 1/4" 1/4"

1'-0" 4'-1 3/8" 2 1/2" 1'-10 1/8" 6"

FULL SIZE PROFILE OF TRIM

DETAIL OF CASE HEAD
SCALE 3"=1'-0"

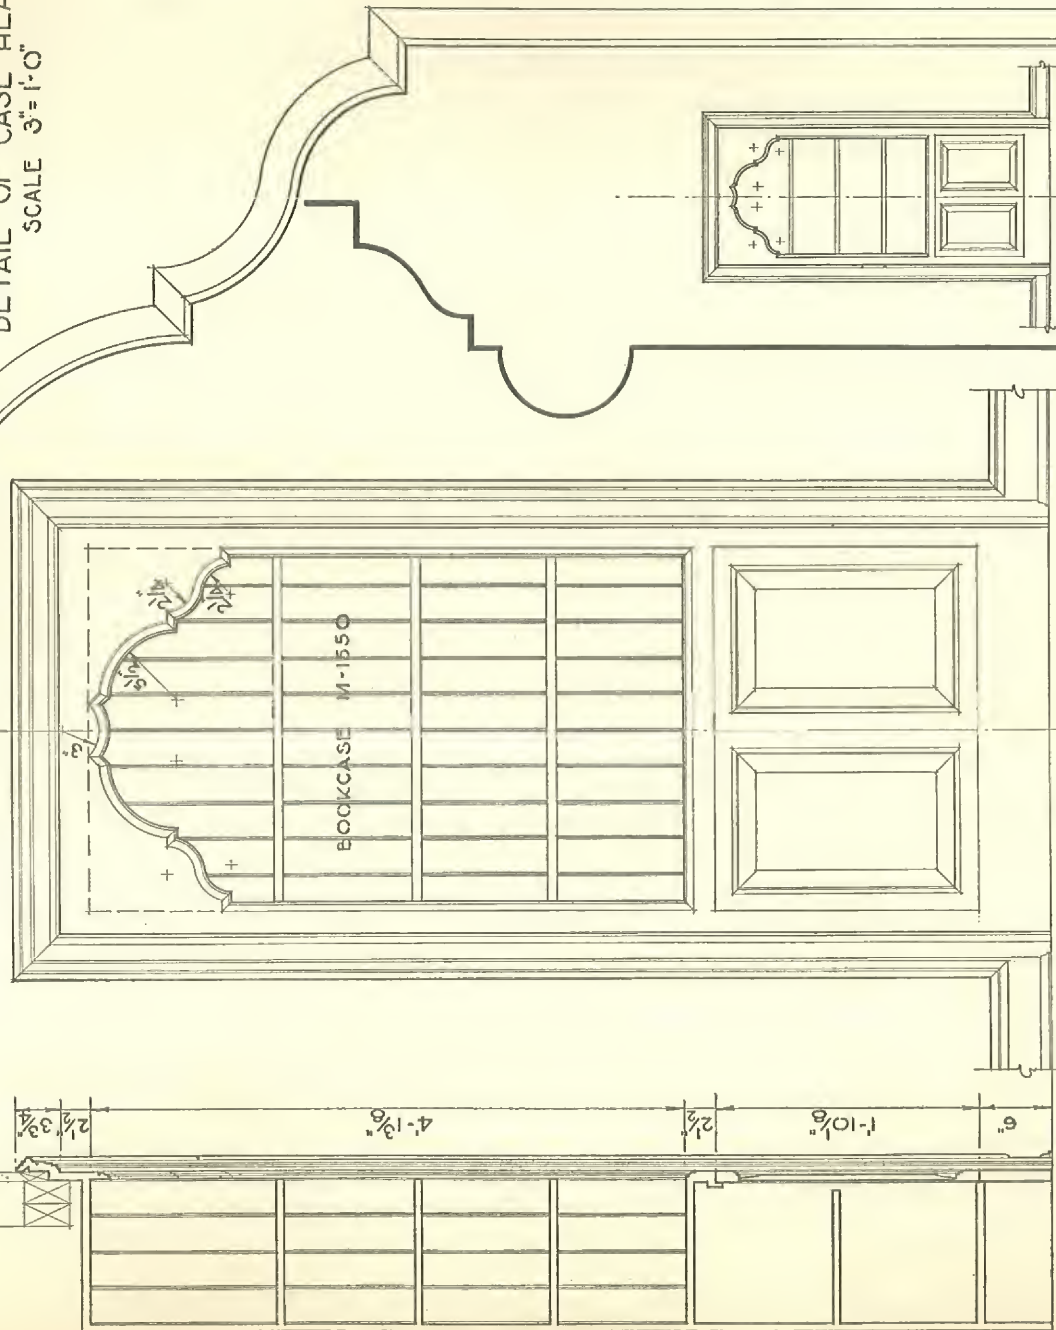


ELEVATION
SCALE 1/4"=1'-0"

FULL SIZE PROFILE
OF BASE

FRONT ELEVATION
SCALE 3/4"=1'-0"


SECTION

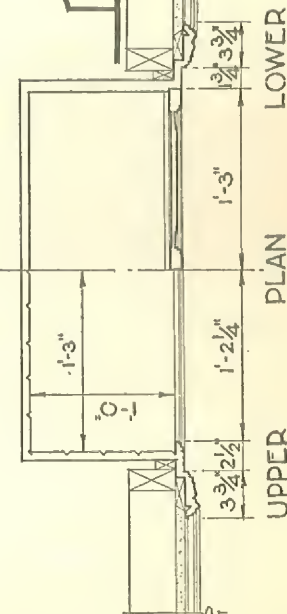


UPPER

PLAN

LOWER

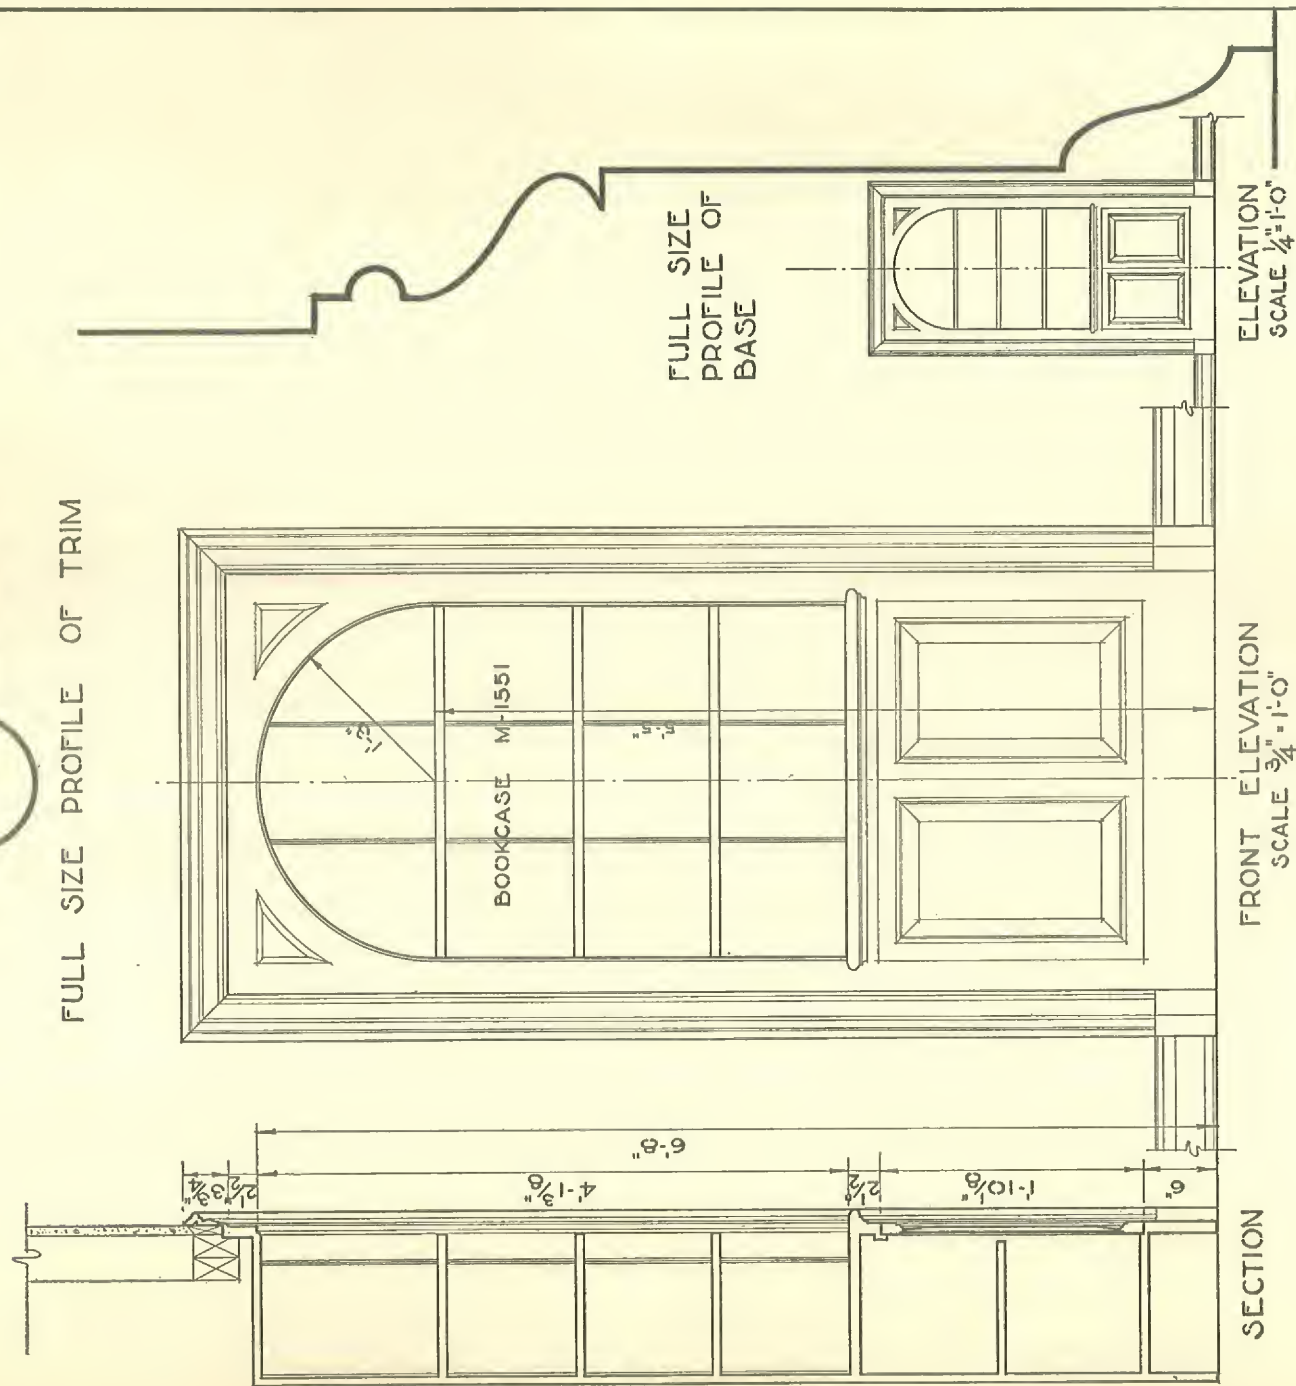

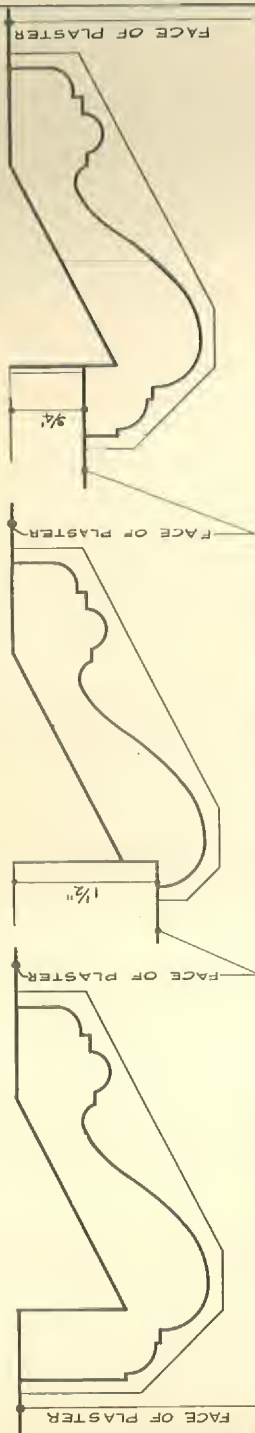


· FLUSH WITH ·
· FACE OF PLASTER ·

· REVEAL 1 1/2" FROM ·
· FACE OF PLASTER ·


· REVEAL 3/4" FROM ·
· FACE OF PLASTER ·

· A L T E R N A T E · P L A N S ·
· HALF FULL SIZE ·

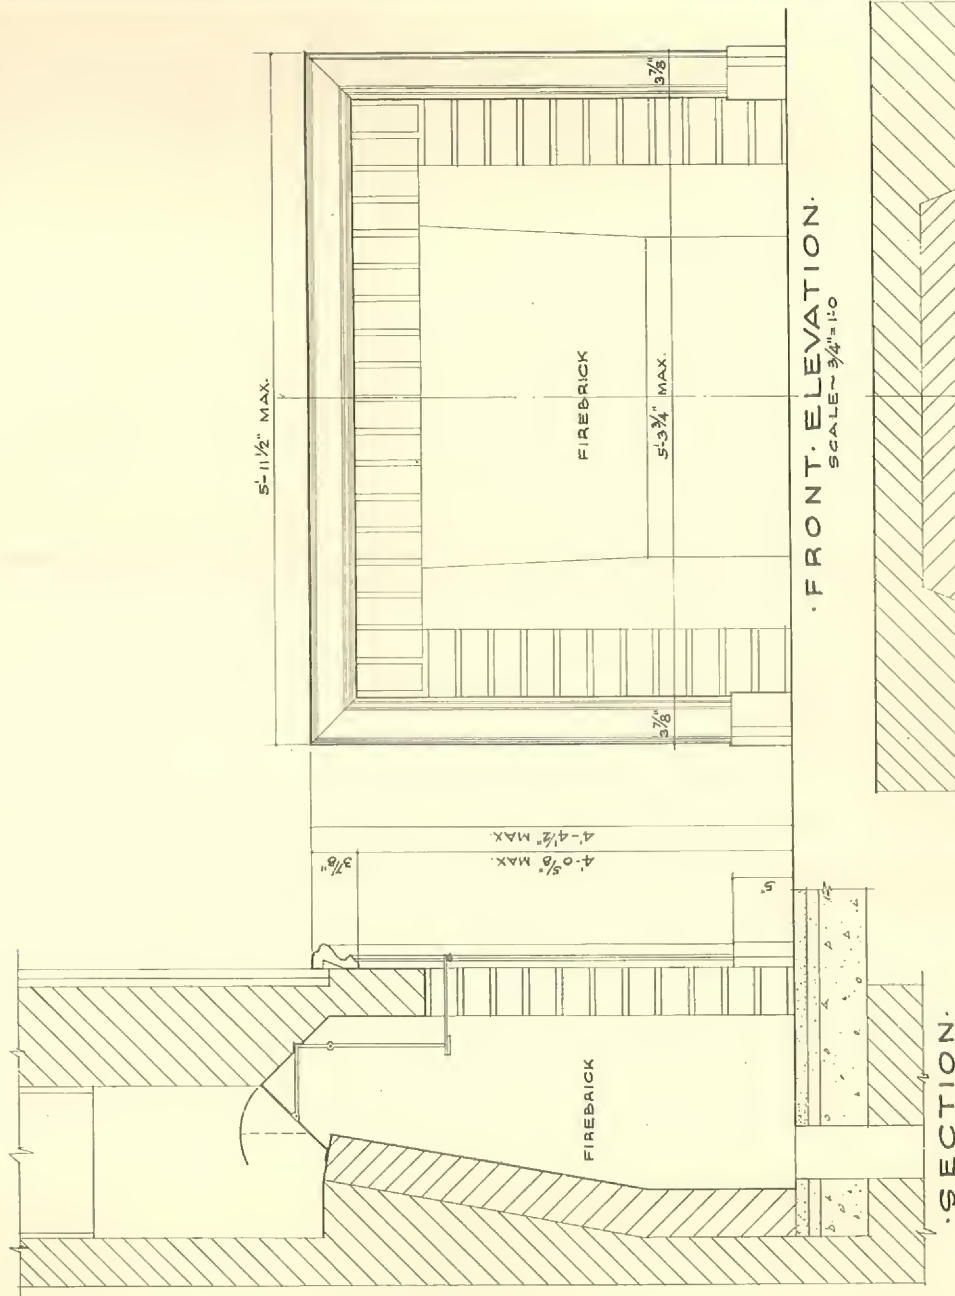


· FRONT ELEVATION ·
SCALE - 3/4" = 1'-0"

· SECTION ·

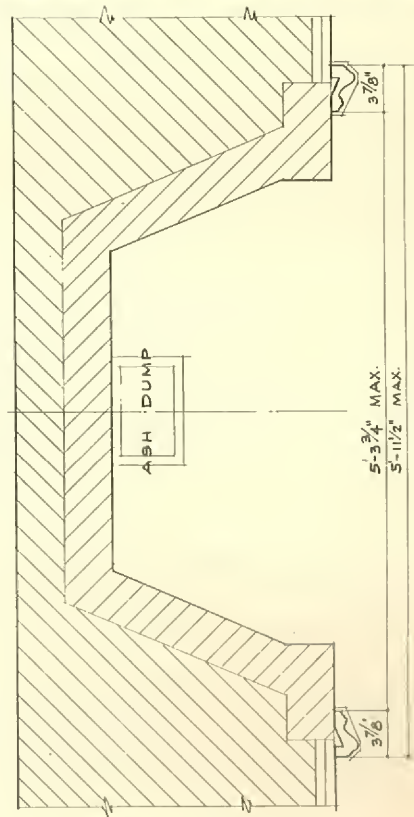


· ELEVATION ·
SCALE - 1/4" = 1'-0"


· PLAN ·

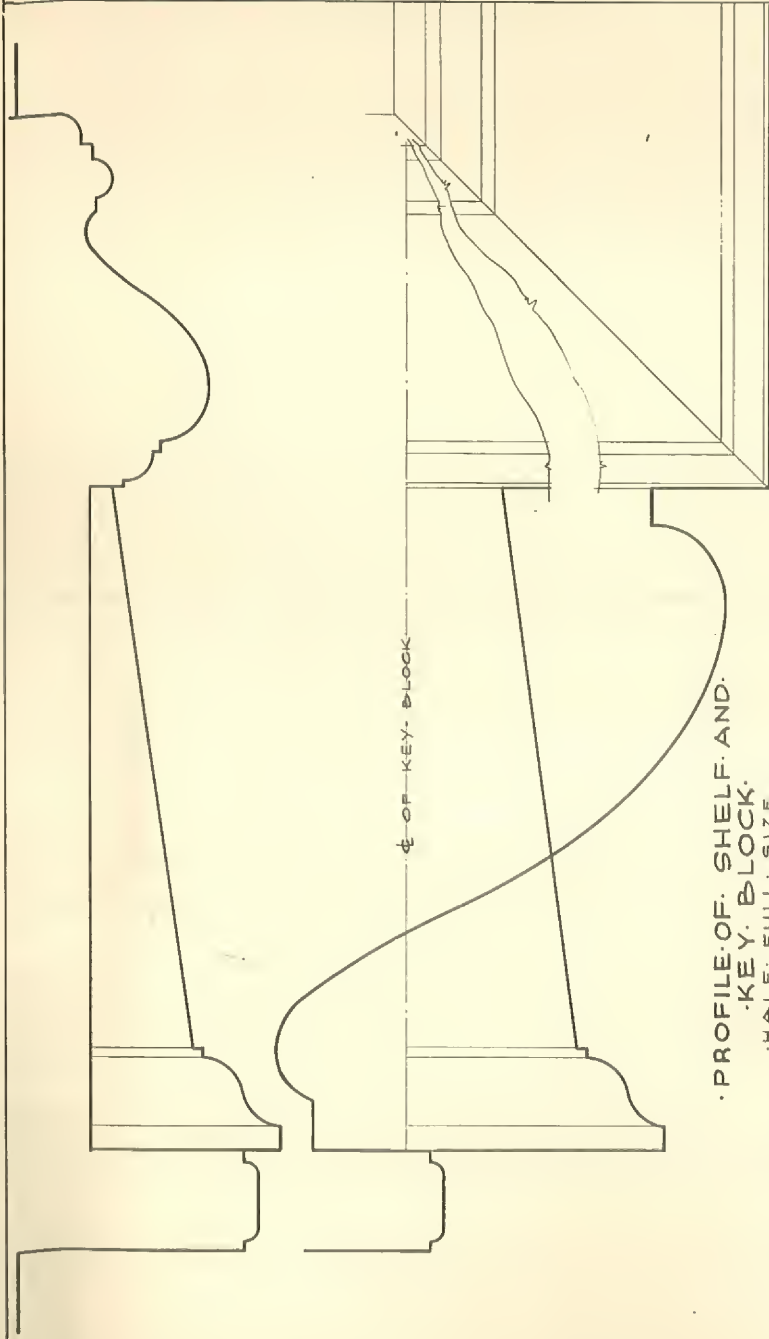

· PROFILE OF SHELF AND
· KEY BLOCK.
· HALF FULL SIZE

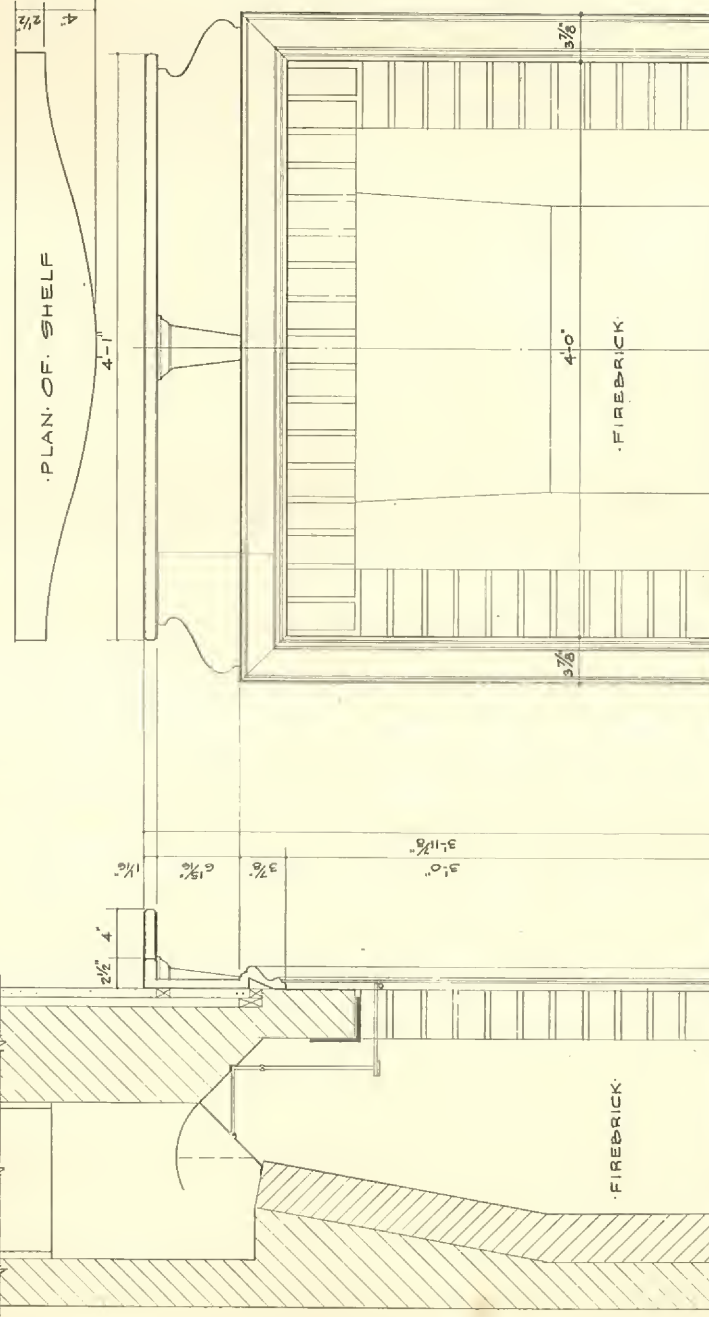


· FRONT ELEVATION ·
SCALE - 3/4" = 1'-0"

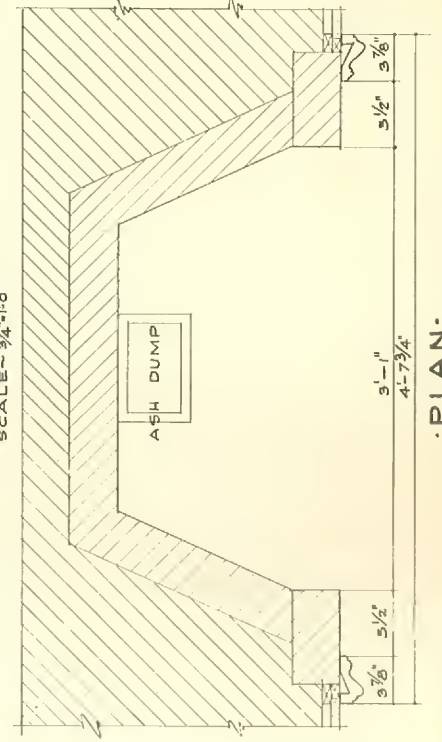

· PLAN ·

· SECTION ·

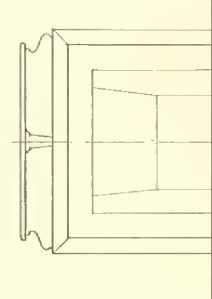


· ELEVATION ·
SCALE - 1/4" = 1'-0"


INDEX SHEET NO.-101




FULL SIZE PROFILE THRU DOOR PANELS

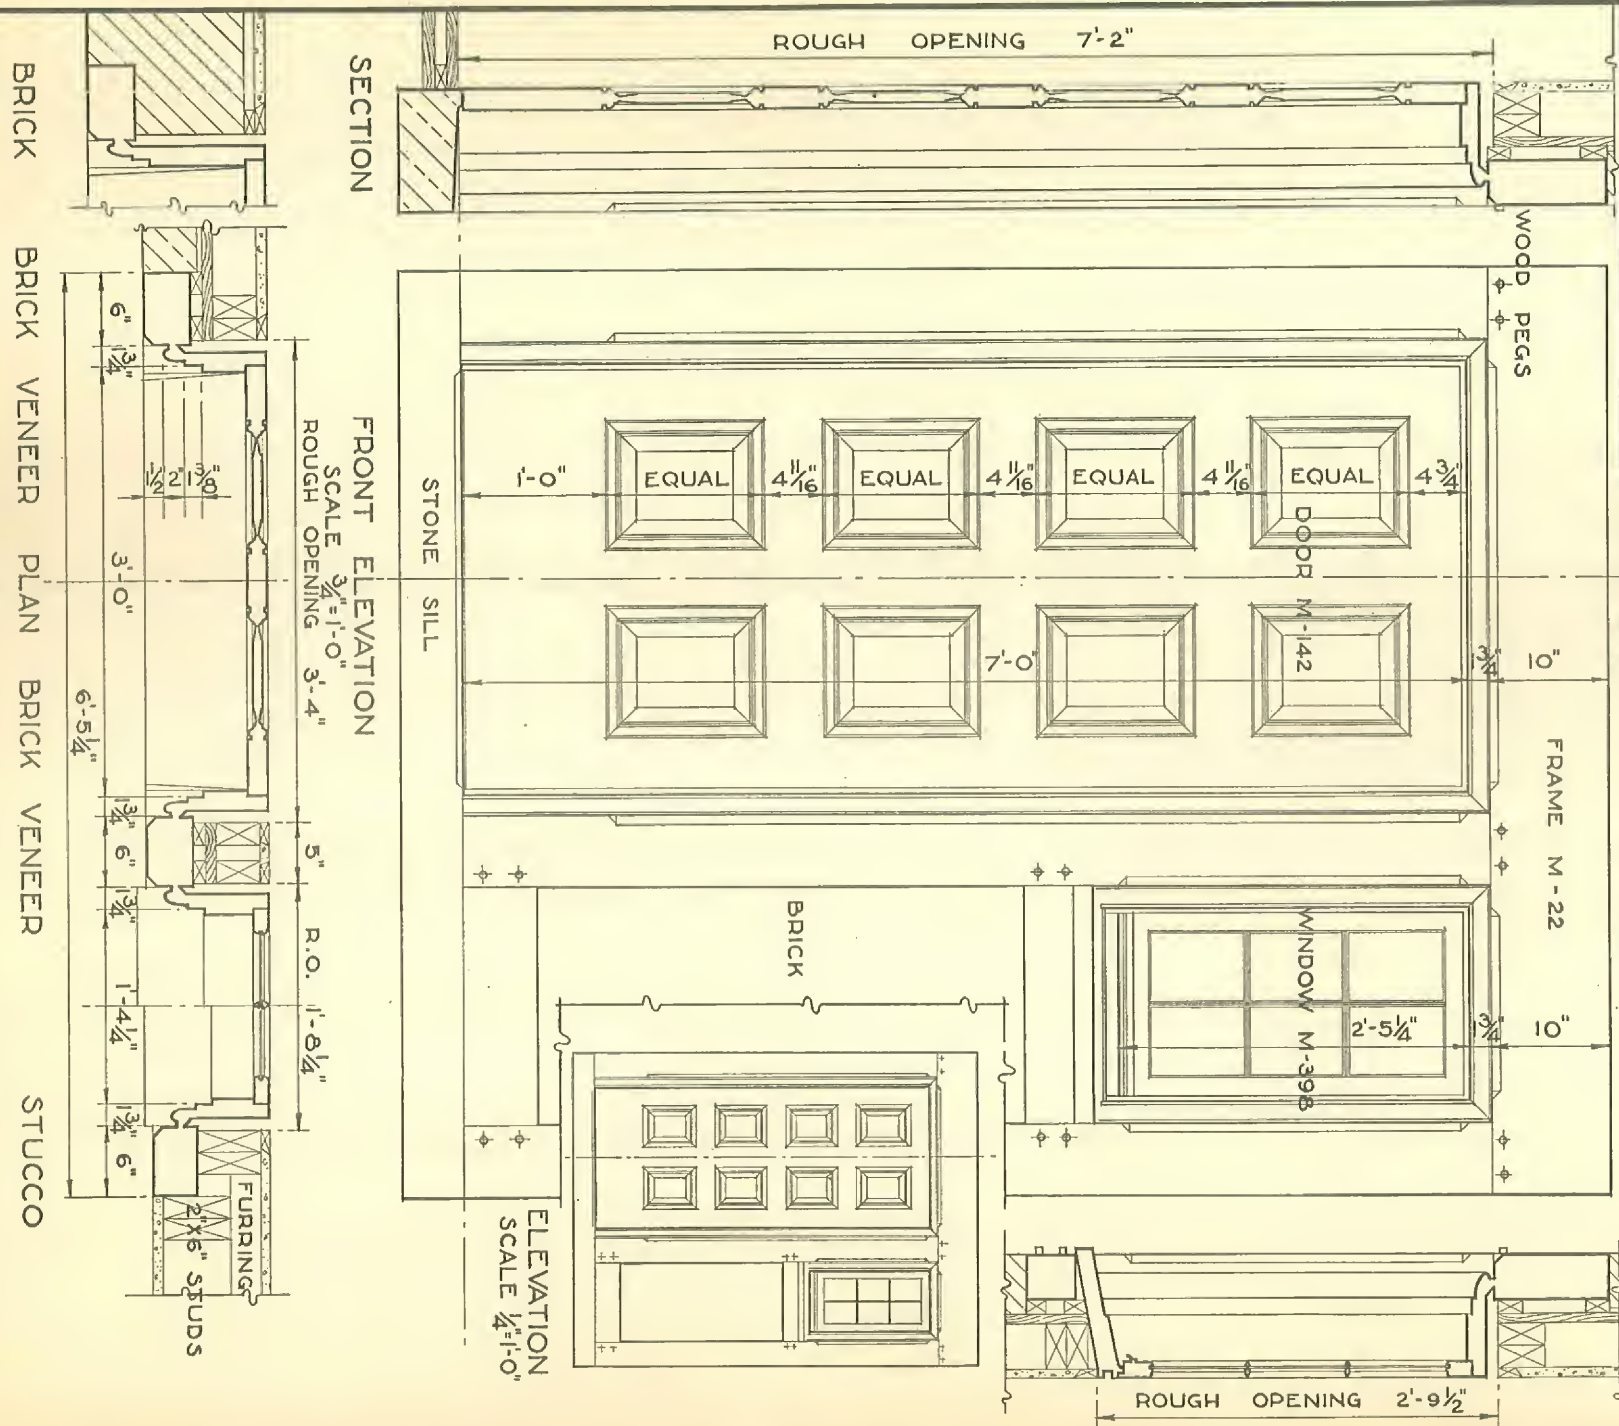

FULL SIZE PROFILE THRU
JAMB OF DOOR

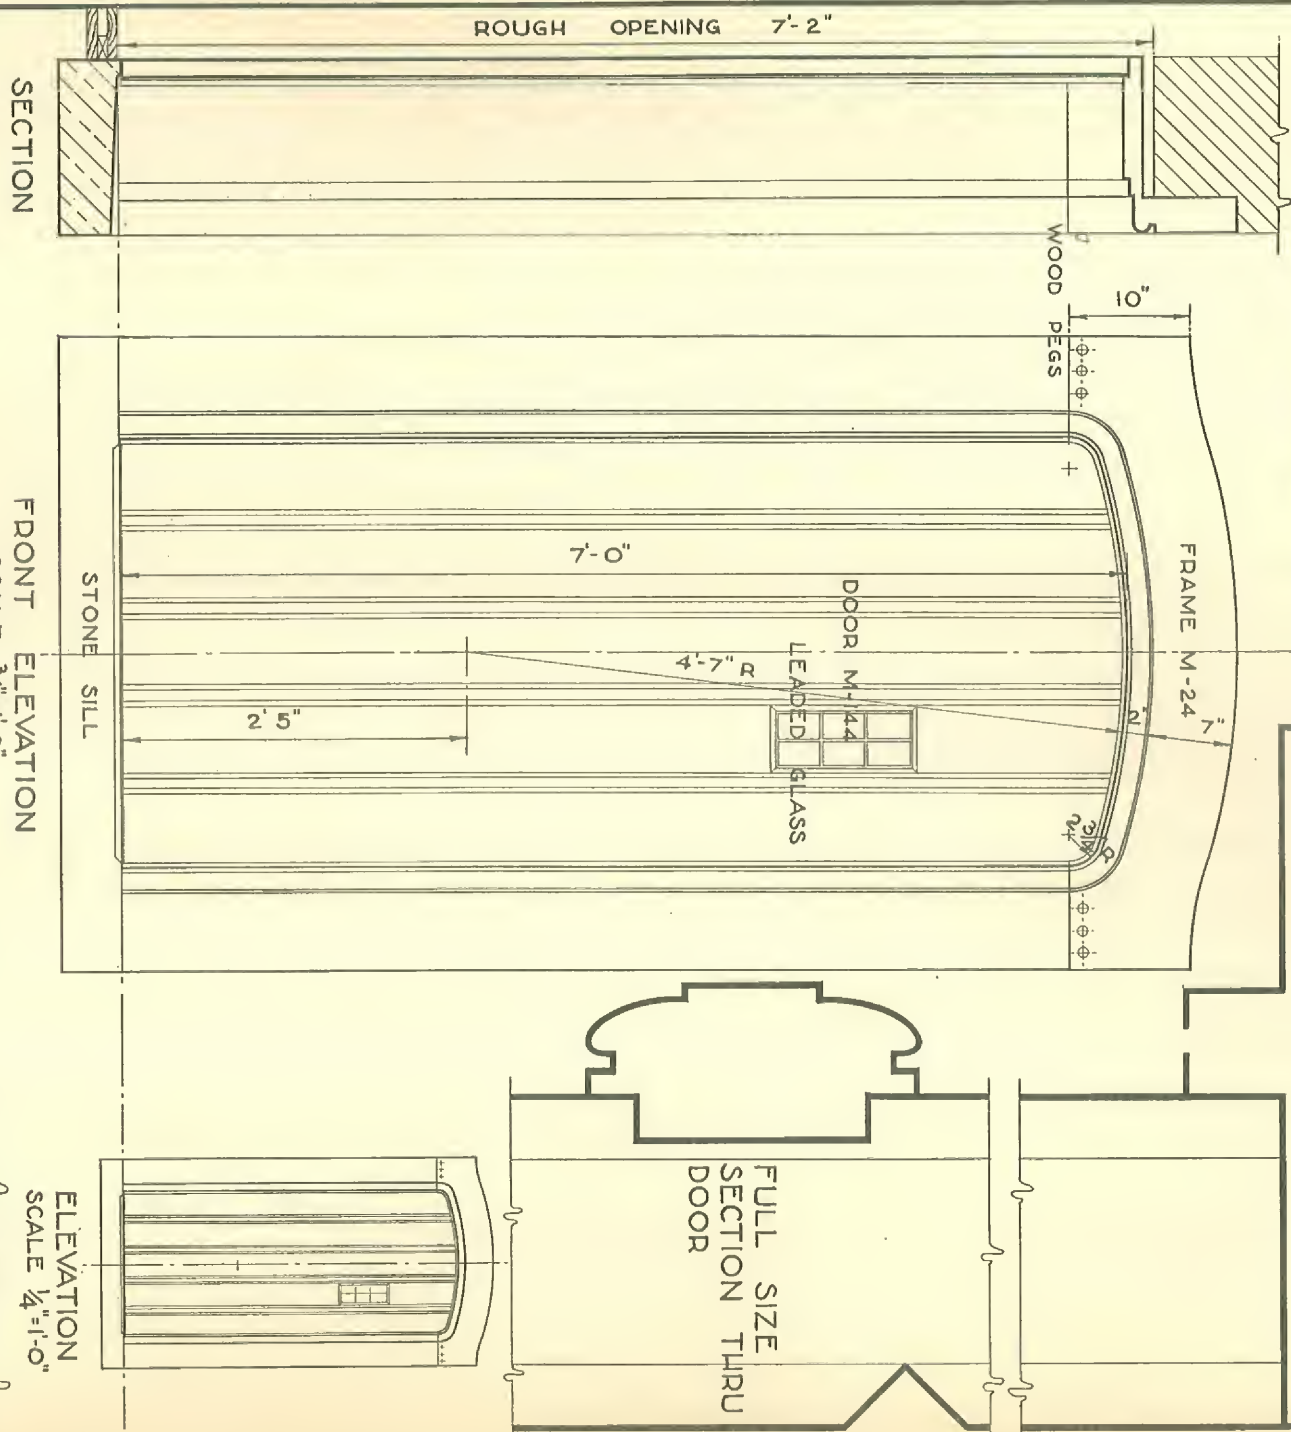

FULL SIZE PROFILE
OF CORNICE MOULD

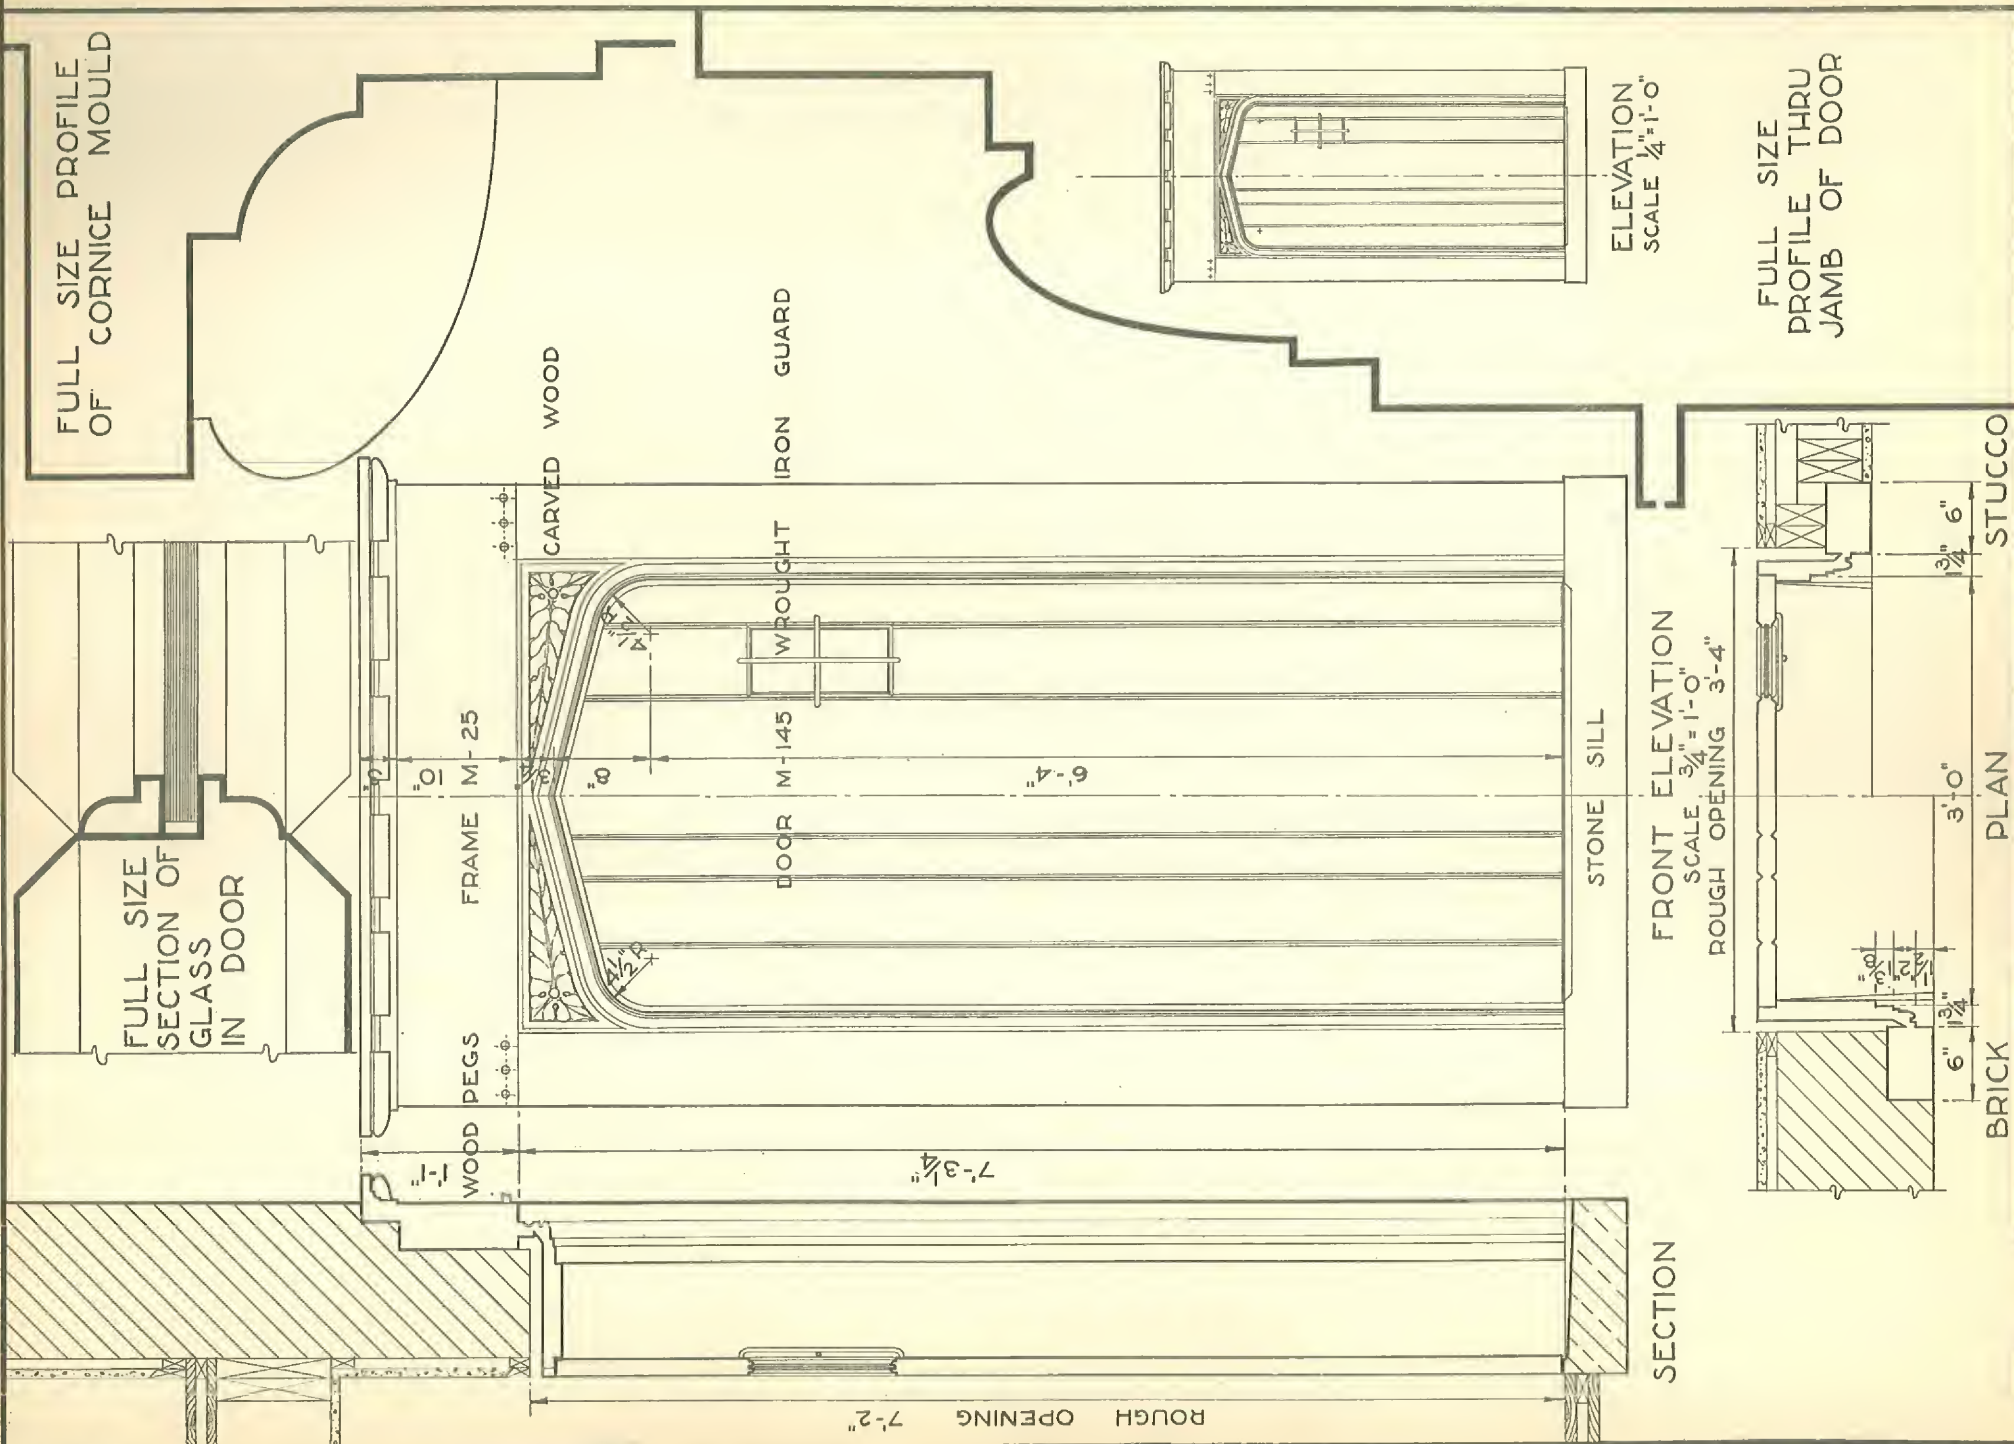

FULL SIZE PROFILE
THRU
JAMB OF DOOR

FULL SIZE
SECTION THRU
DOOR

ROUGH OPENING 7'-2"

SECTION

FRONT ELEVATION
SCALE $\frac{3}{4}"=1'-0"$





ROUGH OPENING 3'-4"

BRICK

PLAN

STUCCO

ELEVATION
SCALE $\frac{1}{4}"=1'-0"$

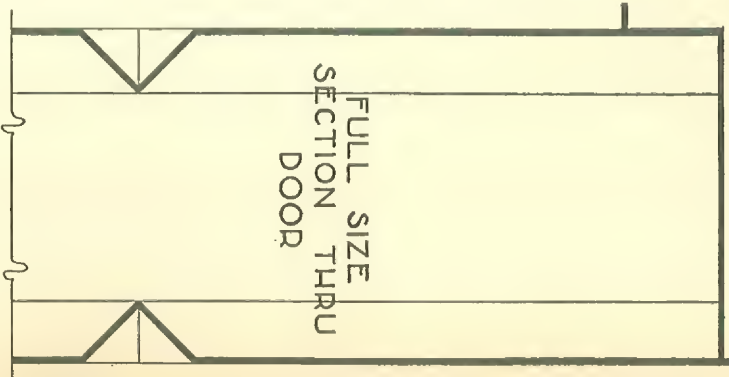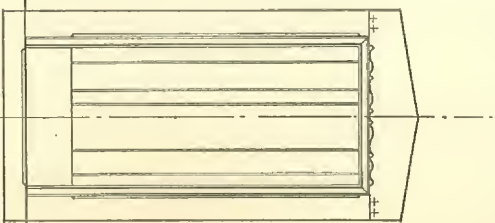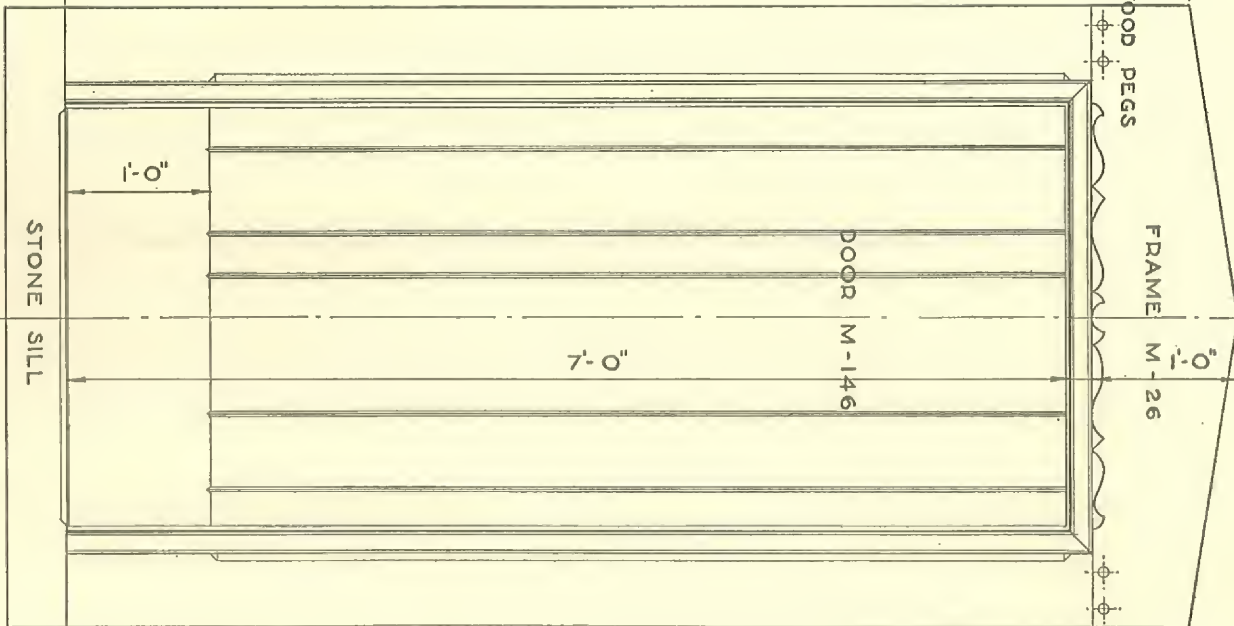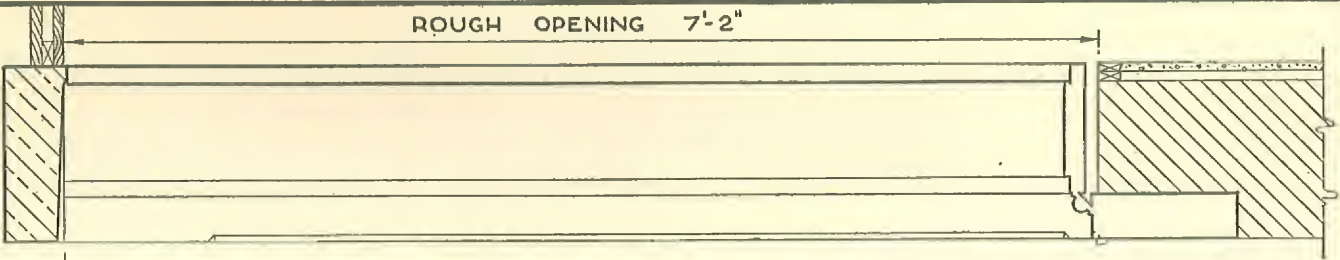

HALF FULL SIZE PROFILE
OF CROWN MOULD

NOTE - ROOF CONSTRUCTION
FURNISHED BY OTHERS

HALF
FULL SIZE
HEAD
PROFILE

ELEVATION
SCALE $\frac{1}{4}" = 1'-0"$

SECTION

FRONT ELEVATION
SCALE $\frac{3}{4}" = 1'-0"$

ROUGH OPENING 3'-4"

BRICK

PLAN

FRAME


ROUGH OPENING 6'-10"

ENGLISH SASH & FRAMES


MORGAN

INDEX SHEET NO.108


WESTERN OPENINGS

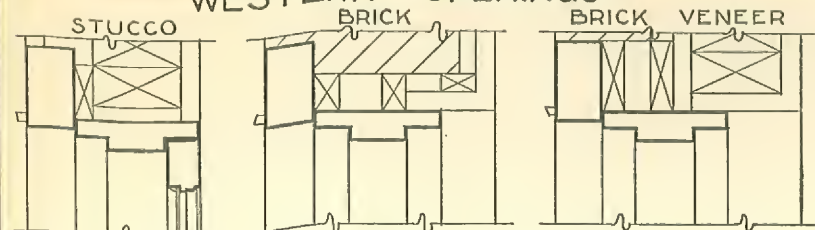


HEAD & JAMB SECTIONS

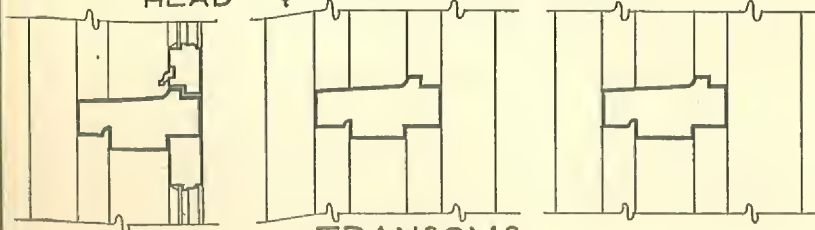


TRANSOMS

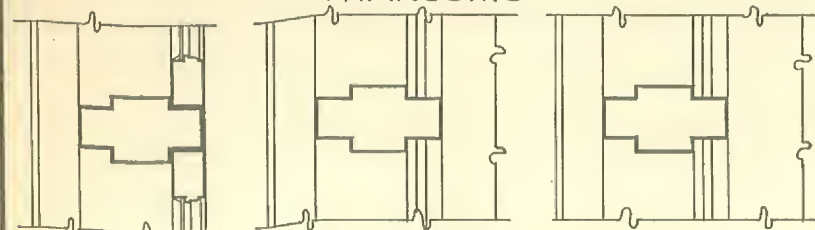

MULLIONS








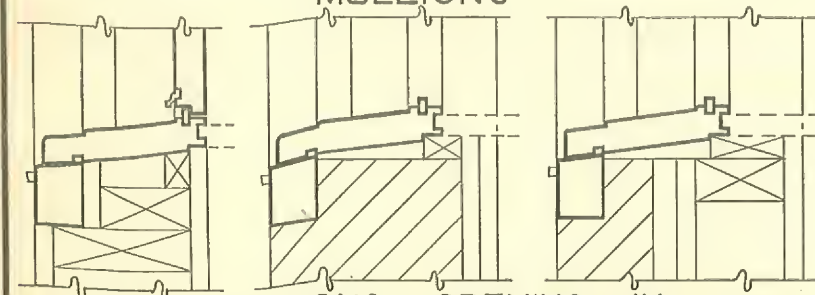


SILL SECTIONS OPENING IN

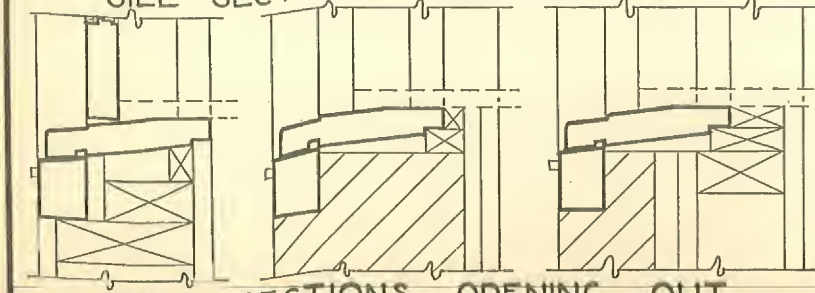

SILL SECTIONS OPENING OUT


DETAILS OF
FRAMES M-270
SCALE $\frac{1}{2}''=1'-0''$

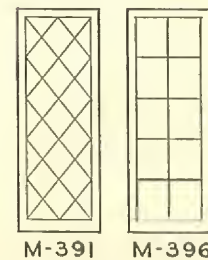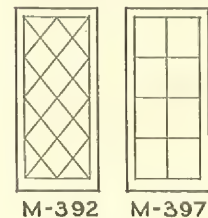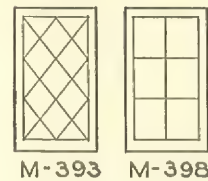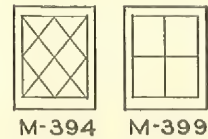


TYPICAL SASH
LAYOUTS
SCALE $\frac{1}{4}''=1'-0''$

SASH ARE FURNISHED
IN ANY COMBINATION


EASTERN OPENINGS

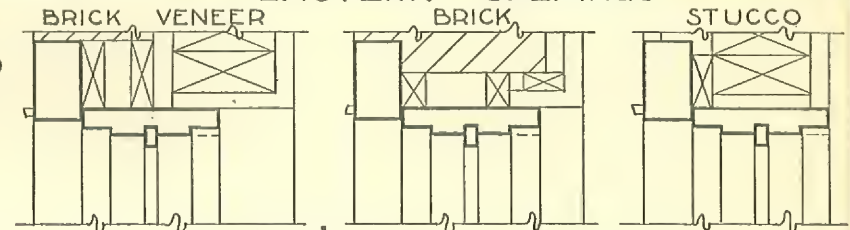


HEAD & JAMB SECTIONS

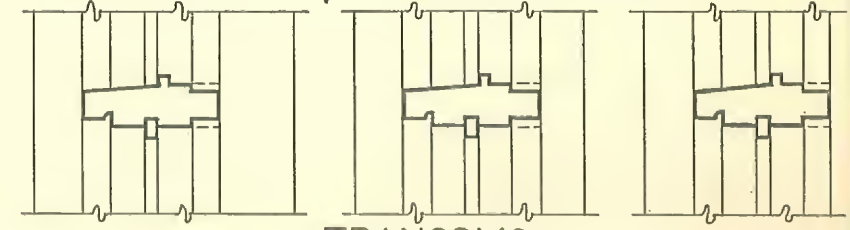


TRANSOMS

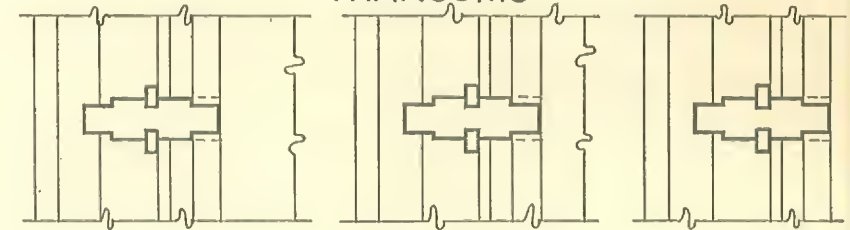



MULLIONS

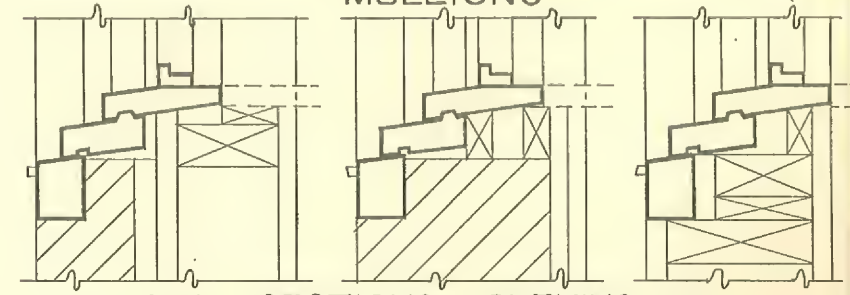


SILL SECTIONS OPENING IN

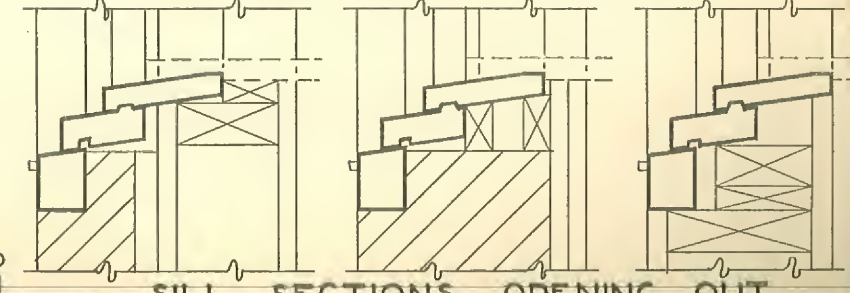

SILL SECTIONS OPENING OUT

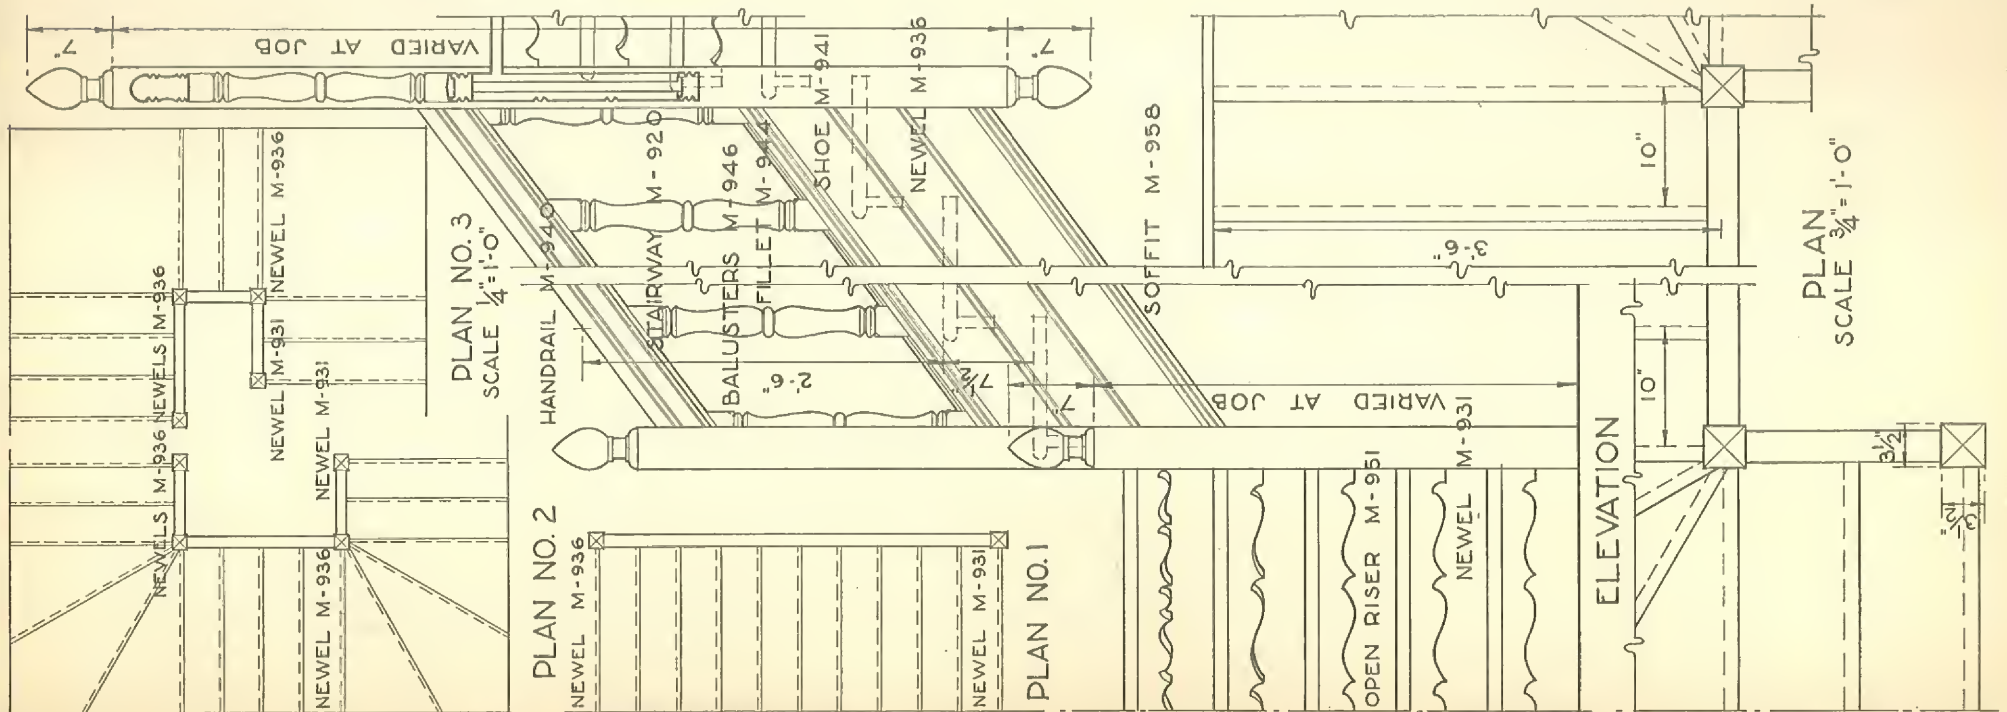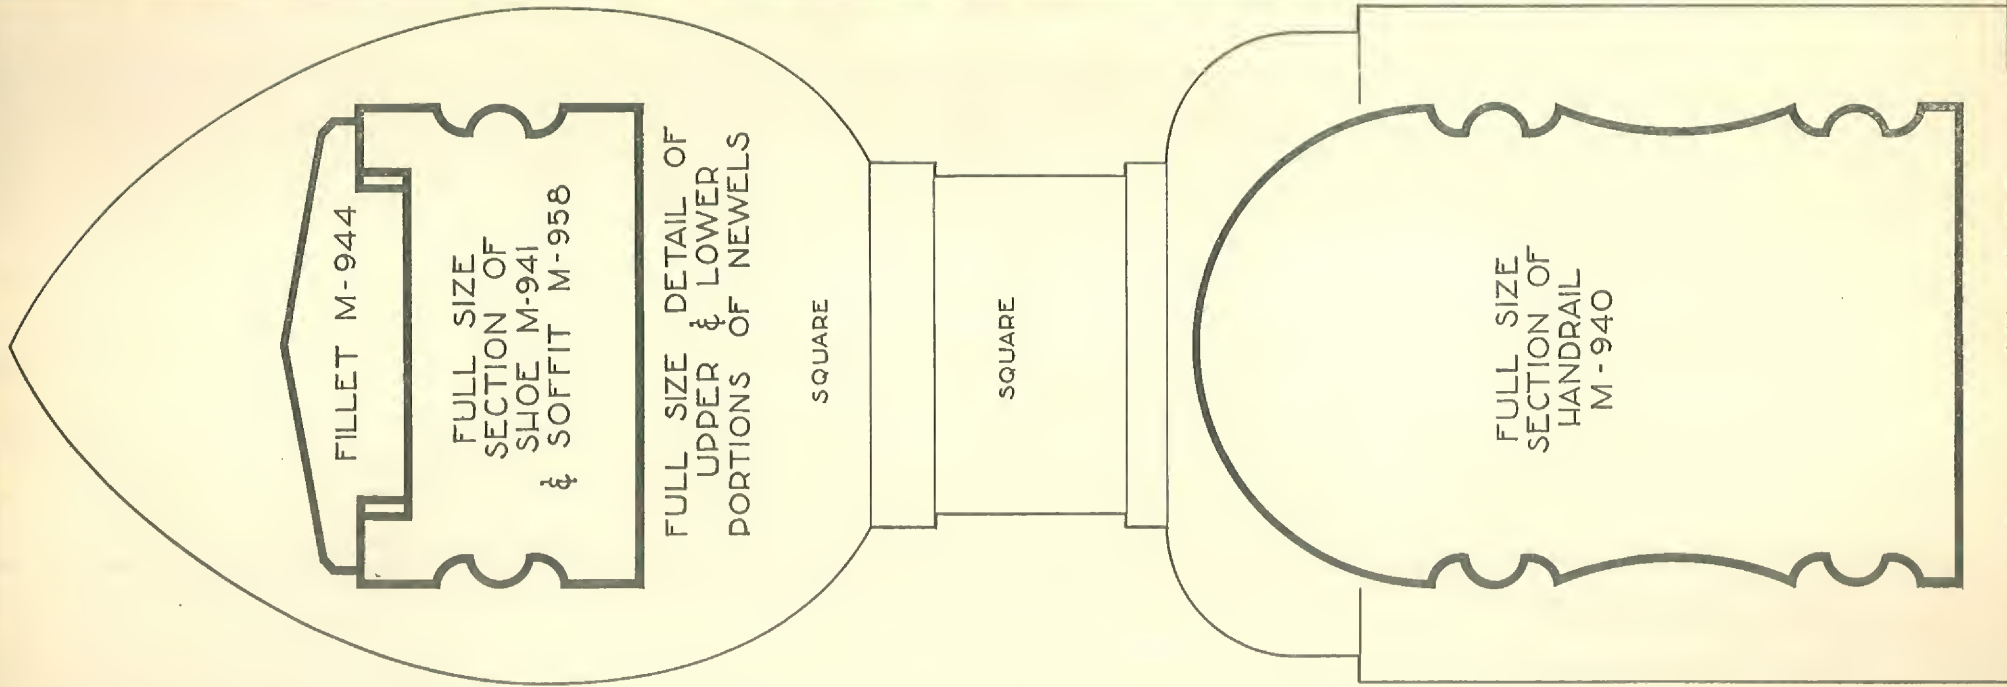

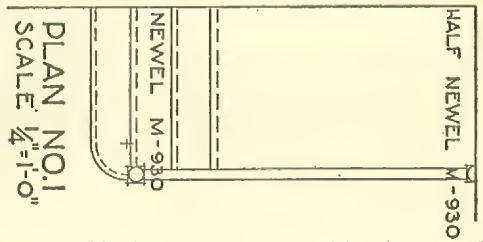

FULL SIZE
DETAIL OF
HALF OF
HANDRAIL
M-940

FULL SIZE DETAIL OF
UPPER PORTION OF NEWELS
M-930

TURNED

HANDRAIL
M-940

FILLET
M-944
SHOE
M-941

STAIRWAY M-922

BALUSTERS M-946

WALL PANNELLING M-1341

VARIED AT JOB

VARIES

NEWEL M-930

FLOOR MOULD M-1324

ELEVATION
SCALE 3/4"=1'-0"


PLAN

TRANSITIONAL

SQUARE

FILLET M-944

FULL SIZE OF
STAIR SHOE
M-941

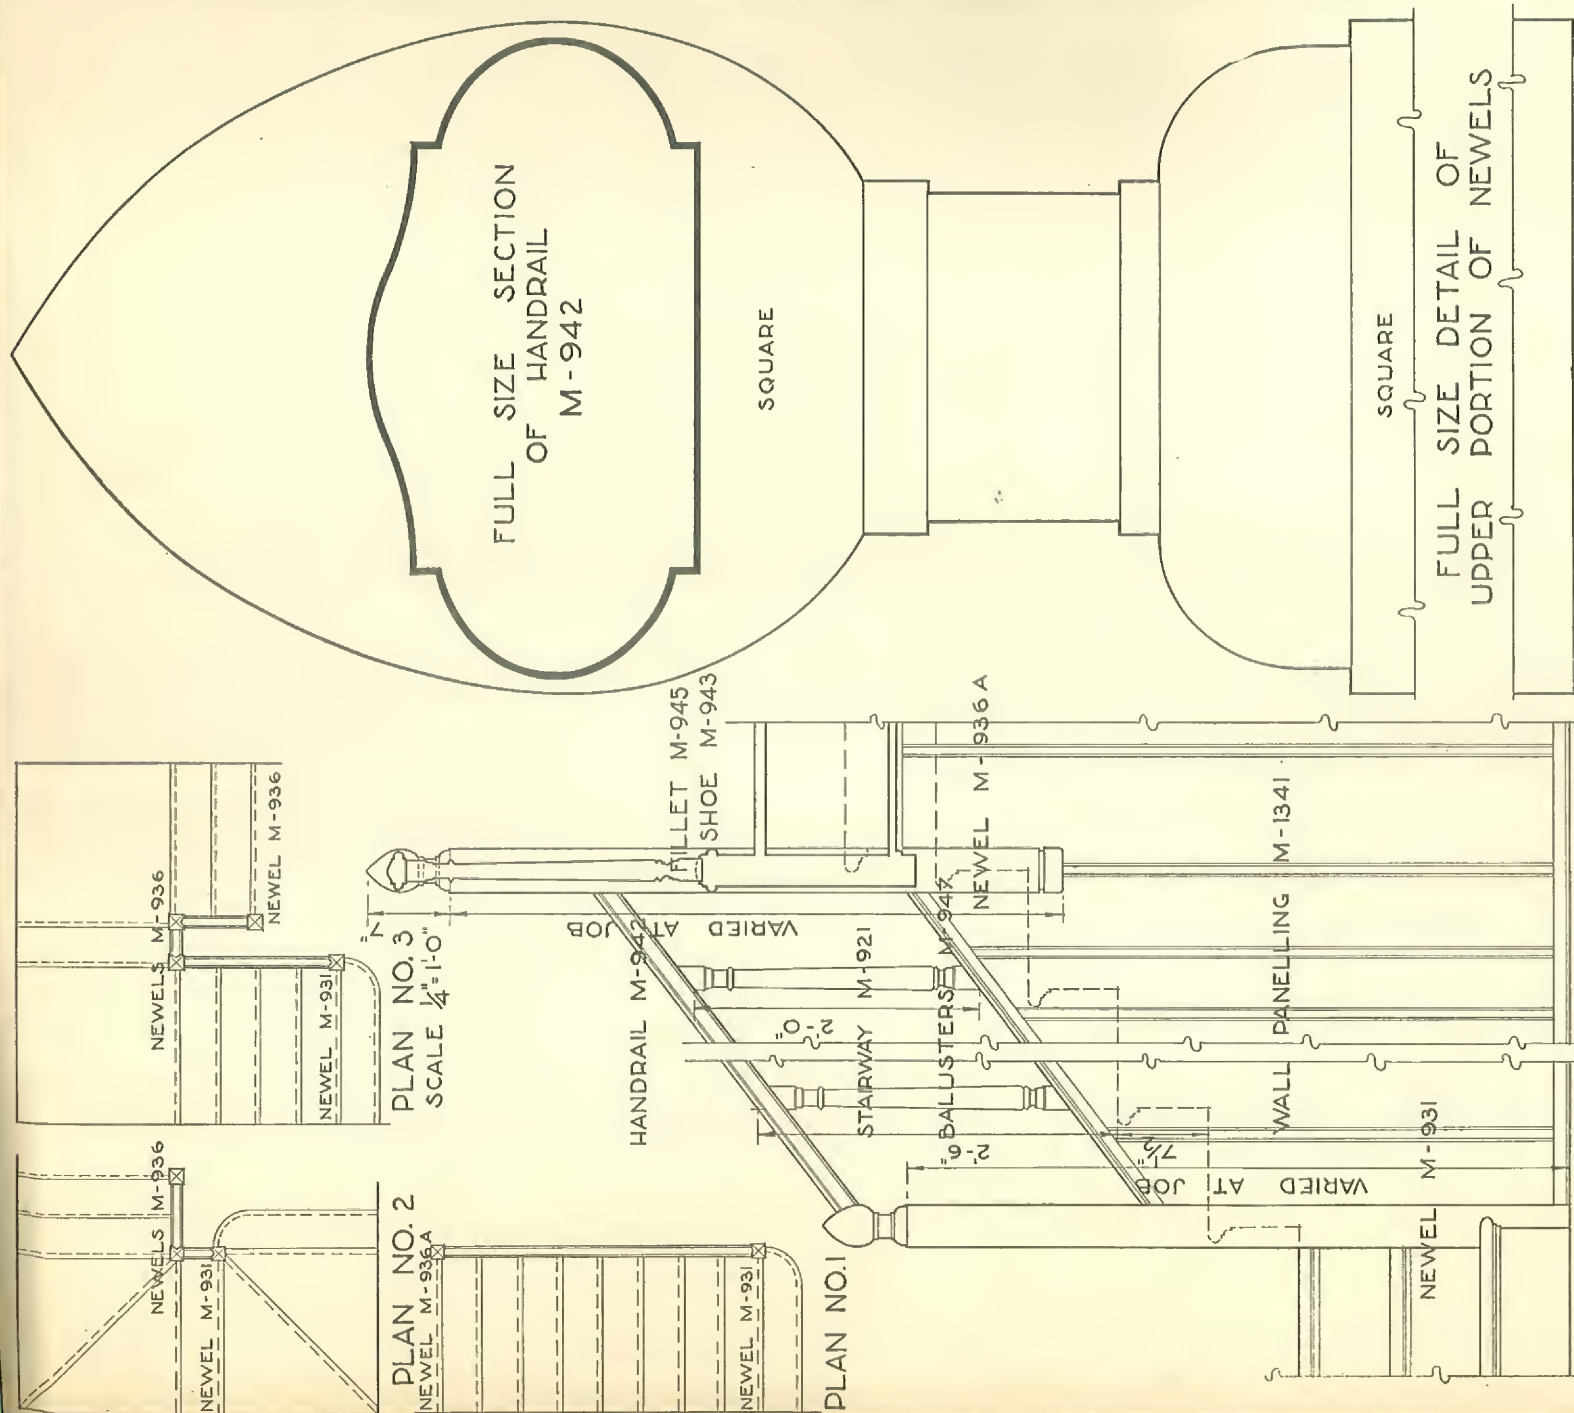



SQUARE

FULL SIZE DETAIL OF
UPPER PORTION OF NEWELS

SQUARE

NOTE

NEWEL M-936A IS USED WHEN STAIRWAY IS CLOSED WITH PANELLING. IF STAIRWAY IS OPEN NEWEL M-936 IS USED AT THE ANGLES & LANDINGS WITH A DROP TO THE TOP.

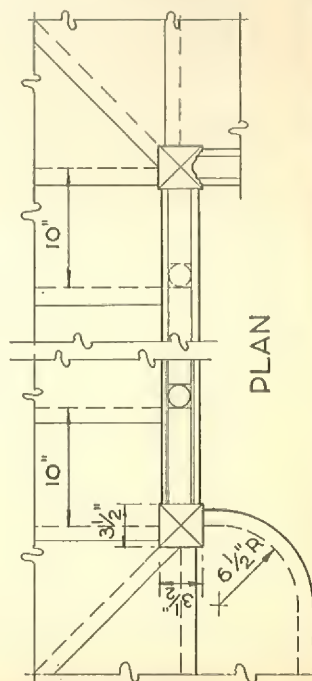

FULL SIZE BASE OF ANGLE & LANDING NEWEL

M-940

M-946

M-947

M-958

M-952

M-954

M-951

STARTING STEPS & RISERS
SCALE $\frac{3}{4}" = 1'-0"$

HANDRAIL M-942

HANDRAIL M-940

FILLET M-945

SHOE M-943

FILLET M-944


SHOE M-941
& SOFFIT M-958


FULL SIZE DETAILS



SCALE $1\frac{1}{2}" = 1'-0"$
STAIR NEWELS & BALUSTERS




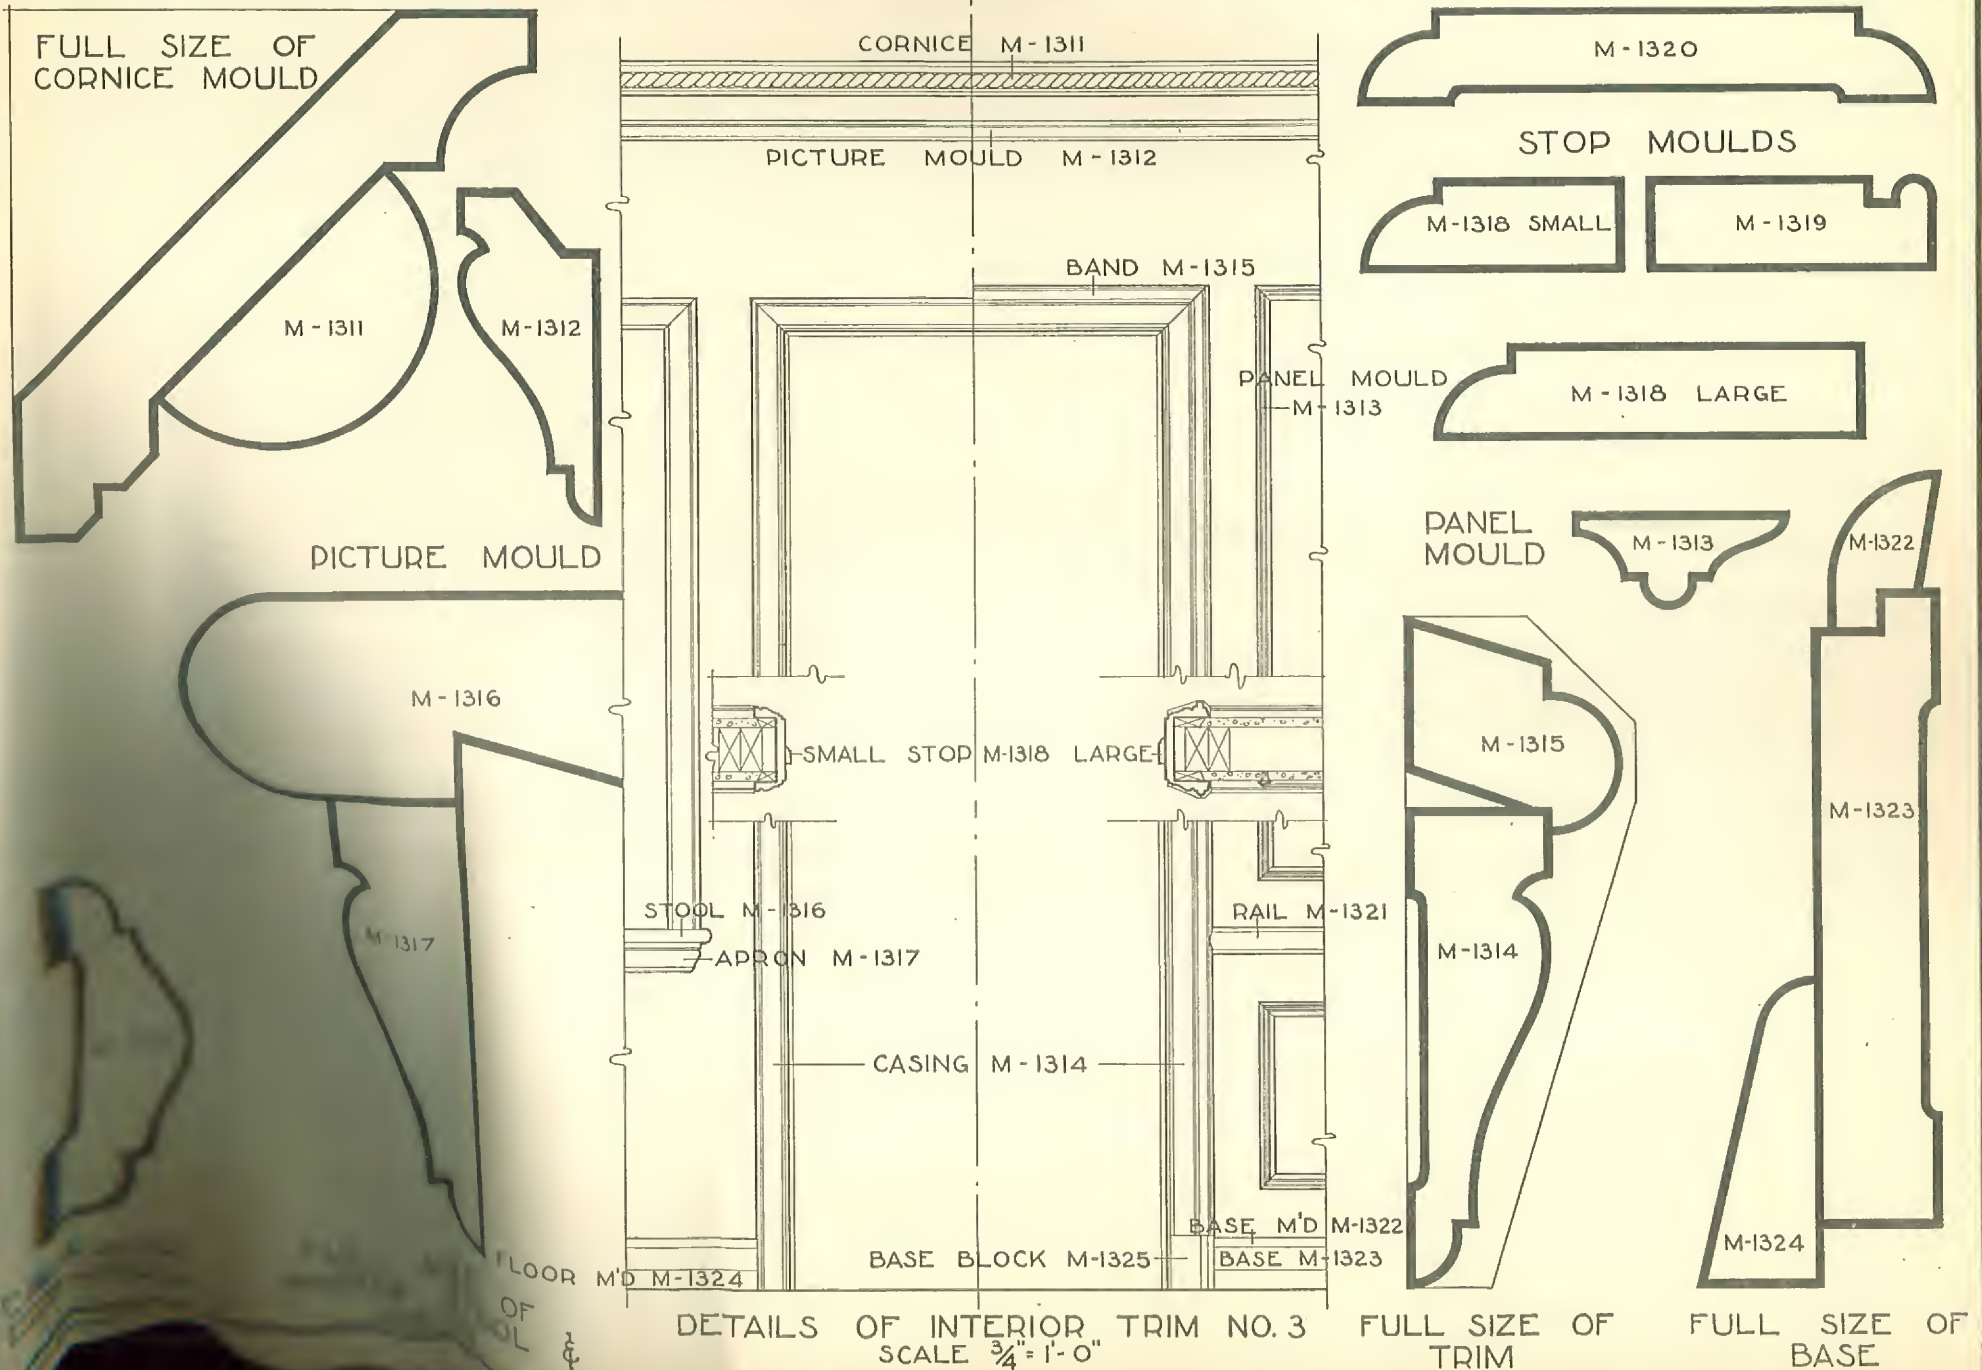

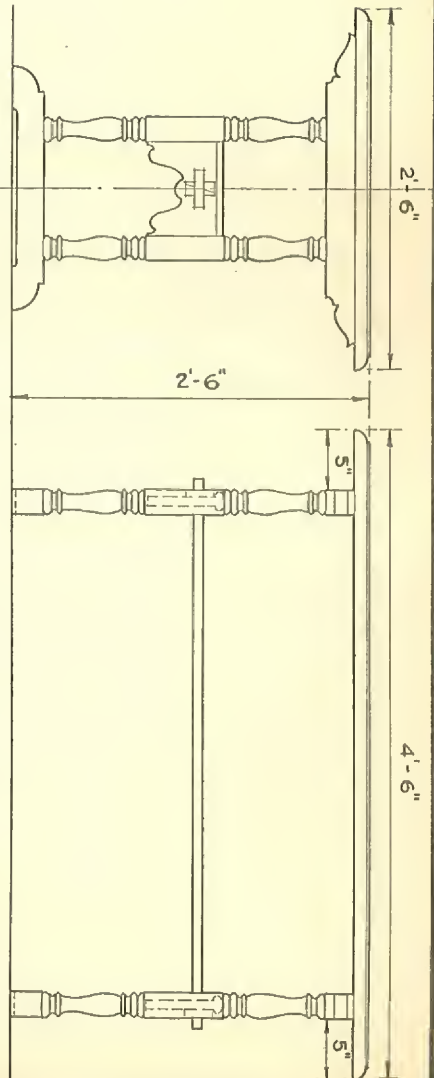


END ELEVATION OF TABLE

SIDE ELEVATION OF TABLE
SCALE $\frac{3}{4}" = 1'-0"$

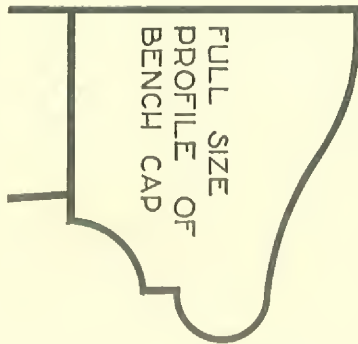

FULL SIZE
PROFILE OF
BENCH CAP

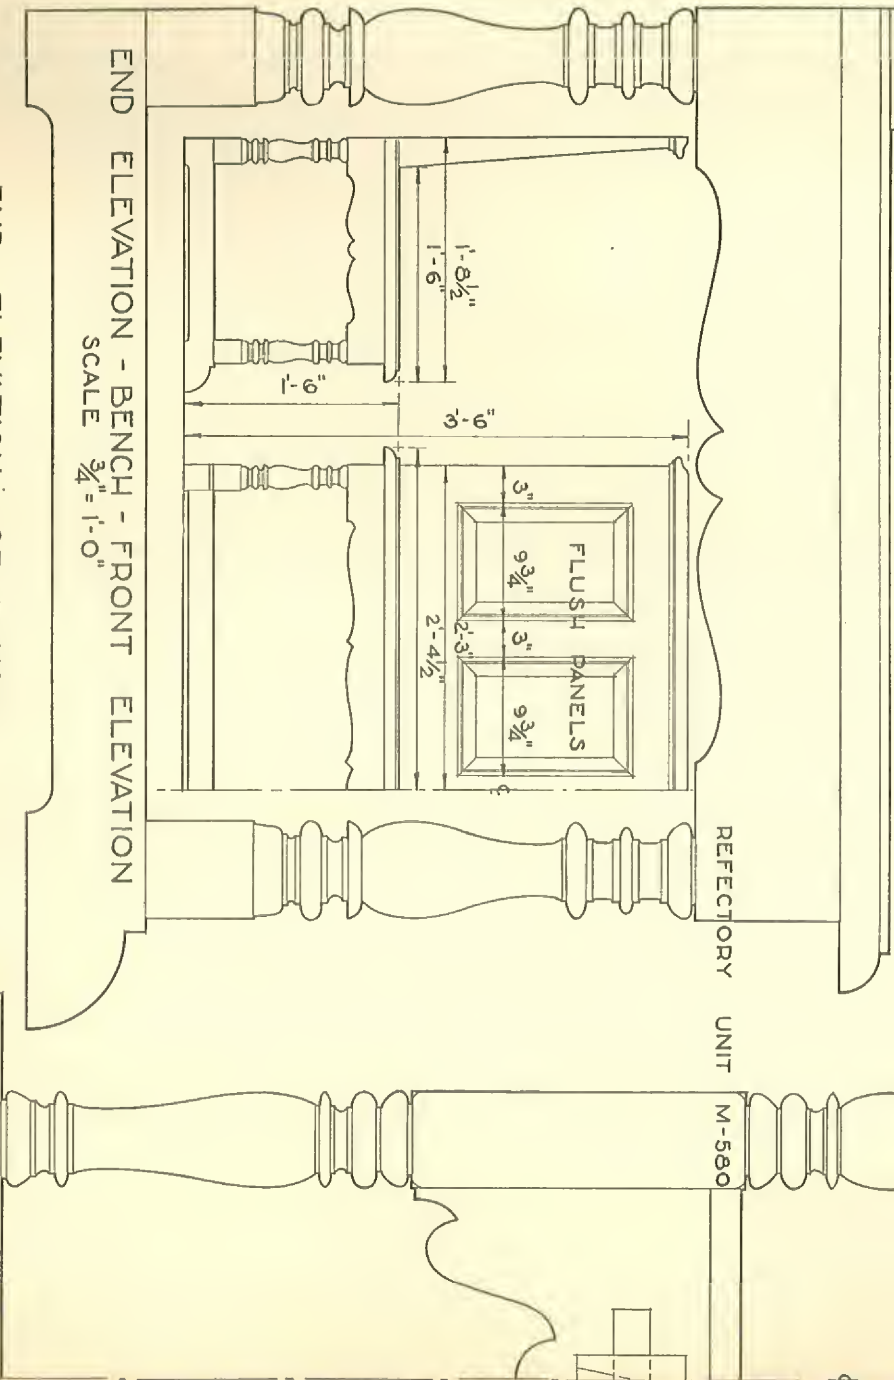

END ELEVATION - BENCH - FRONT ELEVATION


SCALE $\frac{3}{4}" = 1'-0"$

END ELEVATION OF BENCH
SCALE $3" = 1'-0"$

HALF END ELEVATION OF TABLE

REFLECTORY UNIT

M-580

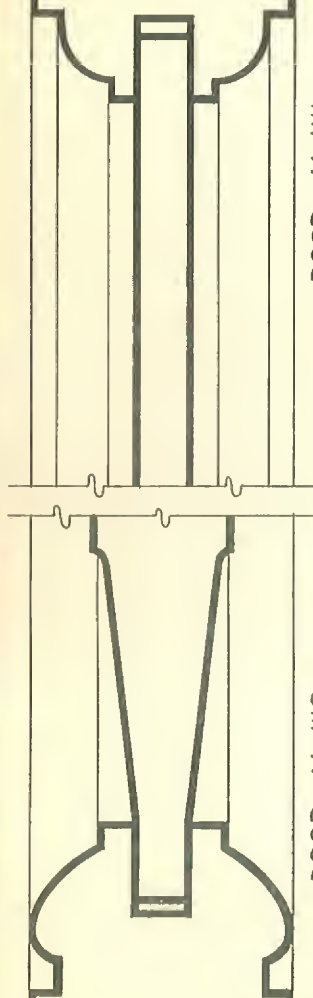


DOOR M-1110


DOOR M-1111

FULL SIZE SECTIONS OF DOORS

1 3/8" THICK

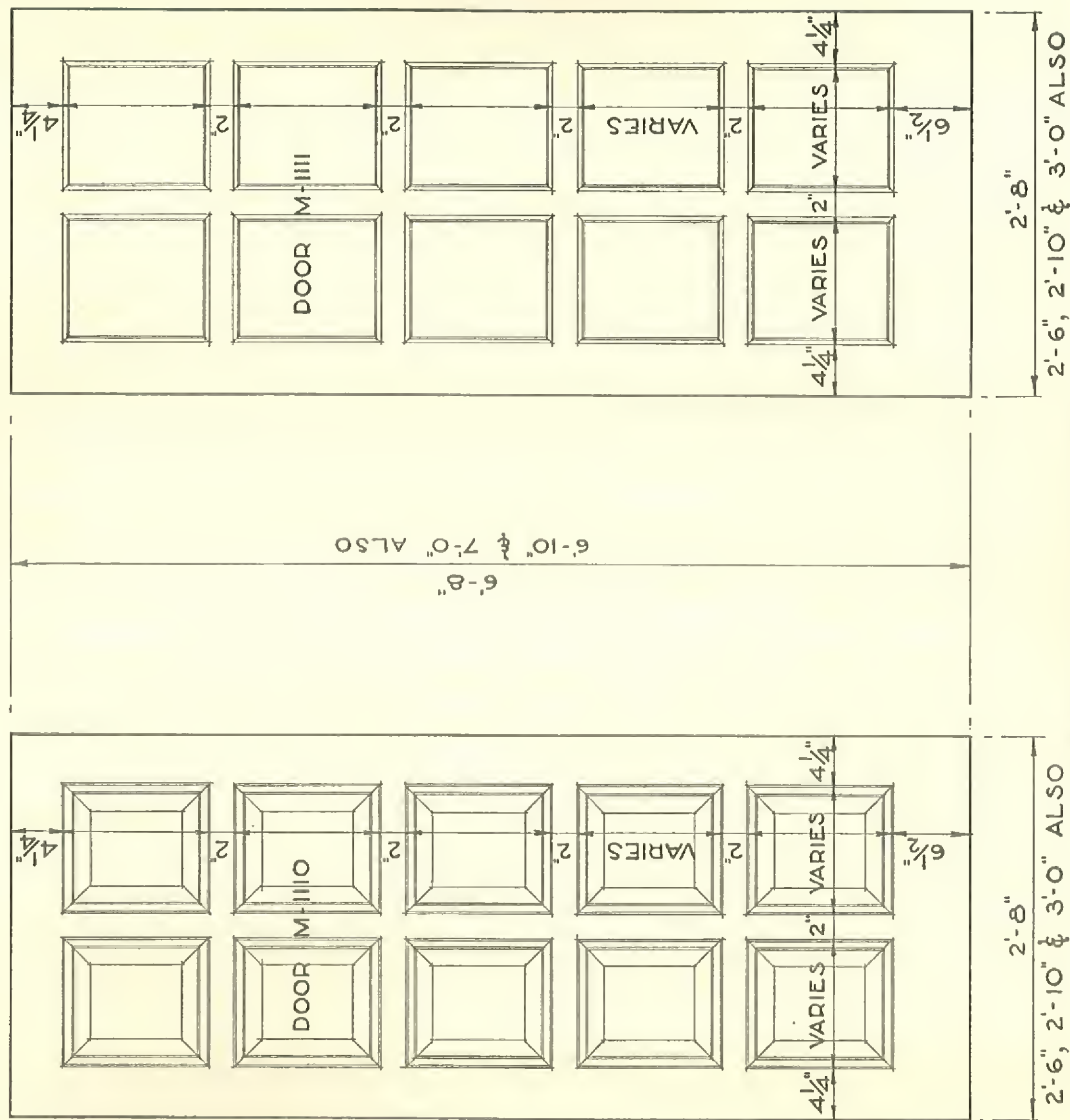

INTERIOR DOORS
SCALE 3/4" = 1'-0"

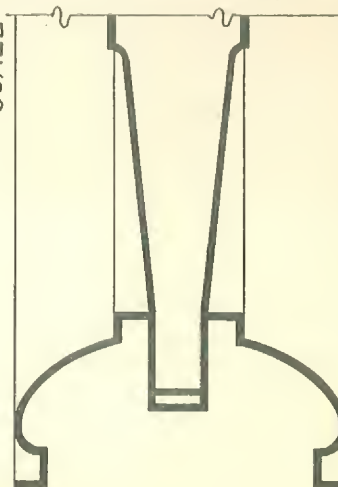




DOOR M-1110

DOOR M-1111

FULL SIZE SECTIONS OF DOORS 1 3/4" THICK

DOORS M-1113 & 1114
FULL SIZE SECTIONS


DOOR M-1130
1 3/4" THICK

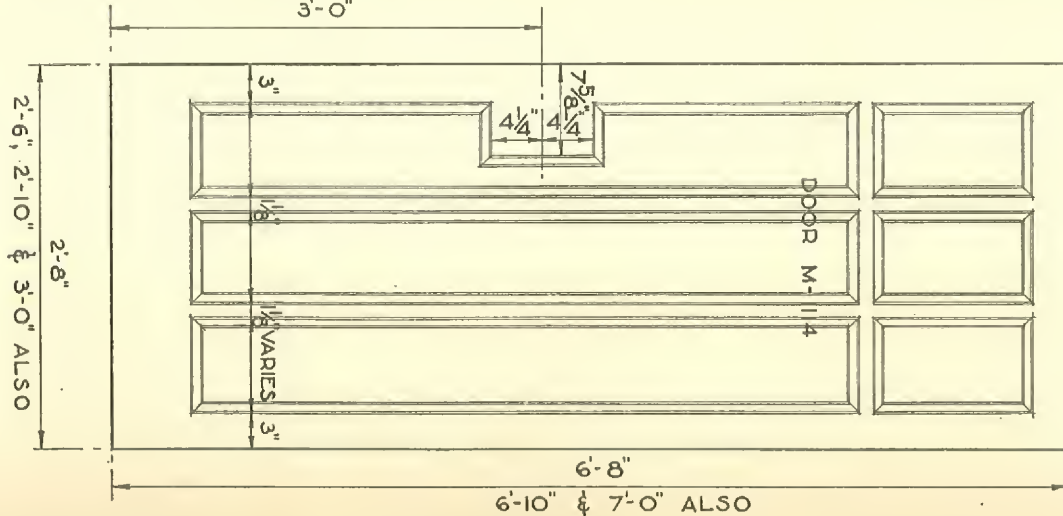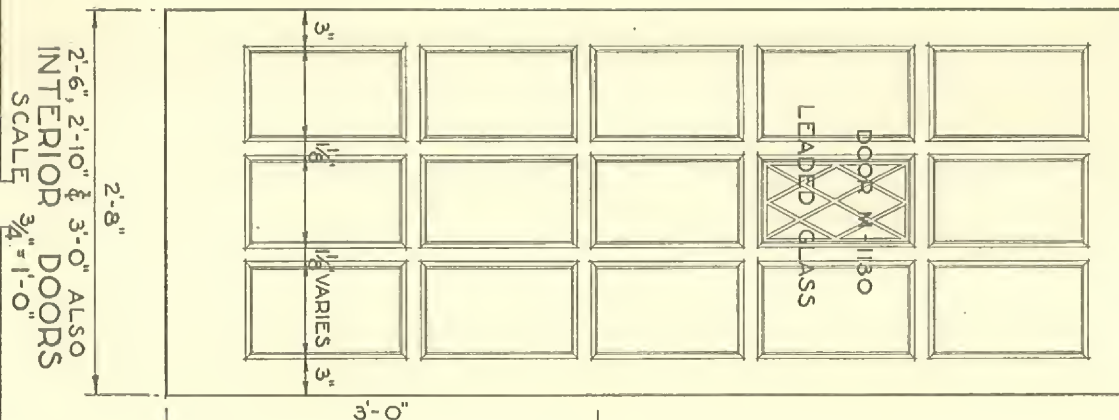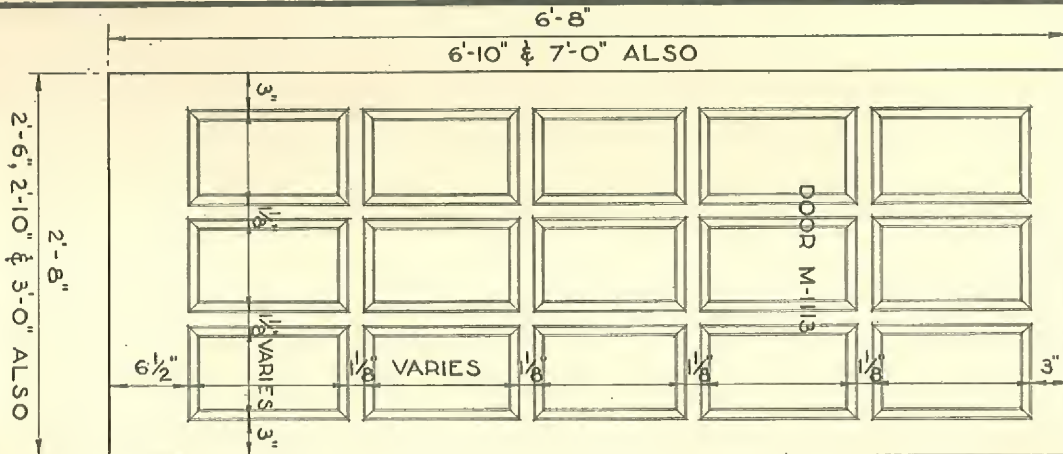



DOORS M-1113 & 1114
FULL SIZE SECTIONS

DOOR M-1130
1 3/8" THICK


DOORS M-1112 & 1115
FULL SIZE SECTIONS OF DOORS 1 $\frac{3}{8}$ " THICK

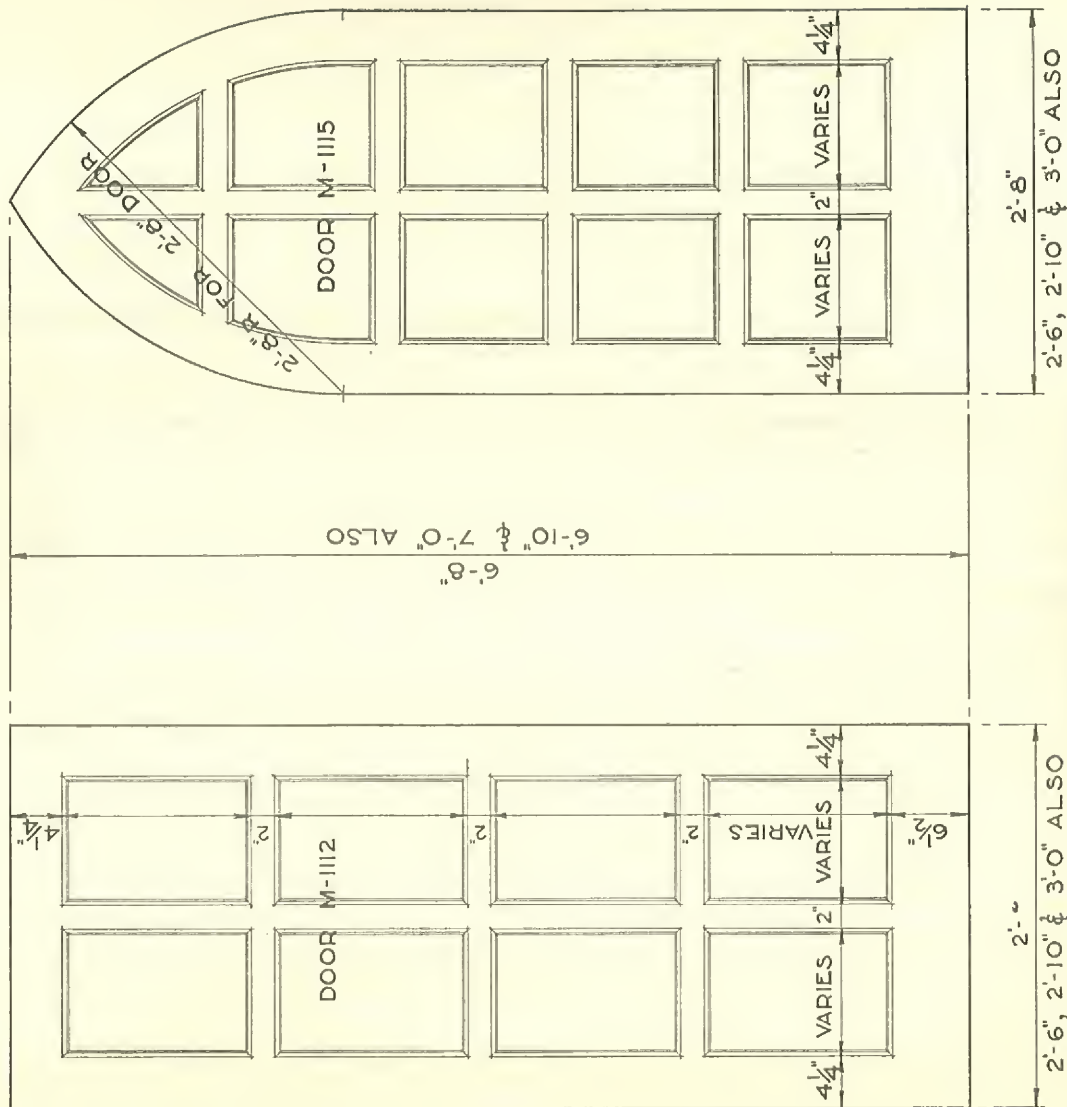

DOORS M-1112 & 1115
FULL SIZE SECTIONS OF DOORS 1 $\frac{3}{4}$ " THICK

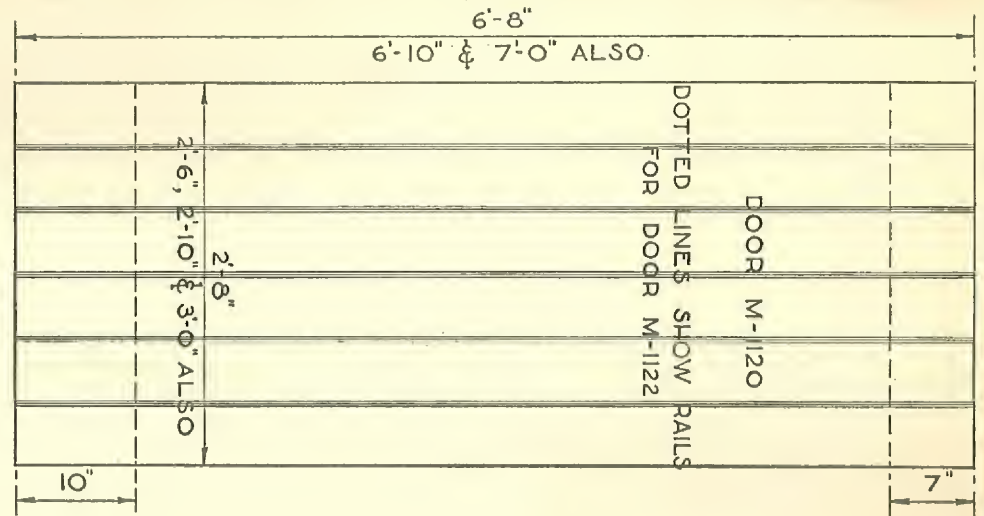
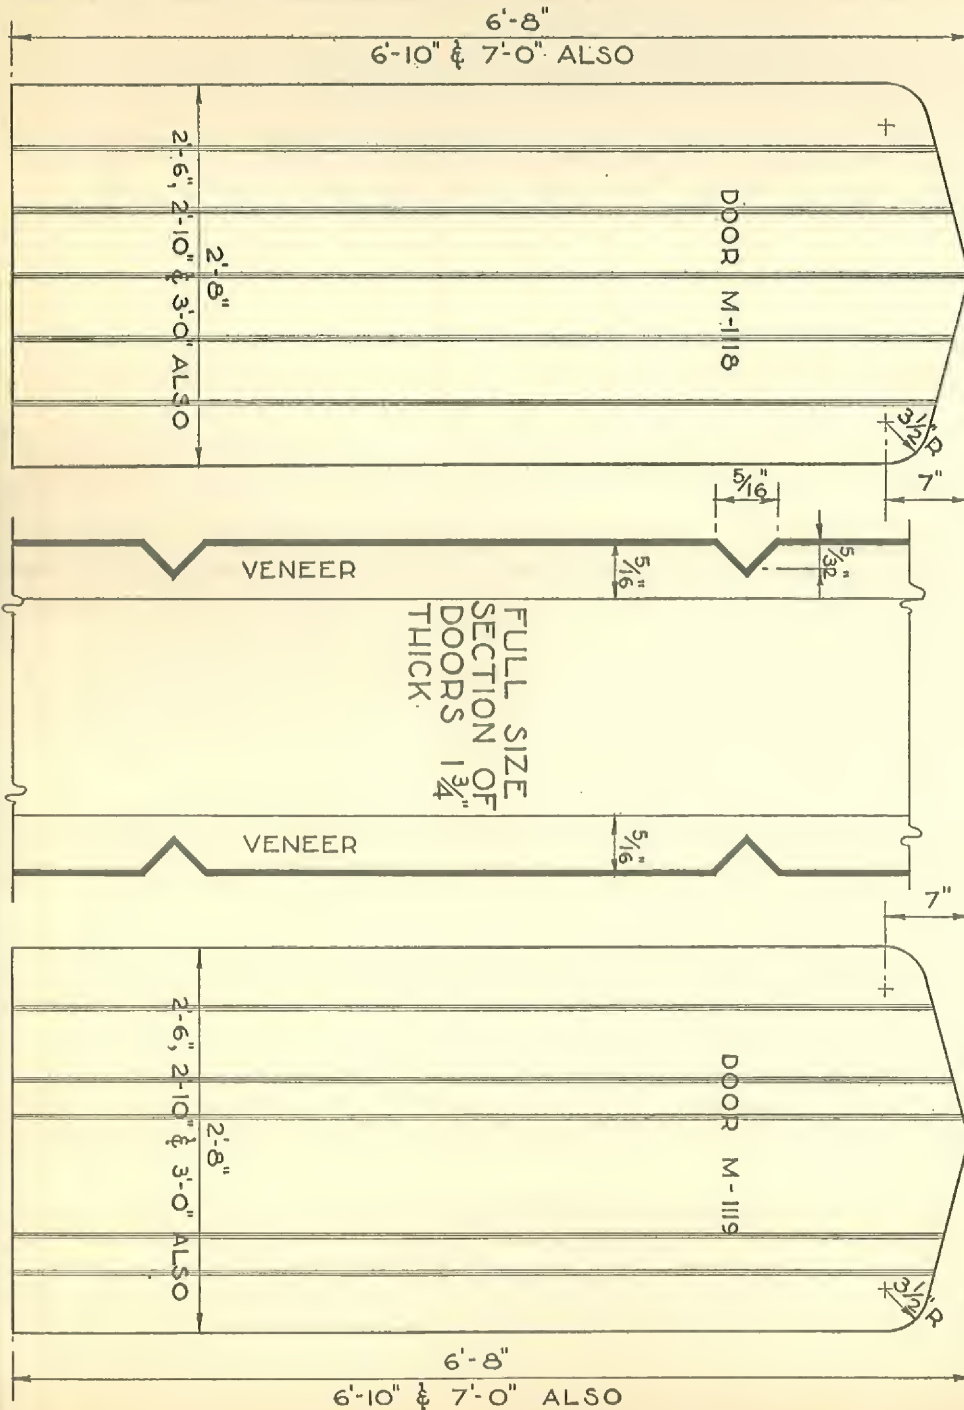


INTERIOR DOORS
SCALE 3/4"=1'-0"


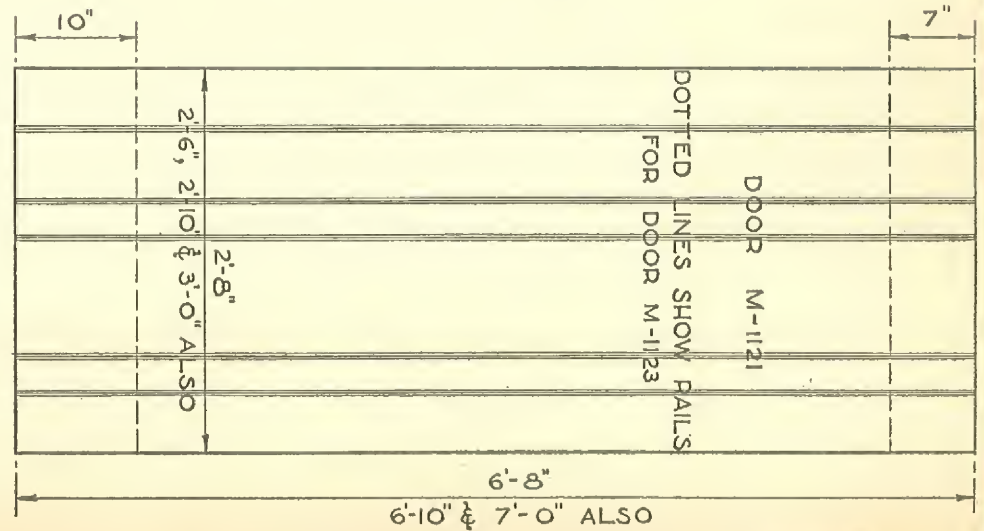



ENGLISH DOORS M-III6-7-24-5 **MORGAN**


INDEX SHEET NO.-119

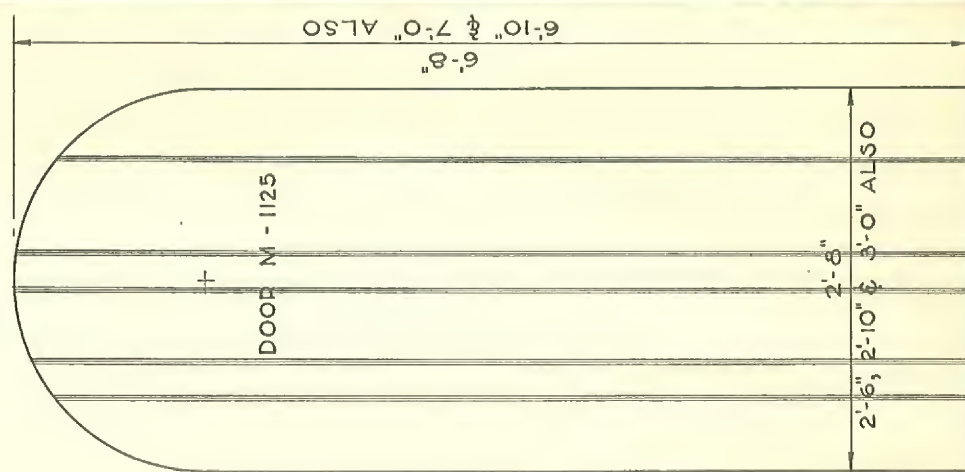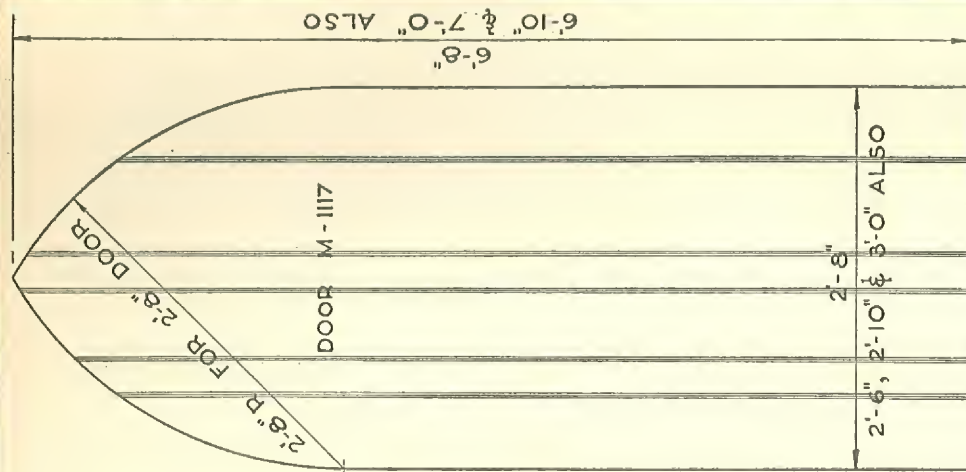


INTERIOR DOORS
SCALE $\frac{3}{4}" = 1'-0"$

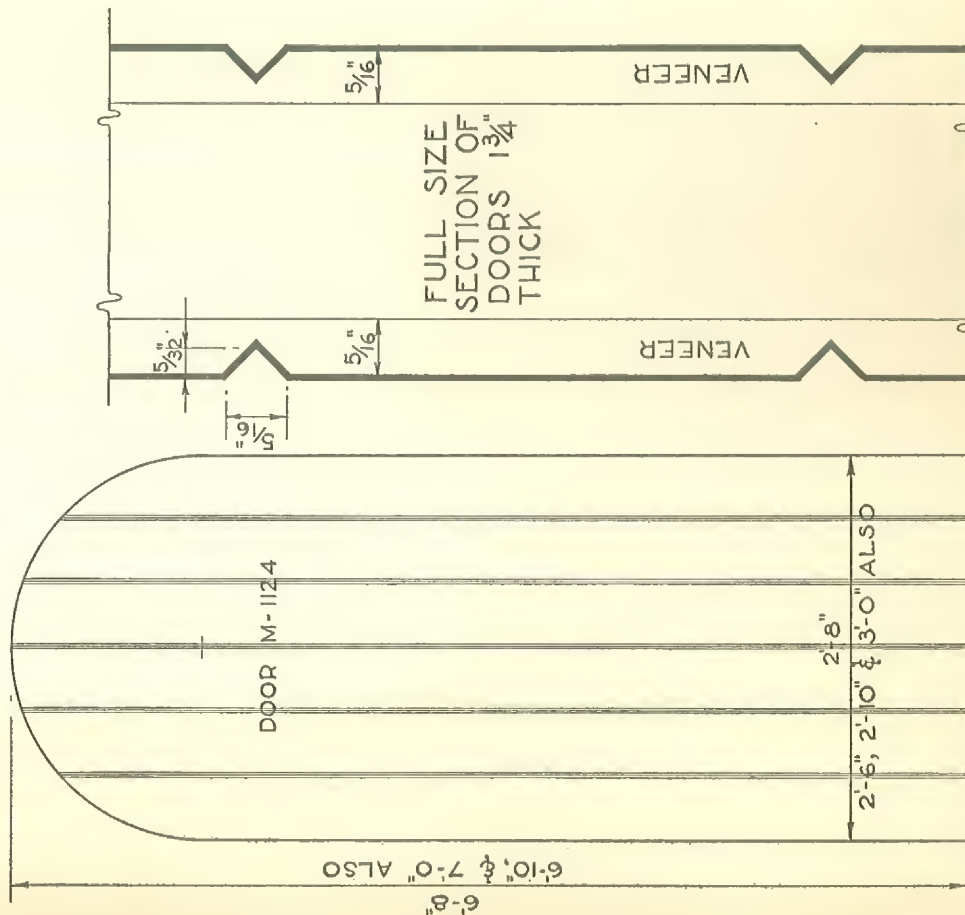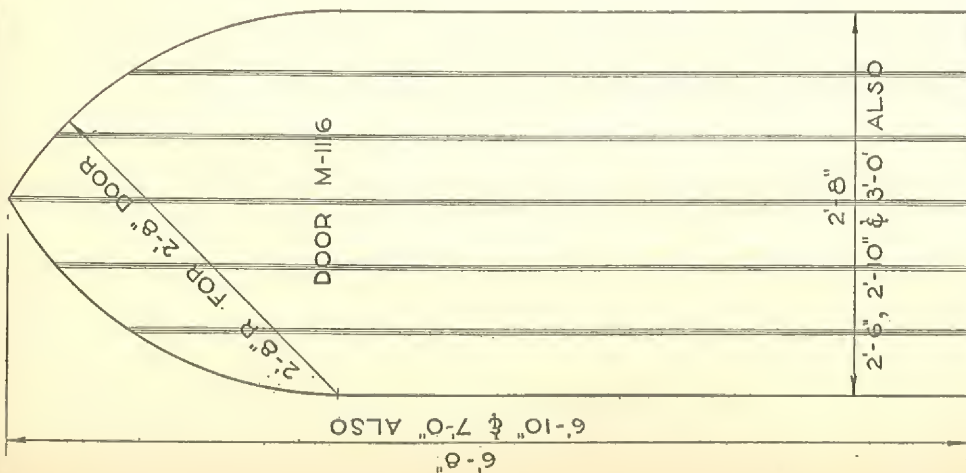




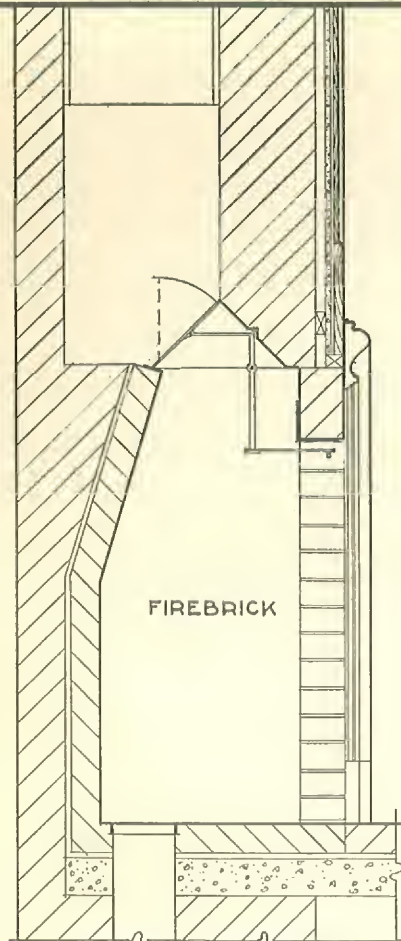


SECTION

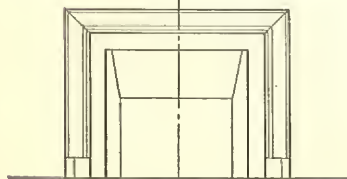


ELEVATION
SCALE $\frac{1}{4}$ " = 1'-0"

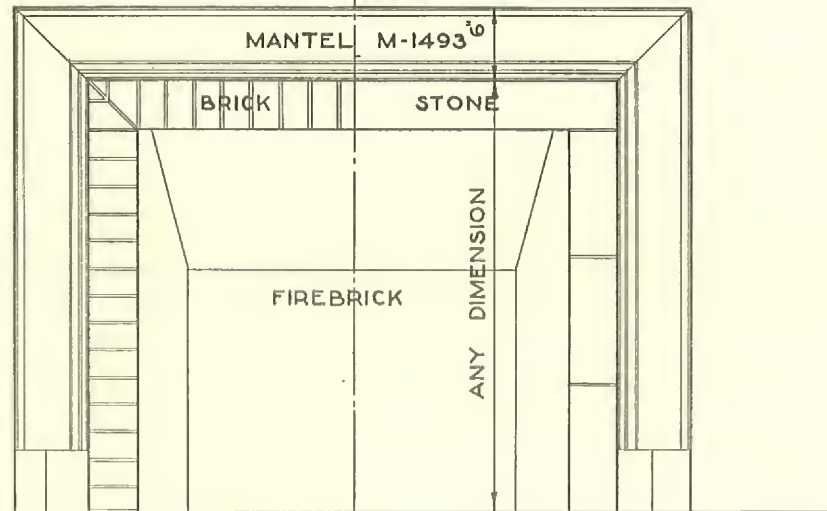


FRONT ELEVATION
SCALE $\frac{3}{4}$ " = 1'-0"

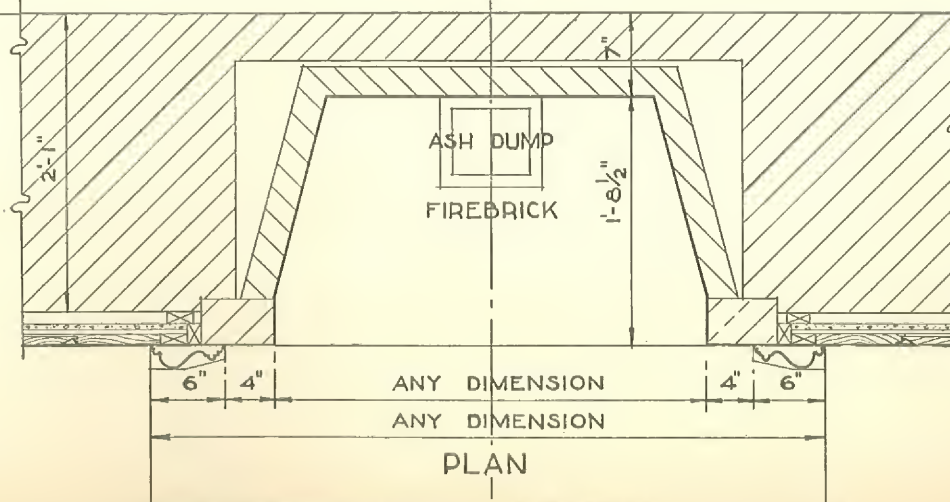


FULL SIZE
PROFILE OF
MANTEL SURROUND

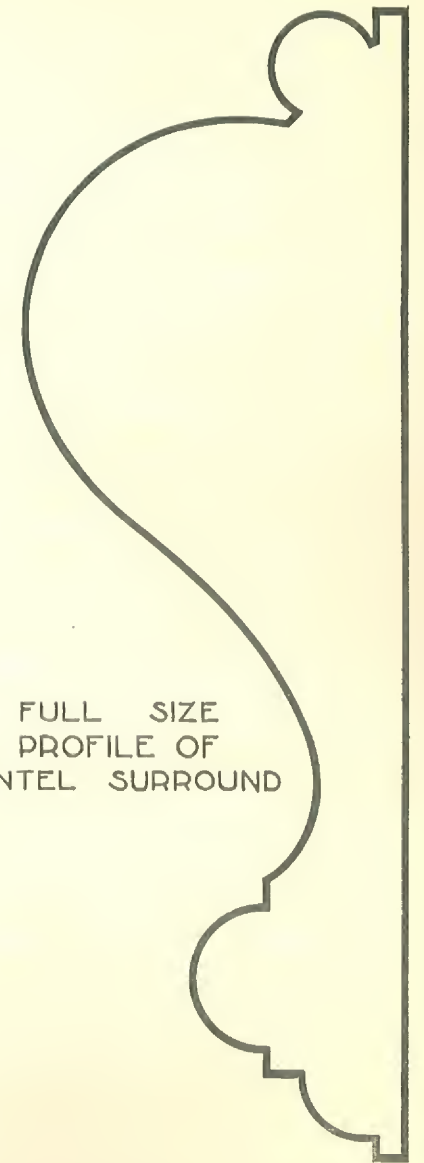


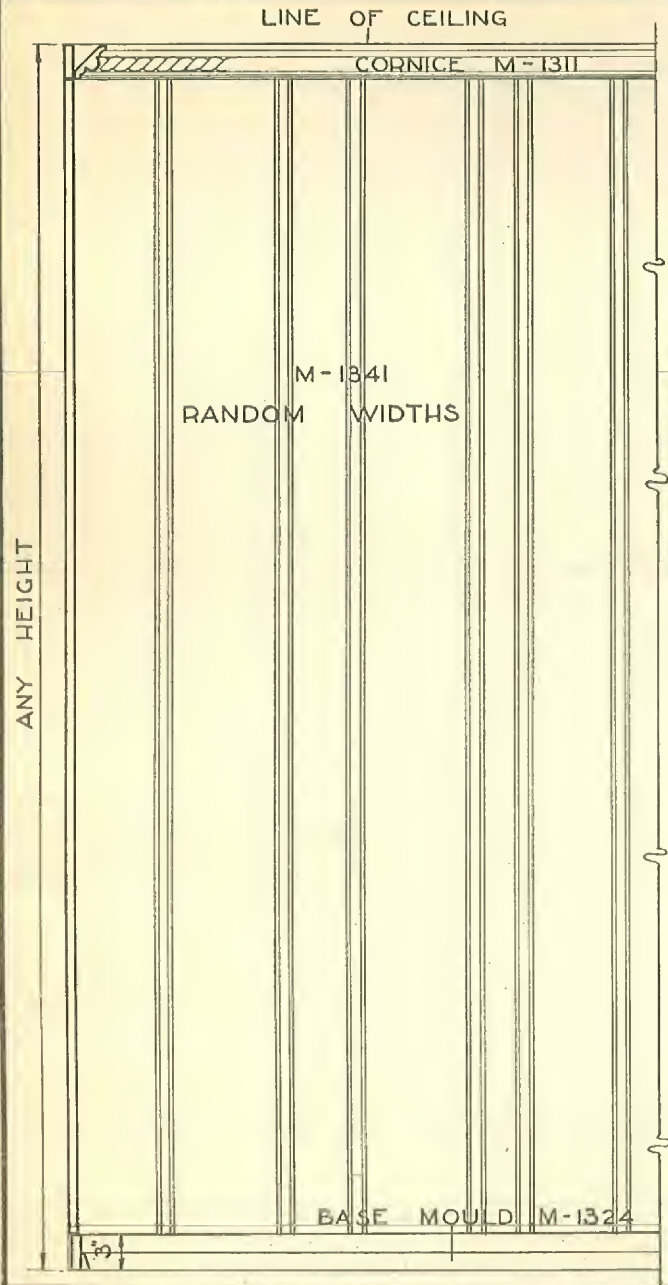

WALL PANELLING M-1341
SCALE $\frac{3}{4}" = 1'-0"$

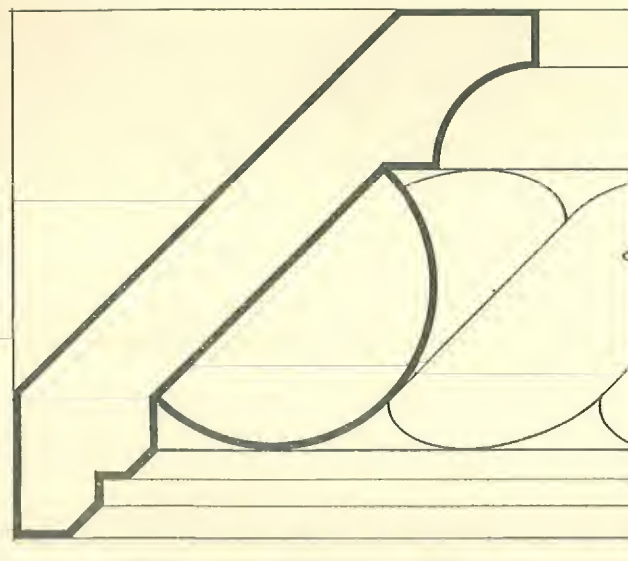


FULL SIZE DETAIL
OF CORNICE M-1311

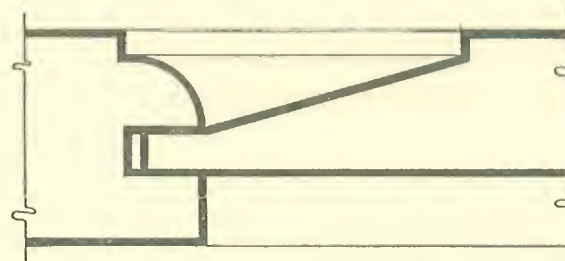

FULL SIZE M-1342



FULL SIZE M-1341


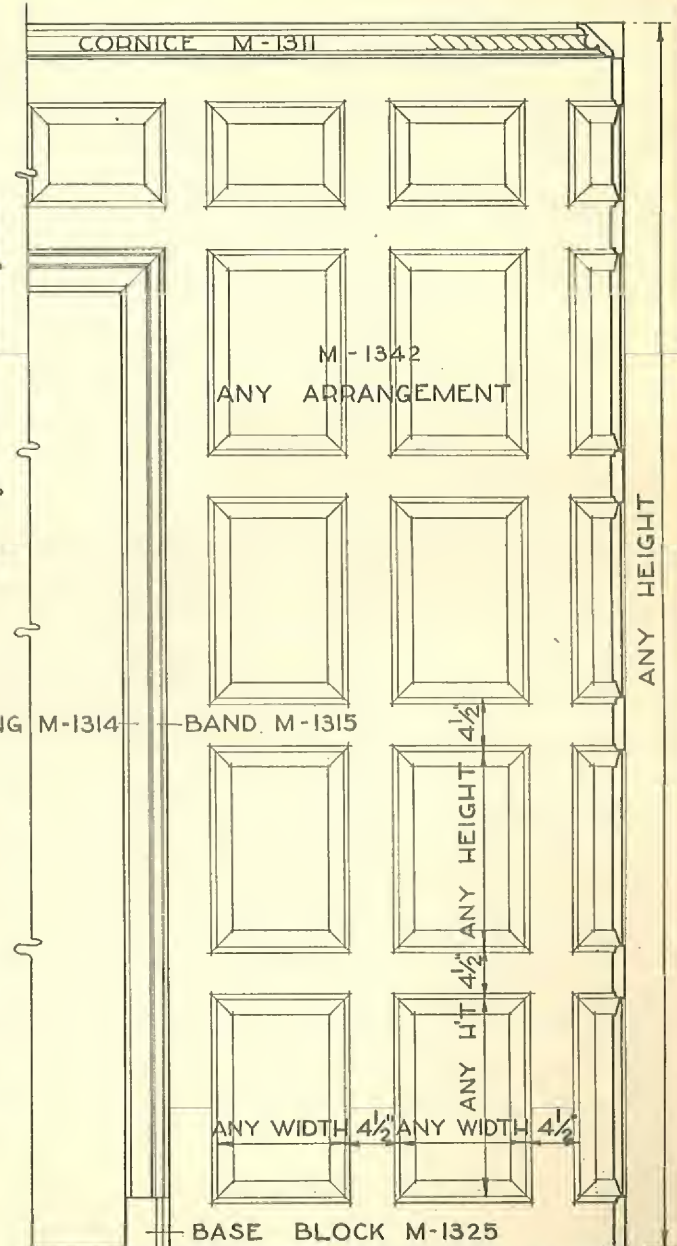


WALL PANELLING M-1342
SCALE $\frac{3}{4}" = 1'-0"$


FULL SIZE PROFILE
OF TRIM

DETAIL OF
CABINET HEAD
SCALE 3"=1'-0"

FULL SIZE
SECTION OF
DRAWER

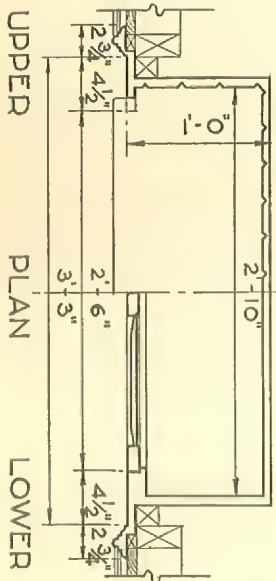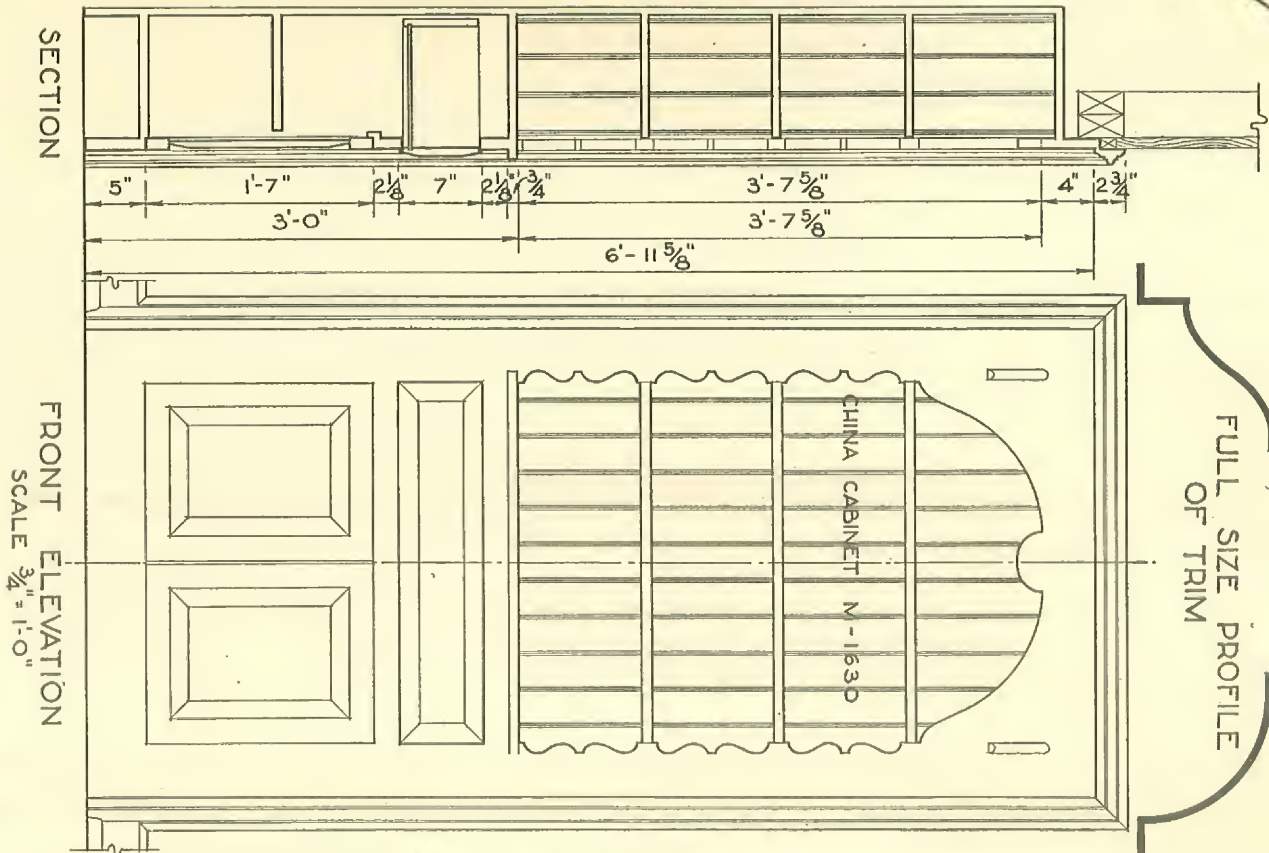

ELEVATION
SCALE 1/4"=1'-0"

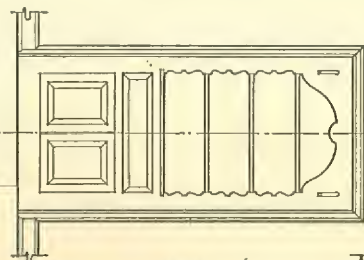

FULL SIZE PROFILE PLAN
THRU
PART OF A PILASTER

